


SIERRA SUMMIT

TWIN PANEL BED

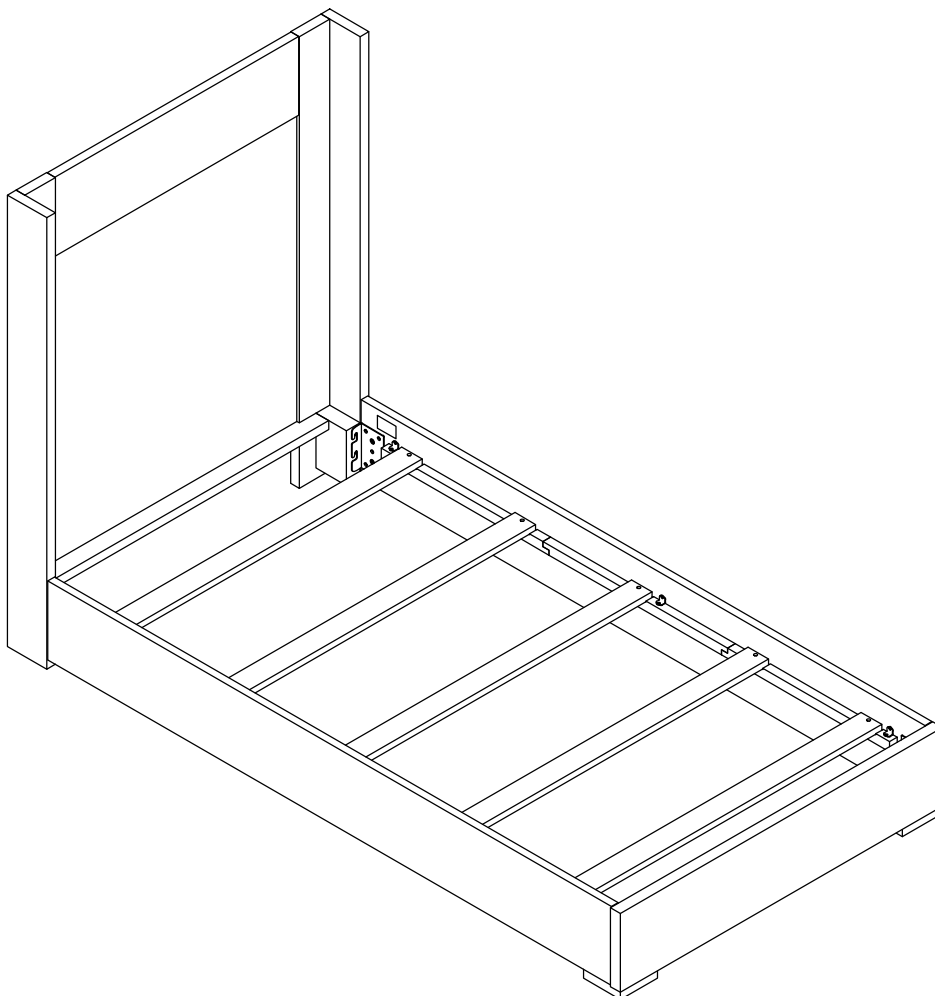

BED PACKAGE No.	SKU#	STYLE	COLOR	ITEM DESCRIPTION
3405940P	34659409	594-7	LINEN	TWIN PANEL HEADBOARD
	34759401	594-8	LINEN	TWIN PANEL FOOTBOARD W/ 5 SLATS
	35059408	594-SR	LINEN	TWIN/FULL SIDE RAILS (2PCS)

 
BED PACKAGE No.	SKU#	STYLE	COLOR	ITEM DESCRIPTION
3405941P	34659411	694-7	BROWN OAK	TWIN PANEL HEADBOARD
	34759413	694-8	BROWN OAK	TWIN PANEL FOOTBOARD W/ 5 SLATS
	35059410	694-SR	BROWN OAK	TWIN/FULL SIDE RAILS (2PCS)

 
DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST.

 
This product is manufactured by (GLOB) for **ROOMS TO GO® | KIDS**

 
SIERRA SUMMIT

PART LIST & HARDWARE LIST

HEADBOARD PART LIST			
	ITEM DESCRIPTION	IMAGE	QTY
A	HEADBOARD		1 PC

FOOTBOARD PART LIST			
	ITEM DESCRIPTION	IMAGE	QTY
B	FOOTBOARD		1 PC
C	SLAT		5 PCS

SIDE RAIL PART LIST			
	ITEM DESCRIPTION	IMAGE	QTY
D	SIDE RAIL		2 PCS


FOOTBOARD W/5SLATS HARDWARE LIST			
	ITEM DESCRIPTION	IMAGE	QTY
1	ALLEN KEY 4mm		1 PC
2	SCREW M4 x 1"		10 PCS
3	PHILIPS SCREWDRIVER (Not provided)		1 PC

HEADBOARD PRE-ASSEMBLED HARDWARE LIST			
	ITEM DESCRIPTION	IMAGE	QTY
4	ALLEN BOLT 5/16" x 18 x 1"		4 PCS
5	SPRING WASHER 5/16"		4 PCS
6	FLAT WASHER 5/16"		4 PCS

FOOTBOARD PRE-ASSEMBLED HARDWARE LIST			
	ITEM DESCRIPTION	IMAGE	QTY
4	ALLEN BOLT 5/16" x 18 x 1"		4 PCS
5	SPRING WASHER 5/16"		4 PCS
6	FLAT WASHER 5/16"		4 PCS

HARDWARE PACK LOCATION

SKU #	STYLE	COLOR	ITEM DESCRIPTION
34759401	594-8	LINEN	TWIN PANEL FOOTBOARD W/ 5 SLATS
34759413	694-8	BROWN OAK	TWIN PANEL FOOTBOARD W/ 5 SLATS

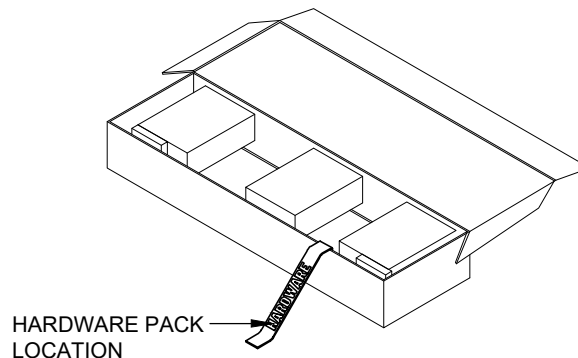


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST.


This product is manufactured by (GLOB) for **ROOMS TO GO® | KIDS**

Assembly Instructions:

- STEP 1** Attach Headboard(A), Footboard(B) to the Side Rails(D): Loosen pre-assembled bolts from the Headboard and Footboard to secure. Tighten bolts using Allen Key (1) provided.

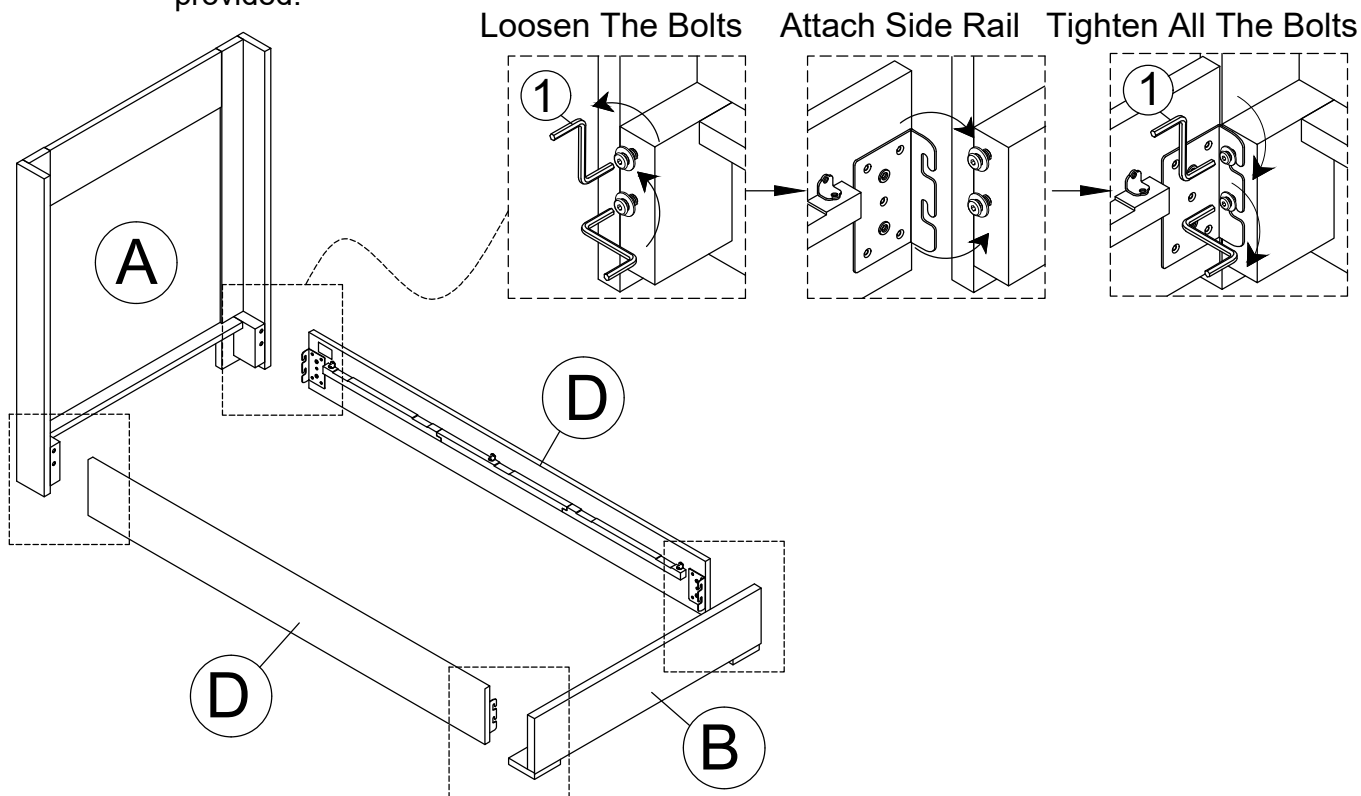

- STEP 2** Attach Slats (C) to Side Rail (D) and Tighten the screws (2) to the Side Rail (D) with a Philips Screwdriver (3)(Not provided) by screwing the screws into place.

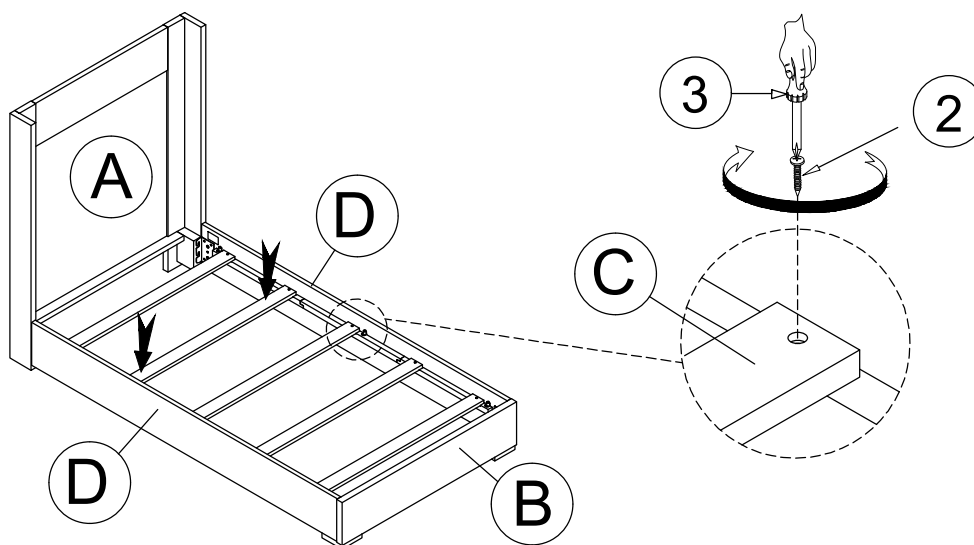

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST.


This product is manufactured by (GLOB) for **ROOMS TO GO® | KIDS**



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Read all instructions before assembling bed and keep these instructions for future reference.

Assembly Instructions:

- STEP 3** A mattress foundation is required for proper assembly with mattress. Place the mattress foundation (not provided) on top of the slats

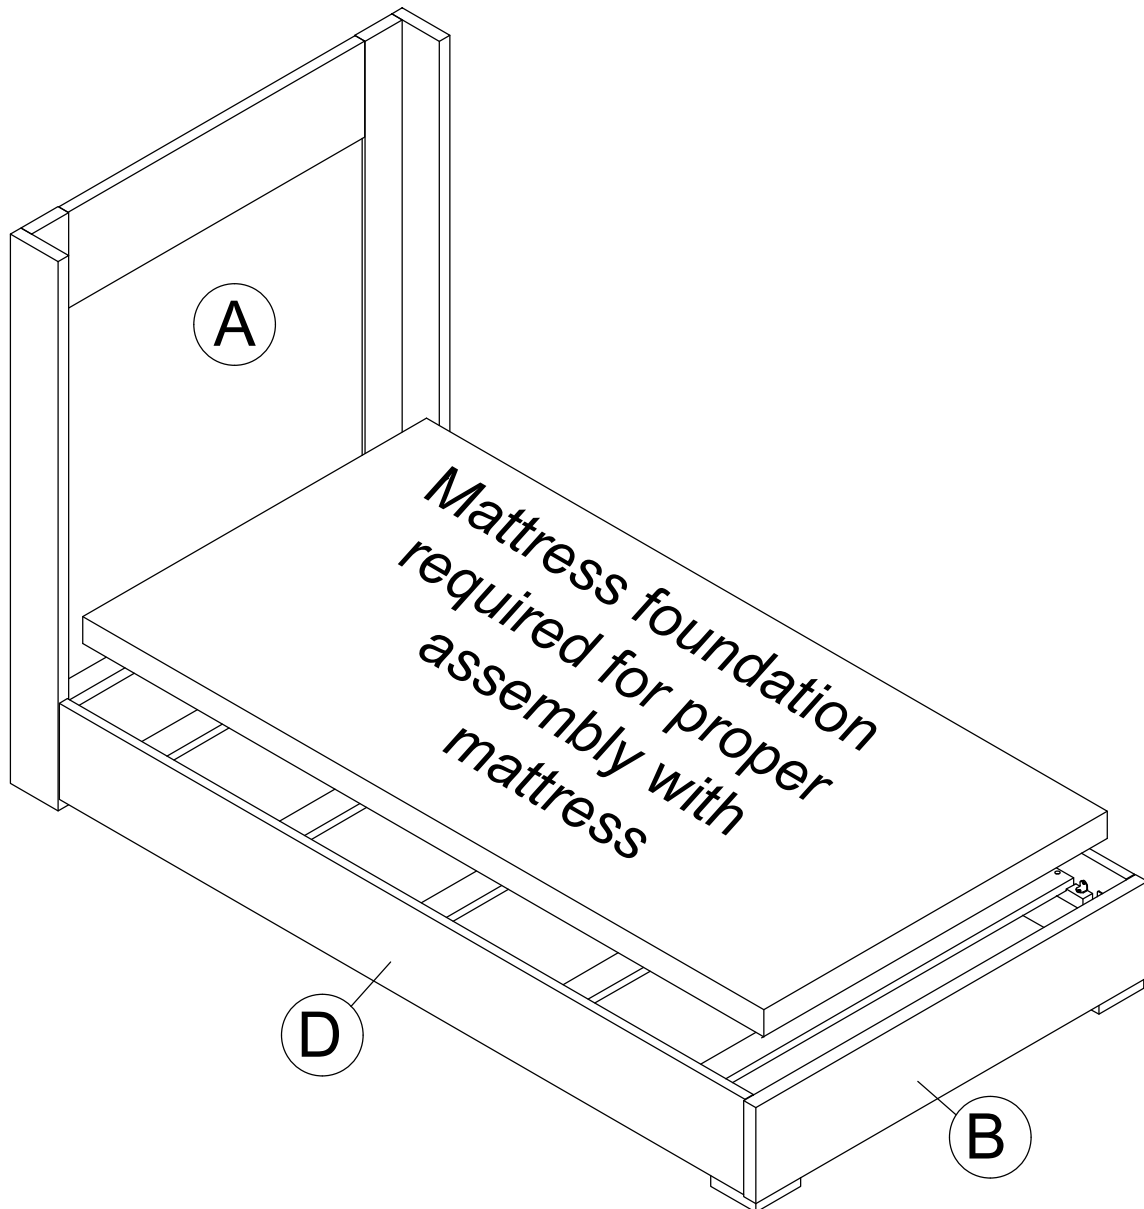

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST.

This product is manufactured by (GLOB) for **ROOMS TO GO® | KIDS**

WOODEN FURNITURE CARE

The beauty of furniture care is that it helps to protect your investment. Fine furniture is an important purchase. Proper care will help maintain your furniture's finish and ensure that it looks great year after year.

Caring for Furniture

Caring for furniture is easy. Following a few simple guidelines will help extend the life of your furniture.

- Always dust with a cloth moistened with polish. Polish cushions the cloth, eliminating the scratching that occurs with dry dusting. Dust will scratch furniture if not removed quickly. Use a soft clean cloth that won't scratch the surface. Avoid coarse or scratchy materials or fabrics.
- Avoid using soap and water on furniture. Water can penetrate the finish and raise the grain on wood. Causing damage.

The Enemies of Furniture

Many common problems in furniture care are caused by the elements. If you are aware of these troublemakers, the resulting damage can easily be avoided.

- Sunlight's ultraviolet rays can damage wood finishes. Arrange furniture out of direct sunlight; use sun screening drapes during intense sunlight hours, rotate furniture in place and room arrangement.
- Liquid spills will damage furniture if not removed promptly. Use coasters under beverage glasses and saucers under cups and flowerpots. If a spill occurs, immediately blot it gently without rubbing the surface.
- Heat creates a chemical change in the furniture finish, which can result in a white spot. Use protective mats under hot dishes, utensils or cooking appliances.
- Cyclic changes in temperature can damage furniture. Placing furniture near to central heating radiators and air ducts should be avoided because this causes extreme localized drying of the wood.

Tips for Better Dusting

- Be sure to use the same type of polish consistently. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchange.
- Always use a fine furniture polish when dusting. Never dry dust, as it could cause microscopic scratches on your furniture's surface. Remember to change dusting cloths frequently since a dirty cloth may scratch your furniture's surface.
- Spray your furniture surface evenly, but not too generously. Wipe in a circular motion with a soft clean cloth to clean and loosen old polish.
- Then buff until completely dry for a beautiful shine and a smudge free finish. For wood trim spray polish on the cloth first, then dust.

There is a desiccant pack attached. Please remove it before using.