
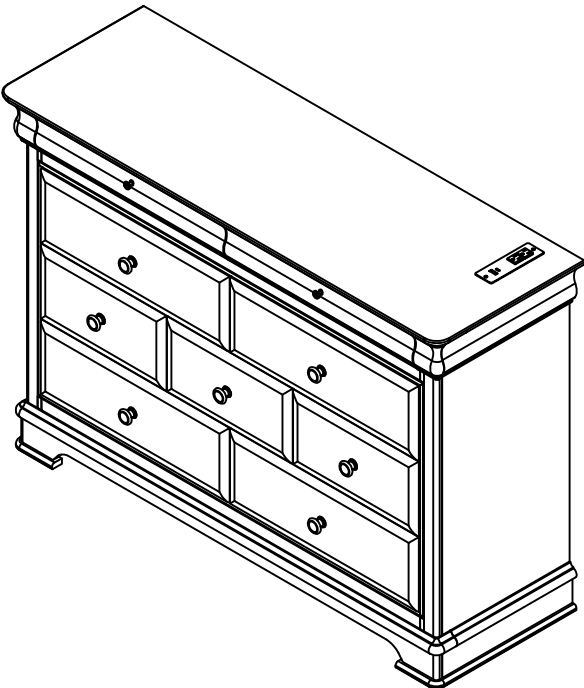


ASHTON AVENUE

DRESSER WITH POWER STRIP

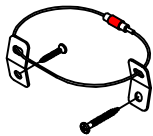

RTG SKU	STYLE #	FINISH	ITEM DESCRIPTION
34134522	3452 - 10	COOKIES & CREAM	DRESSER WITH POWER STRIP
34134534	3453 - 10	CHOCOLATE	DRESSER WITH POWER STRIP

CODE	PART LIST		QTY	CODE	HARDWARE LIST		QTY
1		Dresser With Power Strip	1 Pc	A	Furniture tipping restraint (Screw driver is not included)		1 Set


This product is manufactured by PTIN for **ROOMS TO GO** | **KIDS™**

DO NOT USE SUBTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below. Read all instructions before assembling and keep these instructions for future reference.

HARDWARE PACK LOCATION

RTG SKU	STYLE #	ITEM DESCRIPTION
34134522	3452 - 10	Dresser With Power Strip
34134534	3453 - 10	Dresser With Power Strip

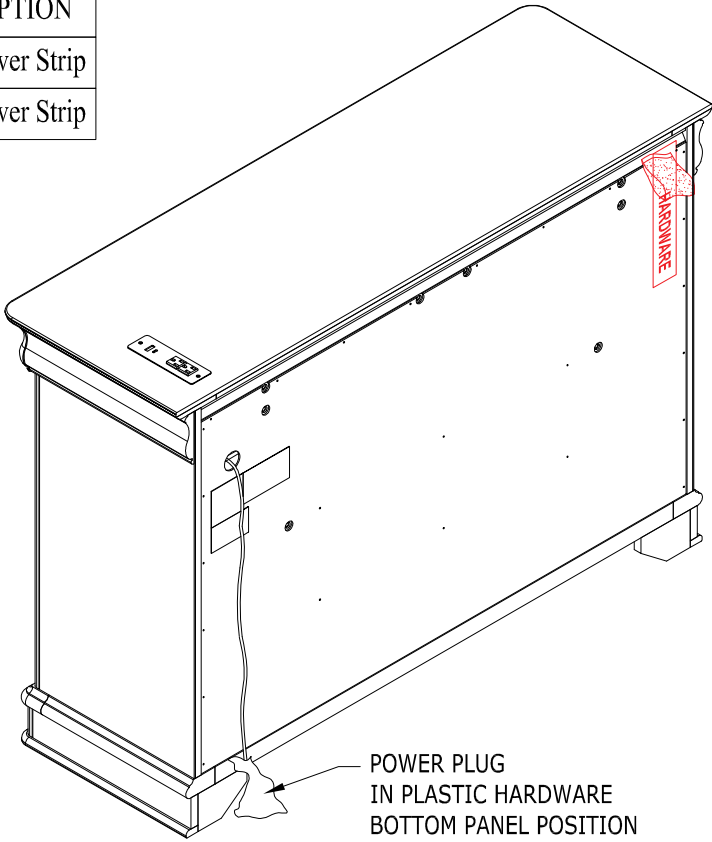


This product is manufactured by PTIN for **ROOMS TO GO** | **KIDS**



DO NOT USE SUBTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below. Read all instructions before assembling and keep these instructions for future reference.

ASSEMBLY INSTRUCTION

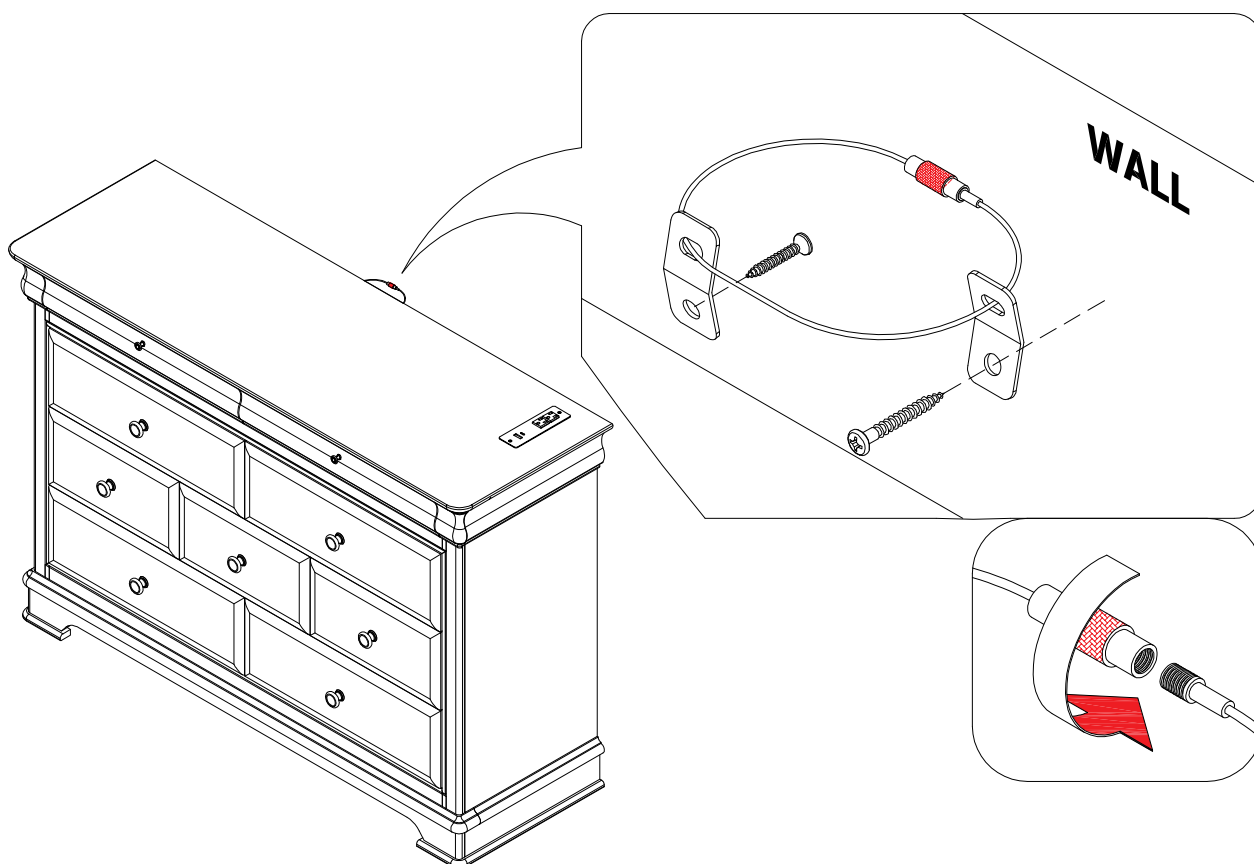

How to adjustable leveler

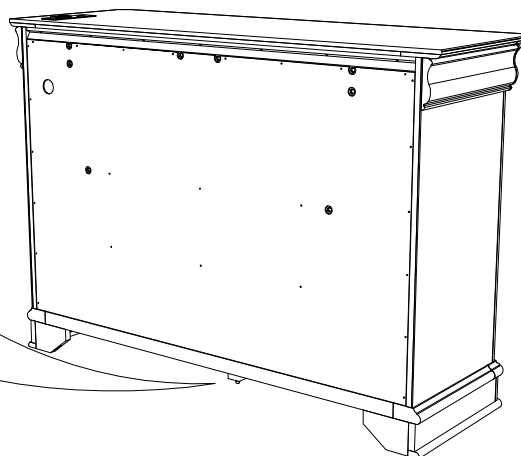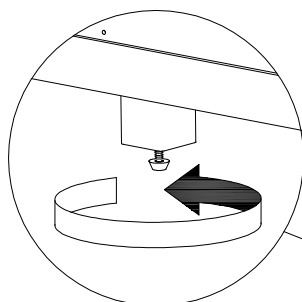

ASSEMBLY COMPLETE

This product is manufactured by PTIN for **ROOMS TO GO** | **KIDS**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

ROOMS TO GO

KIDS

DIAGRAM ELECTRICAL SYSTEM



INTEGRA 3452-10 : DRESSER WITH POWER STRIP # SKU 34134522
INTEGRA 3453-10 : DRESSER WITH POWER STRIP # SKU 34134534



125V/12A/1500W

BAYU

POWER SUPPLY NUMBER : 308 MODEL NO. BY-213-C021-C

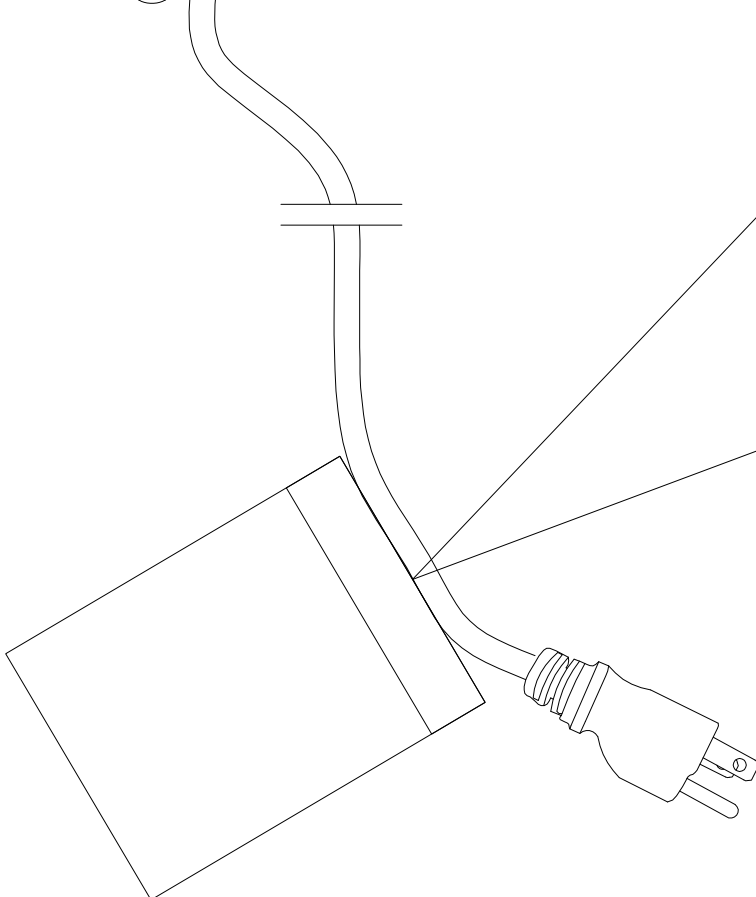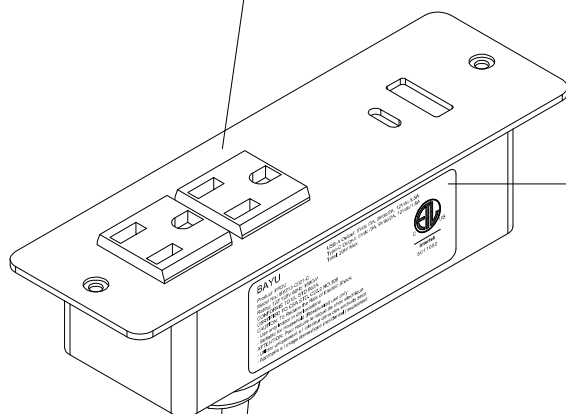

WARNING
El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

125V/12A/1500W
BAYU
NUMERO DEALIMENTACION : 308 MODEL NO. : BY213-C021-C

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO - Para reducir el riesgo de descarga eléctrica :

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA : para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas :

1. Desenchufe del tomacorriente antes de colocar o quitar partes.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilice cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete.
9. Enchufelo directamente a una toma de corriente compatible.
10. No modifique el enchufe ni utilice adaptadores.

WARNING
Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

125V/12A/1500W
BAYU
POWER SUPPLY NUMBER : 308 MODEL NO. : BY213-C021-C

Read all instructions before using this furnishing.

DANGER - To reduce the risk of electric shock :

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons :

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
4. To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children. This is not a toy.
9. Plug directly into a compatible electrical socket.
10. Do not modify the plug or use any adapters.