
EVANGELINE FULL UPHOLSTERED BED

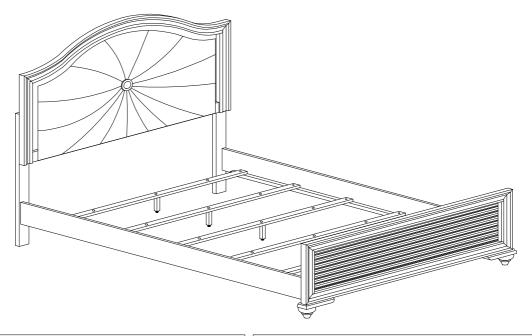

3419761P FULL UPHOLSTERED BED-SILVER 34897617,34997619,35097612

| RTG SKU # | STYLE | ITEM DESCRIPTION |
|-----------|----------|----------------------------------|
| 34897617 | 9759-SFH | FULL HEADBOARD WITH RGB LIGHTING |
| 34997619 | 9759-SF | FULL FOOTBOARD WITH 5 SLATS |
| 35097612 | 9759-SSR | TWIN/FULL WOOD SIDE RAILS |

HEADBOARD PART LIST ITEM DESCRIPTION IMAGE QTY A FULL HEADBOARD B HEADBOARD LEG (L/R) 2 PCS

3419760P FULL UPHOLSTERED BED-WHITE 38497605,34997607,35097600

| RTG SKU # | STYLE | ITEM DESCRIPTION |
|-----------|----------|----------------------------------|
| 34897605 | 9759-WFH | FULL HEADBOARD WITH RGB LIGHTING |
| 34997607 | 9759-WF | FULL FOOTBOARD WITH 5 SLATS |
| 35097600 | 9759-WSR | TWIN/FULL WOOD SIDE RAILS |

| | FOOTBOARD PART LIST | | |
|---|---------------------|-------|-------|
| | ITEM DESCRIPTION | IMAGE | QTY |
| C | FULL FOOTBOARD | | 1 PC |
| D | BUN FEET | | 2 PCS |
| E | SLATS | | 5 PCS |
| F | SLATS SUPPORT | | 5 PCS |

| | SIDE RAILS PART LIST | | | |
|---|----------------------|--|-------|--|
| G | SIDE RAILS | | 2 PCS | |

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST


This product is manufactured by (CHUA) for ROOMS TO GO | KIDS

Version #1 - 2024/12/04 1 of 5

EVANGELINE FULL UPHOLSTERED BED

| | HEADBOARD HARDWARE LIST | | | |
|---|-------------------------|-------|-------|--|
| | ITEM DESCRIPTION | IMAGE | QTY | |
| 1 | ALLEN WRENCH | | 1 PC | |
| | JCBC M6 x 35mm | | 6 PCS | |
| 2 | M6 SPRING WASHER | | 6 PCS | |
| | M6 FLAT WASHER | | 6 PCS | |
| 3 | AC / DC ADAPTER | 2 | 1 PC | |

| FOOTBOARD HARDWARE LIST | | | |
|-------------------------|---|-------------------|--------|
| | ITEM DESCRIPTION | IMAGE | QTY |
| 4 | CSK SCREW M3.5 x 32mm | D.m.m. | 10 PCS |
| 5 | PHILIPS HEADSCREWDRIVER (NOT PROVIDED) | | 1 PC |
| 6 | ALLEN WRENCH | | 1 PC |
| | JCBC M6 x 35mm | | 5 PC |
| 7 | M6 SPRING WASHER | | 5 PC |
| | M6 FLAT WASHER | | 5 PC |
| 8 | ADJUSTABLE LEVELLER | | 5 PC |

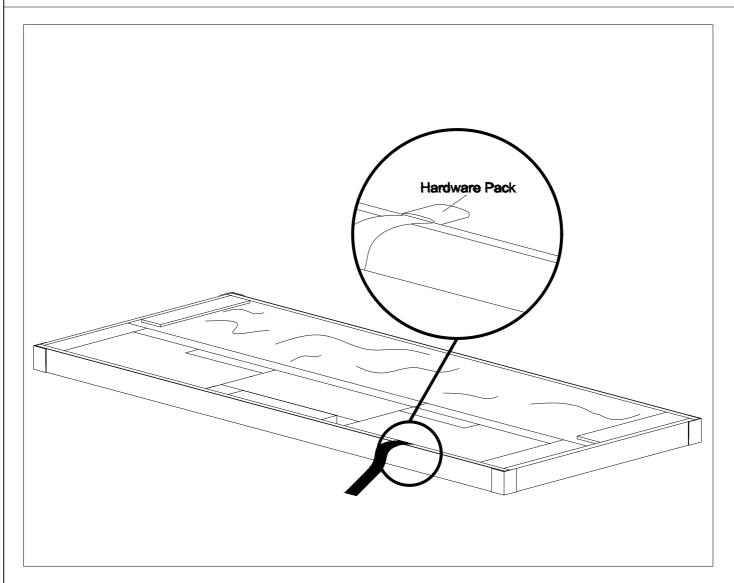


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (CHUA) for ROOMS TO GO | KIDS


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.


Read all instructions before assembling bed and keep these instructions for future reference.

Assembly Instructions:

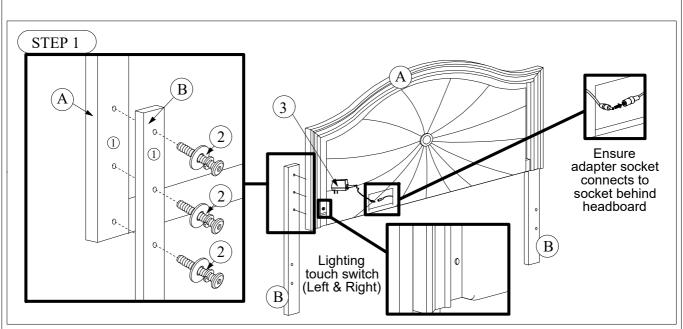

Attach the legs (B) to the Headboard (A) follow by Notification Label of 1 to 1 and 2 to 2. Secure with JCBC Bolts (2). Tighten bolts using Allen Wrench (1) provided.

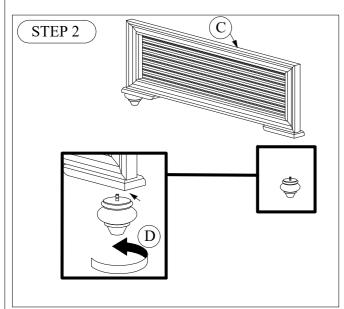

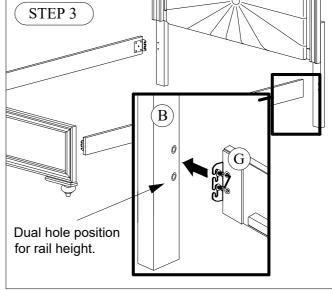

Secure the Bun Feet (D) to the Footboard (C) by screwing into place.


Loose the bolt at the Headboard (B) & Footboard (C) ,align and hook Side Rails (G) to the bolts of the Headboard and Footboard as shown in the diagram. Tighten all bolt & make sure it is firmly secured.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

Read all instructions before assembling bed and keep these instructions for future reference.

Assembly Instructions:

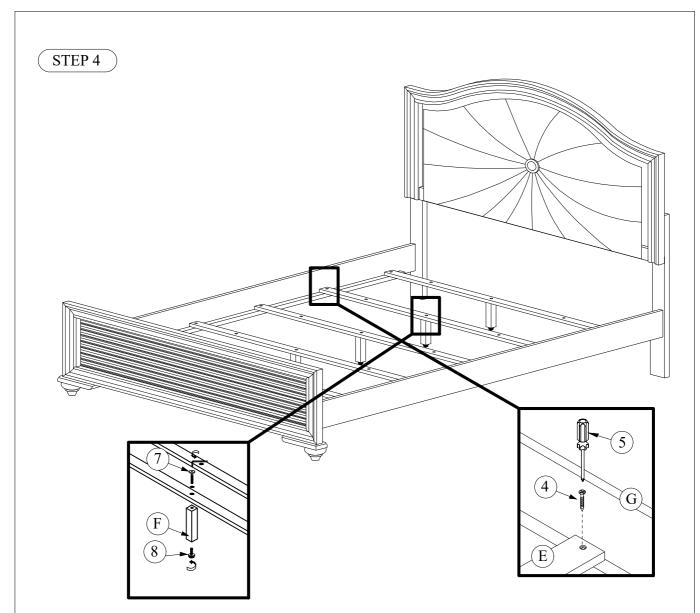

Attach Slats (E) to Side Rails (G) using 32mm Screws (4). Tighten screws with Philips Head Screwdriver (5) (not included). And Attach the Slat Support (F) to Slats (E) using JCBC Bolts (7). Attach Adjustable Leveller (8) and adjust it to lever the bed with floor.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST


This product is manufactured by (CHUA) for ROOMS TO GO | KIDS

Version #1 - 2024/12/04 4 of 5

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

Read all instructions before assembling bed and keep these instructions for future reference.

Assembly Instructions:

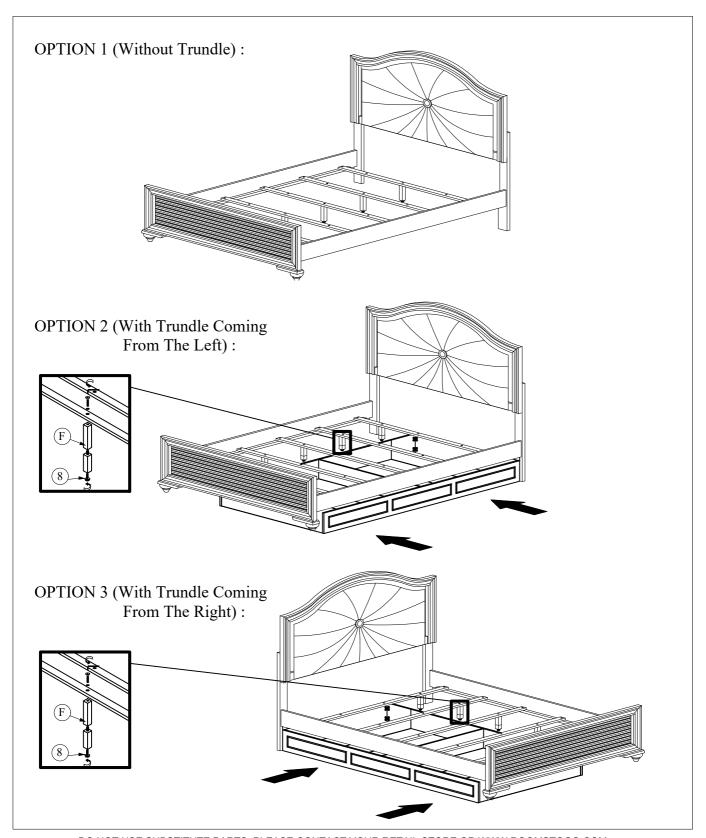

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (CHUA) for ROOMS TO GO | KIDS

Version #1 - 2024/12/04 5 of 5

Wooden Furniture Care

Protect Your Investment

The beauty of furnishing care is that it helps to protect your investment. Fine furniture is an important purchase. Proper care will help maintain your furniture's finish and ensure that it looks great year after year.

Caring For Furniture

Caring for furniture is easy. Following a few simple guidelines will help extend the life of your furniture.

- *Always dust with a polish moistened cloth. Polish cushions the cloth, eliminating the scratching that occurs with dry dusting. Dust will scratch the furniture surface if not removed quickly. Use a soft, clean cloth that won't scratch the surface. Avoid coarse or scratchy materials or fabrics
- *Avoid using soap and water on furniture. Water can penetrate the finish and raise the grain on wood, causing damage.

The Enemies of Furniture

Many common problems in furniture care are caused by the elements. If you are aware of these troublemakers, the resulting damage can easily be avoided.

- *Sunlight's ultraviolet rays can damage wood finishes. Arrange furniture out of direct sunlight, use sun screening drapes during intense sunlight hour, rotate furniture in place and in room arrangements.
- *Liquid spills will damage furniture if not removed promptly. Use coasters under beverage glasses saucers under cups and flowerpots. If a spill occurs, immediately blot it gently without rubbing the surface.
- *Heat creates a chemical change in the furniture finish. Which can result in a white spot. Use protective pads under hot dishes, utensils or cooking appliances.
- *Cyclic changes in temparature can damage furniture. I-lot blasts of air such as those found from central heating should be avoided because they cause extreme localized drying of the wood.

Tips for Better Dusting

- *Be sure in use the sauce type of polish consistently. Your furniture will appear cloudy or streaky if oil based and wax-based polished are interchanged.
- *Always use a fine furniture polish when dusting. Never dry dust, as it could cause microscopic scratches on your furniture surface. Remember to change dusting clothes frequently since a dirty cloth may scratch your furniture's surface.
- *Spray your furniture surface evenly, but not too generously. Wipe in a circular motion with a soft, clean cloth to clean and loosen the old polish.
- *Then, buff until completely dry for a beautiful shine and a smudge-resistant finish. For wood trim, spray polish on the cloth first, and then dust.



Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

[ELECTRICAL RATING 12VDC / 1.0A / 12W PLUG] [DONGGUAN BAI YOU ELECTRONIC CO. LTD.] [MODEL BAYU - 1201000]

Read all instructions before using this furnishing.

DANGER - To reduce the risk of electric shock:

1.Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1. Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- 5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- 6. Do not strain or stretch electrical cord.
- 7. Do not use extension cords or power strips.
- 8. Keep out of reach of children. This is not a toy.
- 9. Plug direcly into a compatible electrical socket.
- 10. Do not modify the plug or use any adapters.



El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

[CLASIFICACION ELECTTRICA 12VDC / 1.0A / 12W PLUG] [DONGGUAN BAI YOU ELECTRONIC CO. LTD.] [MODEL BAYU - 1201000]

$Leer\ todas\ las\ instrucciones\ antes\ de\ usar\ este\ mobiliario.$

PELIGRO - Para reducir el riesgo de descarga electrica:


 Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.


ADVERTENCIA: para reducir el riesgo de quemaderas, incendios, descargas eléctricas o lesiones a personas:

- 1. Desenchufe del tomacorriente antes de colocar o quitar partes.
- 2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- 6. No fuerce ni estire el cable eléctrico.
- 7. No utilizar cables de extensión o tomas de corriente.
- 8. Mantener fuera del alcance de los niños. Esto no es un juguete
- 9. Enchúfelo directamente a una toma de corriente compatible.
- 10. No modifique el enchufe ni utilice adaptadores.

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Read all instructions before assembling bed and keep these instructions for future reference.

Instructions for LED Lighting Functionality

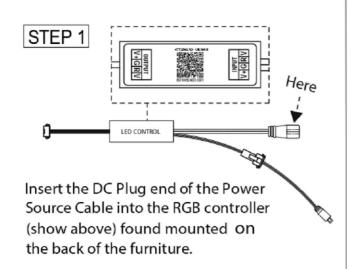

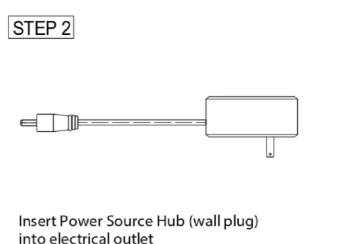

STEP 3

Use the LED Remote Control to operate lighting functions.

To operate Remote Control,

* **FIRST**, pull plastic tab from battery compartment to activate remote (see below at base of remote).


**SECOND, aim the infrared beam at the receiver "eye" on [*TBU*].

Button operations shown below on the Remote Control provide a selection of functions that can be chosen at your preference.

Scan QR code to download program to control LED bed lights with your bluetooth enabled device

LED Remote Control


** Infrared beam aim at receiver "eye" on [*TBU*].

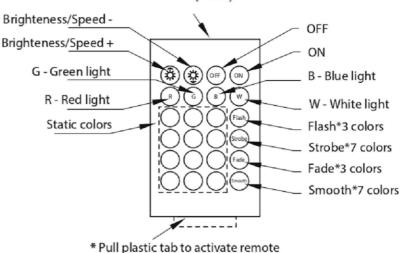

HOW TO REPLACE NEW A COIN BATTERY


STEP 4


The battery is supplied with the remote control. For replacement battery, please follow the sequence below to replace the battery.

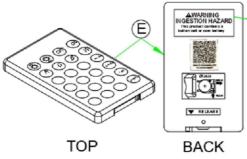



▲WARNING INGESTION HAZARD

  This product contains a button cell or coin battery

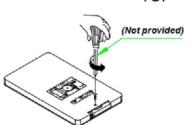

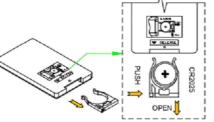








the button side into the battery.

 5. Screw the screw back into place.



1. Using a Phillips head screwdriver

to uninstall the screw.

4. Press the battery bracket into the remote control, making sure it snaps

A WARNING

- · INGESTION HAZARD: This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- · A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH of CHILDREN
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



Battery type: CR2025, 3V

Notice

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: CR2025, 3V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Instructions for LED Lighting Functionality

STEP 1.



Insert the DC Plug end of the Power Source Cable into the RGB controller (show above) found mounted on the back of the furniture.

STEP 2.



Insert Power Source Hub (wall plug) into electrical outlet.

STEP3

Use the LED Remote Control to operate lighting functions.


To operate Remote Control,* FIRST pull plastic tab from battery compartment to activate remote (see below at base of remote).

**SECOND, aim the infrared beam at the receiver "eye" on the (TBU) .

Button operations shown below on the Remote Control provide a selection of functions that can be chosen at your preference.





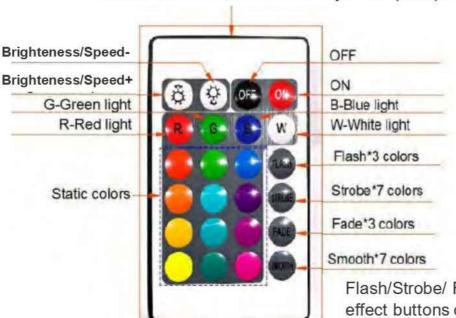



Scan QR code to download program to control LED bed lights with your Bluetooth enabled device.



LED lighting (Blue)

Flash/Strobe/ Fade/Smooth effect buttons operate

For Customer Service, call Vantage: 1-844-244-3810

*Pull plastic tab to activate remote