
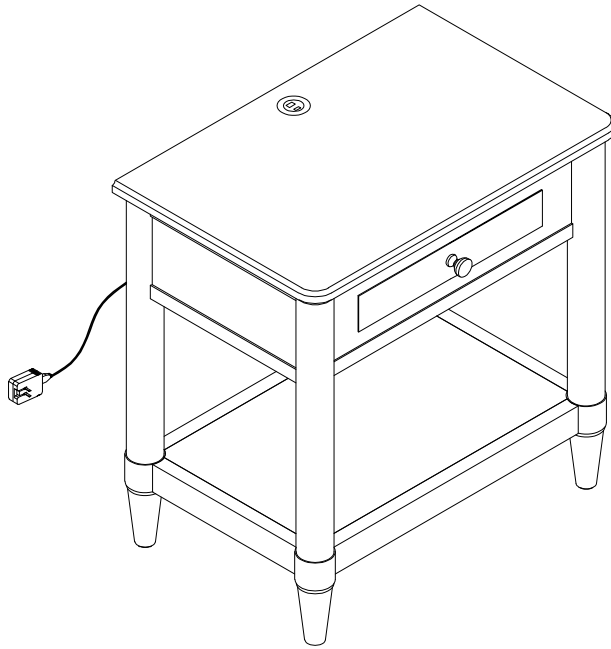



LINDBROOK


NIGHTSTAND

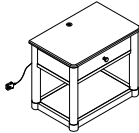

RTG SKU#	STYLE#	COLOR	ITEM DESCRIPTION	Q'TY
34203389	338Y-120	SAND	NIGHTSTAND	1PC

NIGHTSTAND - PART LIST			
NO.	ITEM DESCRIPTION	IMAGE	Q'TY
A	NIGHTSTAND		1PC
B	LEGS		4PCS

 NIGHTSTAND - HARDWARE LIST			
NO.	ITEM DESCRIPTION	IMAGE	Q'TY
1	Furniture Tipping Restraint (Customer to Assemble)		1 SET

 NO.	NEEDED TOOL	
2	Phillips Head Screwdriver (Not Provided)	

DO NOT USE SUBSTITUTE PARTS.

PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by BFGP for **ROOMS TO GO® | KIDS**

VERSIONS 2 - May 8,2025

PAGE 1 OF 2


LINDBROOK

NIGHTSTAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Read all instructions before assembling and keep these instructions for future reference.


Assembly Instructions:

STEP 1

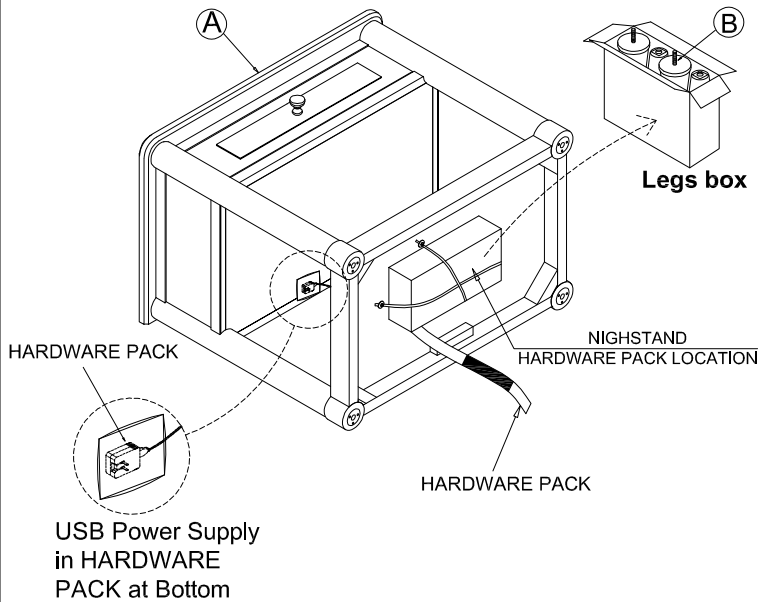


Legs are on the bottom shelf. Remove Legs (B) from inner box.

STEP 2

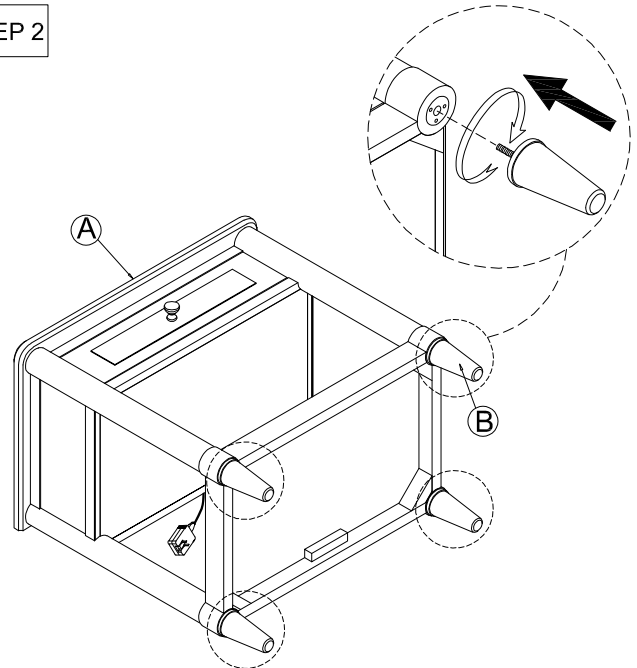

Assemble the Legs (B) to the Nightstand (A) as shown.


STEP 3

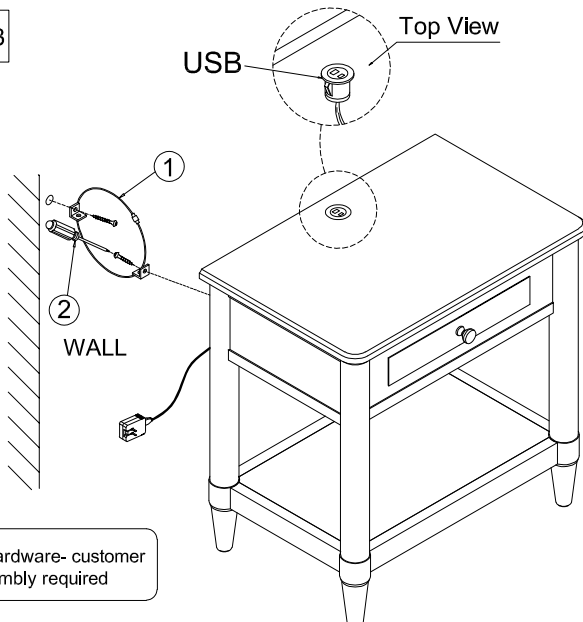

Move the Nightstand into final position and use tipping restraint attach to wall. Insert the screw by using the screwdriver (2).

COMPLETED

WALL

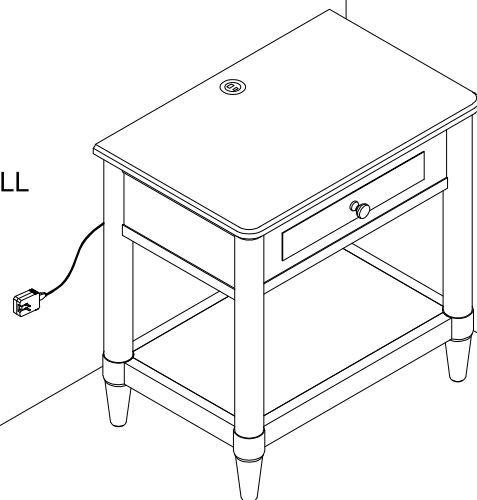

DO NOT USE SUBSTITUTE PARTS.

PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by BFGP for ROOMS TO GO® | KIDS

VERSIONS 2 - May 8,2025

PAGE 2 OF 2

Remark: Electrical warning label

ENGLISH VERSION

IMPORTANT SAFETY INSTRUCTIONS

**WARNING**

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

ELECTRICAL RATING
(Input:100~240V~,50/60 Hz, 0.5A Max, Output: 5Vdc, 3A,15W Max)
VANTAGE CITY GROUP LIMITED
VAN-050300PS-A

Read all instructions before using this furnishing.

DANGER-To reduce the risk of electric shock

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING- To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
4. To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children.This is not a toy.
9. Plug directly into a compatible electrical socket.
10. Do not modify the plug or use any adapters.

SPANISH VERSION

INSTRUCCIONES DE SEGURIDAD IMPORTANTES

**WARNING**

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

ELECTRICAL RATING
(Input:100~240V~,50/60 Hz, 0.5A Max, Output: 5Vdc, 3A,15W Max)
VANTAGE CITY GROUP LIMITED
VAN-050300PS-A

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO - Para reducir el riesgo de descarga elestrica:

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

1. Desenchufe del tomacorriente antes do colocar o quitar partes.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente
5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la baso, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilizar cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete.
9. Enchúfelo directamente a una toma de corriente compatible.
10. No modifique el enchufe ni utilice adaptadores.