
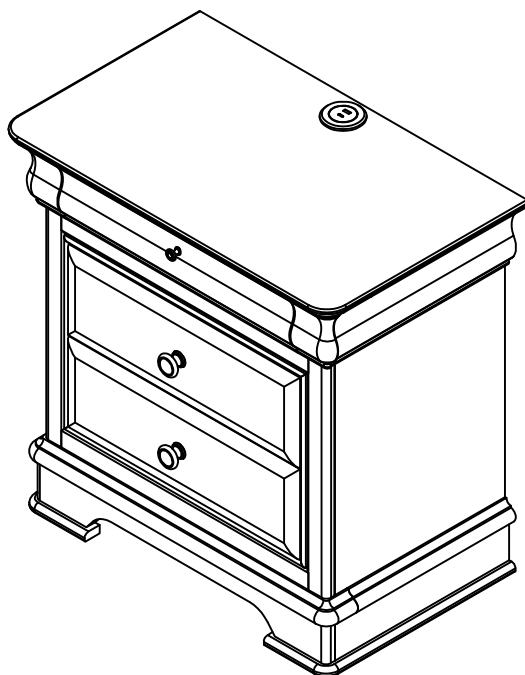


ASHTON AVENUE NIGHTSTAND WITH DUAL USB

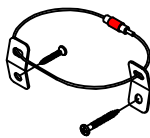

RTG SKU	STYLE #	FINISH	ITEM DESCRIPTION
34234524	3452 - 12	COOKIES & CREAM	NIGHTSTAND WITH DUAL USB
34234536	3453 - 12	CHOCOLATE	NIGHTSTAND WITH DUAL USB

CODE	PART LIST			QTY	CODE	HARDWARE LIST		QTY
1		Nightstand with Dual USB		1 Pc	A	Furniture tipping restraint (Screw driver is not included)		1 Set


This product is manufactured by PTIN for **ROOMS TO GO** | **KIDS™**

DO NOT USE SUBTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below. Read all instructions before assembling and keep these instructions for future reference.

HARDWARE PACK LOCATION

RTG SKU	STYLE #	ITEM DESCRIPTION
34234524	3452 - 12	Nightstand w-Dual USB
34234536	3453 - 12	Nightstand w-Dual USB

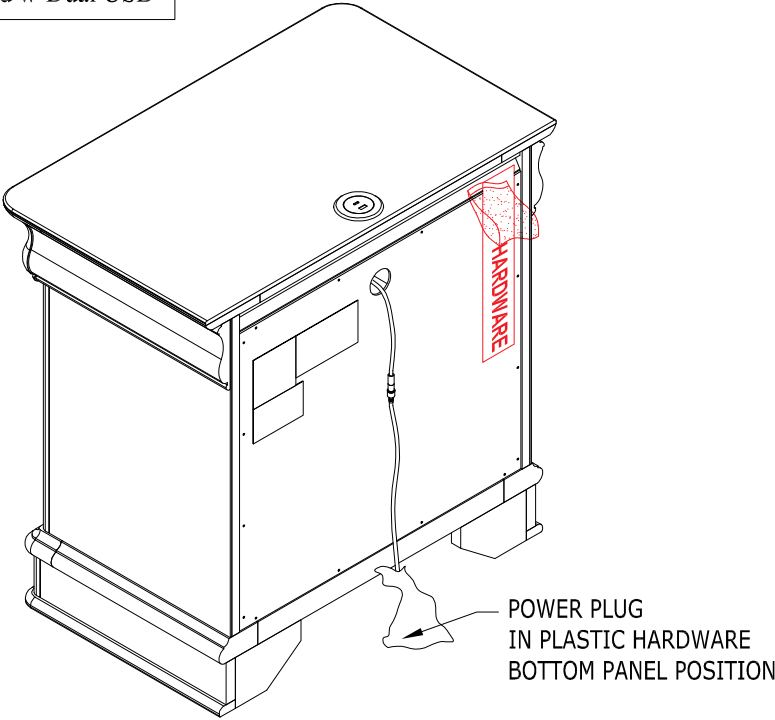


This product is manufactured by PTIN for **ROOMS TO GO** | **KIDS**

DO NOT USE SUBTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below. Read all instructions before assembling and keep these instructions for future reference.

ASSEMBLY INSTRUCTION

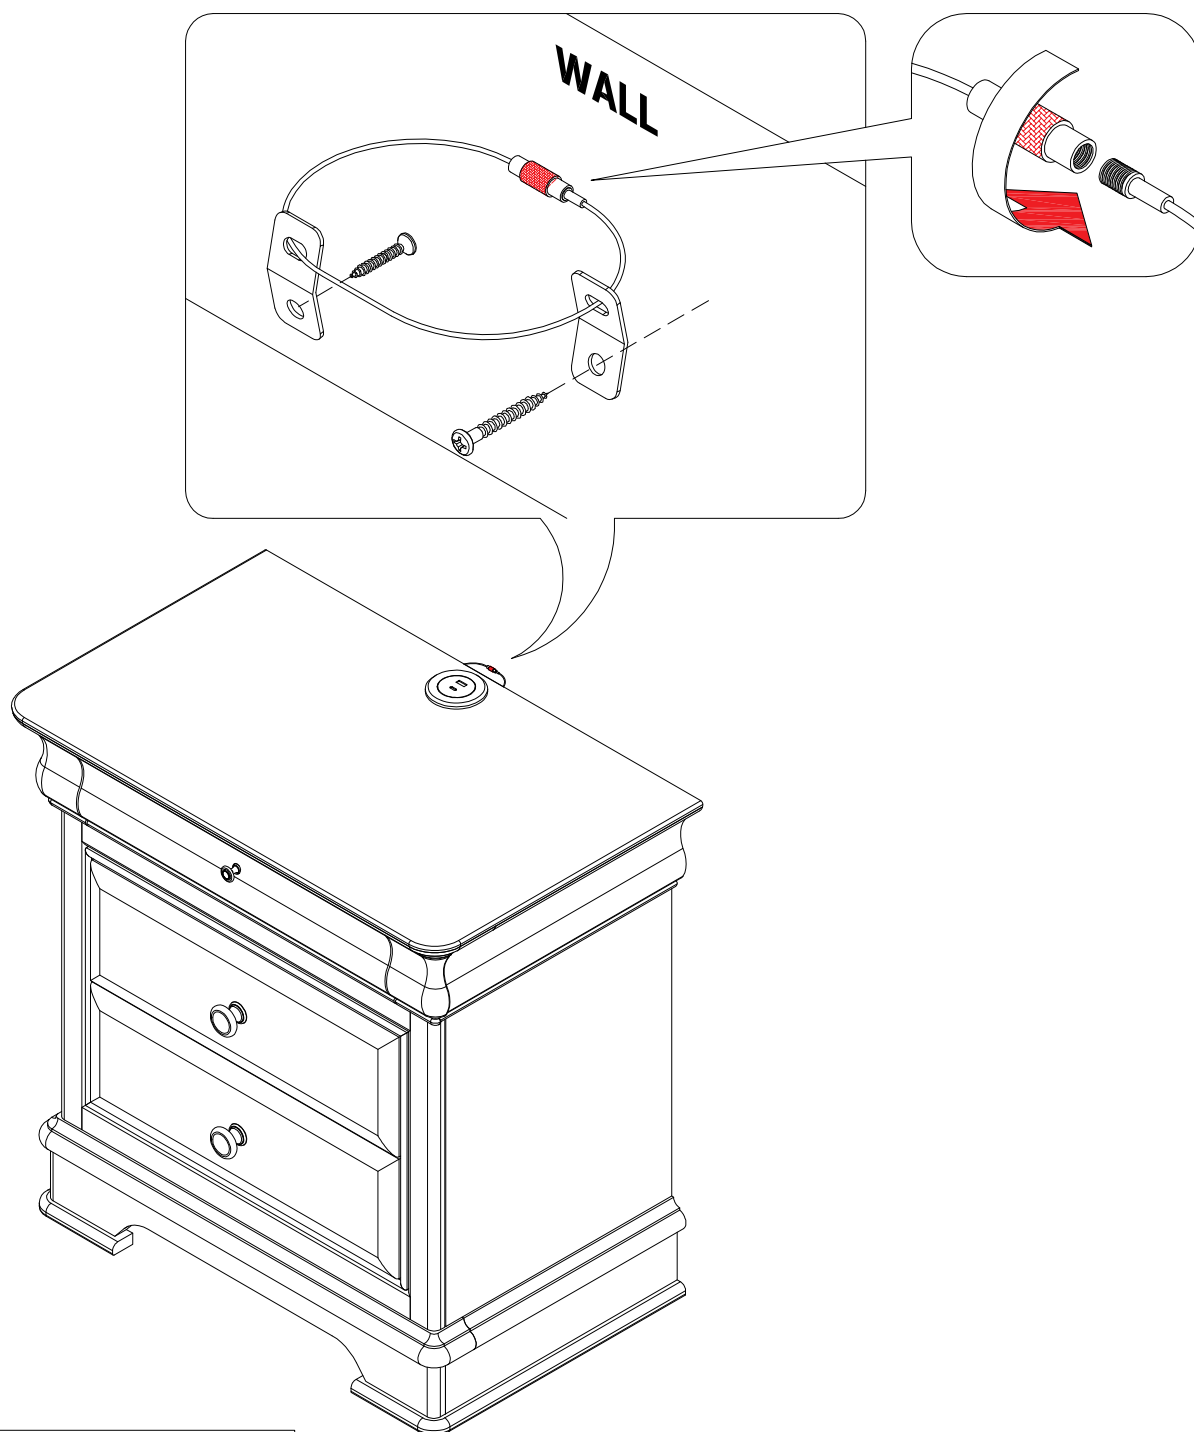

ASSEMBLY COMPLETE

This product is manufactured by PTIN for **ROOMS TO GO** | **KIDS**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST

ROOMS TO GO

KIDS™


DIAGRAM ELECTRICAL SYSTEM

INTEGRA 3452-12 : NIGHTSTAND WITH DUAL USB # SKU 34234524
INTEGRA 3453-12 : NIGHTSTAND WITH DUAL USB # SKU 34234536



12V/2A

MODEL NO. GFDA5-1202000C

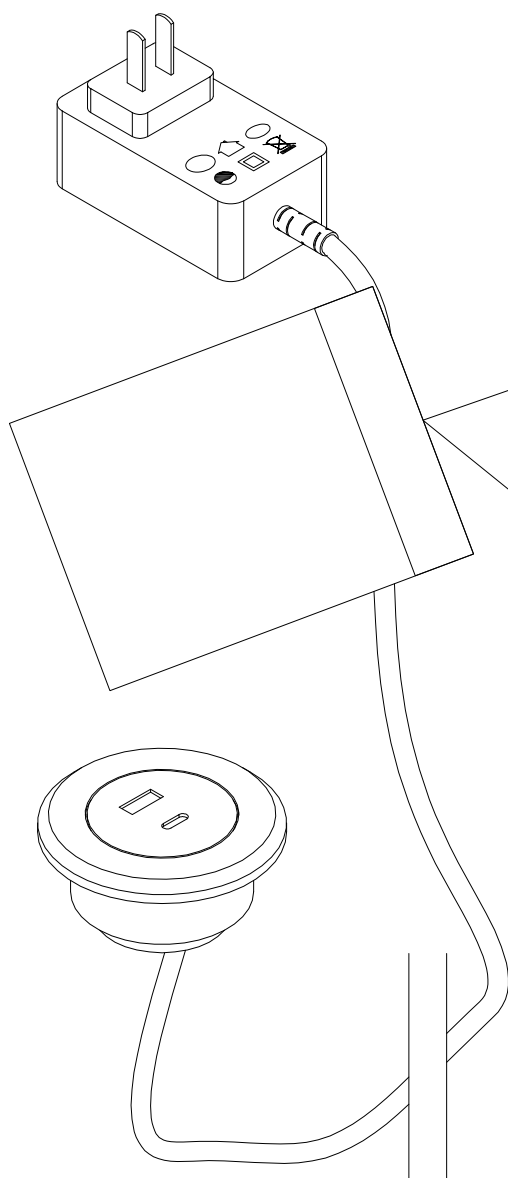

WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

12V/2A
MODEL NO.: GFDA5 1202000C

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO - Para reducir el riesgo de descarga eléctrica :

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA : para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas :

1. Desenchufe del tomacorriente antes de colocar o quitar partes.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilice cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete.
9. Enchufelo directamente a una toma de corriente compatible.
10. No modifique el enchufe ni utilice adaptadores.

WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

12V/2A
MODEL NO.: GFDA5 1202000C

Read all instructions before using this furnishing.

DANGER - To reduce the risk of electric shock :

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons :

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
4. To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children. This is not a toy.
9. Plug directly into a compatible electrical socket.
10. Do not modify the plug or use any adapters.