




SIERRA SUMMIT

DOOR CHEST

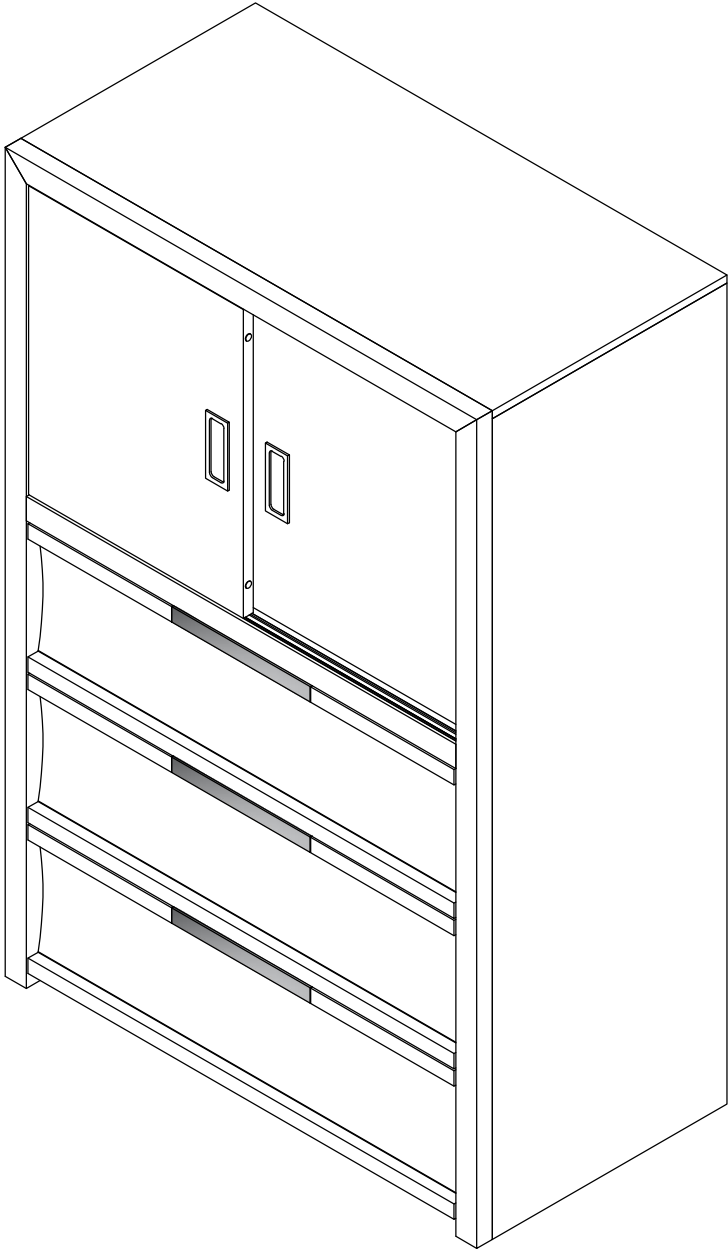



SKU #	STYLE	COLOR	ITEM DESCRIPTION
34359403	594-5	LINEN	DOOR CHEST
34359415	694-5	BROWN OAK	DOOR CHEST


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST.

This product is manufactured by (GLOB) for **ROOMS TO GO® | KIDS**

SIERRA SUMMIT

  
DOOR CHEST

DOOR CHEST PART LIST			
	ITEM DESCRIPTION	IMAGE	QTY
A	CHEST		1 PC
B	L/R SLIDING DOOR		2 PCS

 HARDWARE LIST			
	ITEM DESCRIPTION	IMAGE	QTY
1	TIPPING RESTRAINT (CUSTOMER TO ASSEMBLE)		1 SET
2	PHILIPS SCREWDRIVER (NOT PROVIDED)		1 PC

HARDWARE PACK LOCATION

SKU #	STYLE	COLOR	ITEM DESCRIPTION
34359403	594-5	LINEN	DOOR CHEST
34359415	694-5	BROWN OAK	DOOR CHEST

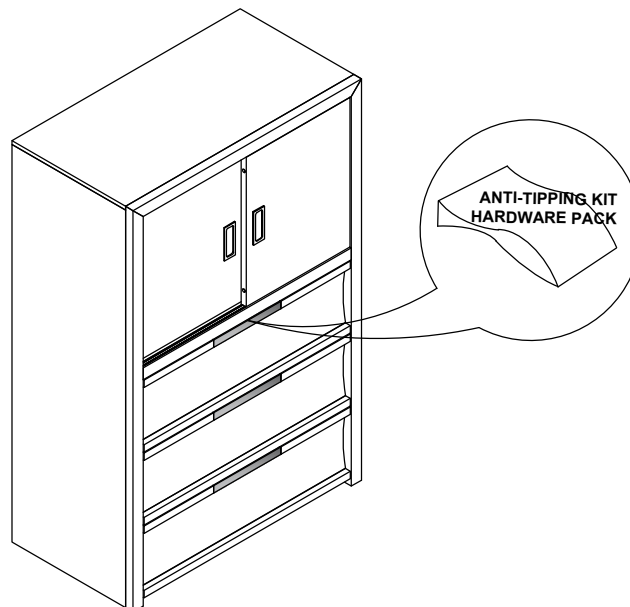

**NOTE: ANTI-TIPPING KIT HARDWARE PACK
IS LOCATED IN THE DRAWER**


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST.

This product is manufactured by (GLOB) for **ROOMS TO GO® | KIDS**

Assembly Instructions:

STEP 1 TO ASSEMBLE THE SLIDING DOOR INTO THE GENTLEMANS CHEST, PLEASE FOLLOW BELOW STEPS:


(1.1) : Press down the top latches of door. If the latches are at lower position already, please go to Step 1.2.

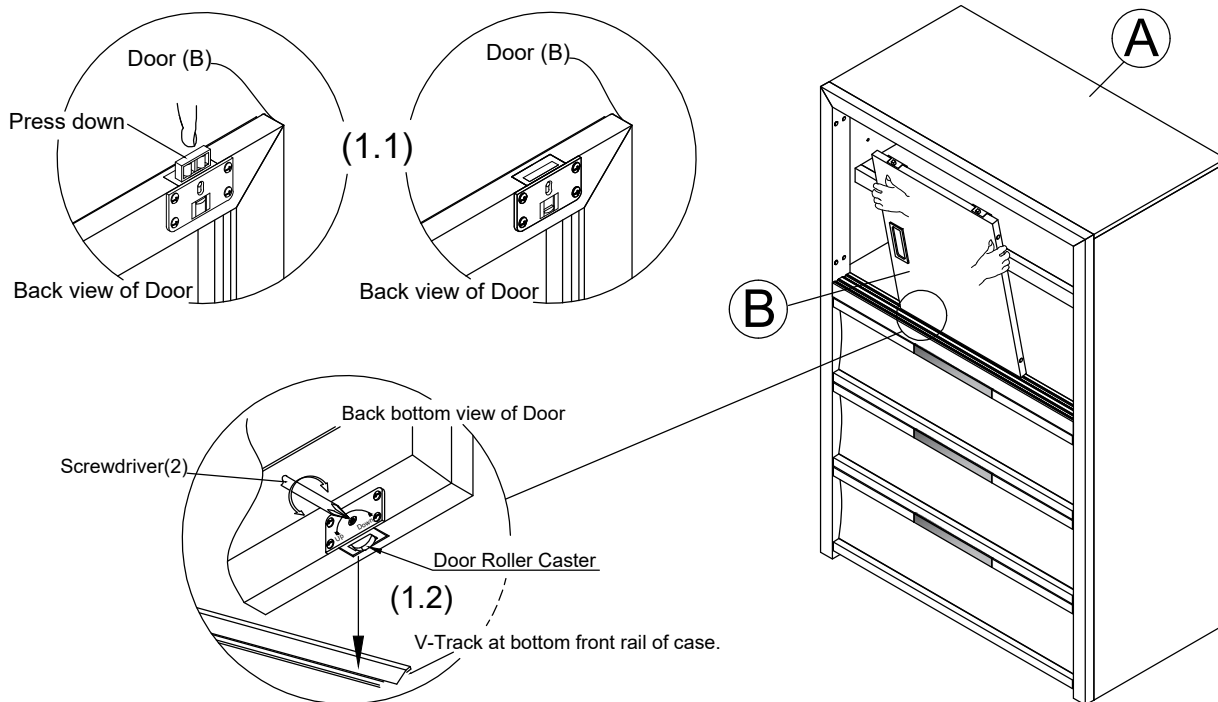

(1.2) : Place the door rollers on the bottom edge of the door into the lower V-track located on the front bottom rail of the case. Ensure both rollers are properly seated on the V-track. Then, push the top part of the door inward so that the top latches align with the upper U-track on the front top rail of the case.

(1.3) : Use your forefingers to press the buttons on the sides of the latches, allowing the latches to slide up into the U-track.

If the door is not aligned properly on the track, there are two ways to make adjustments: Use a screwdriver (not provided) to adjust the nut at the back of the bottom roller by turning it up or down.

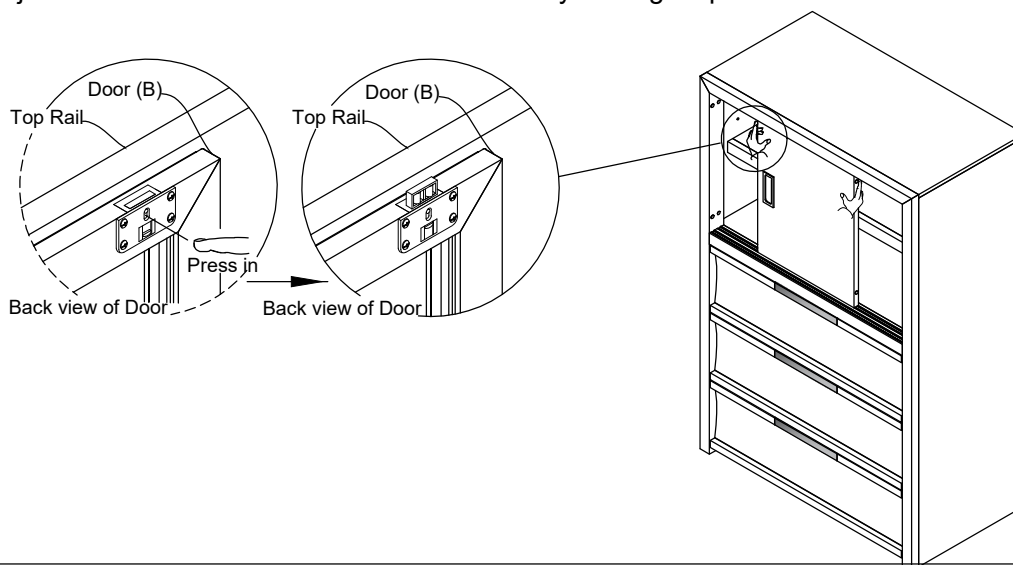


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST.

This product is manufactured by (GLOB) for **ROOMS TO GO** | **KIDS**

Assembly Instructions:

STEP 2 Install Tipping Restraint (1) (Customer to Assemble) with a Phillips Screwdriver (2) (Not provided) by following the assembly instructions that come in the Tipping Restraint package.

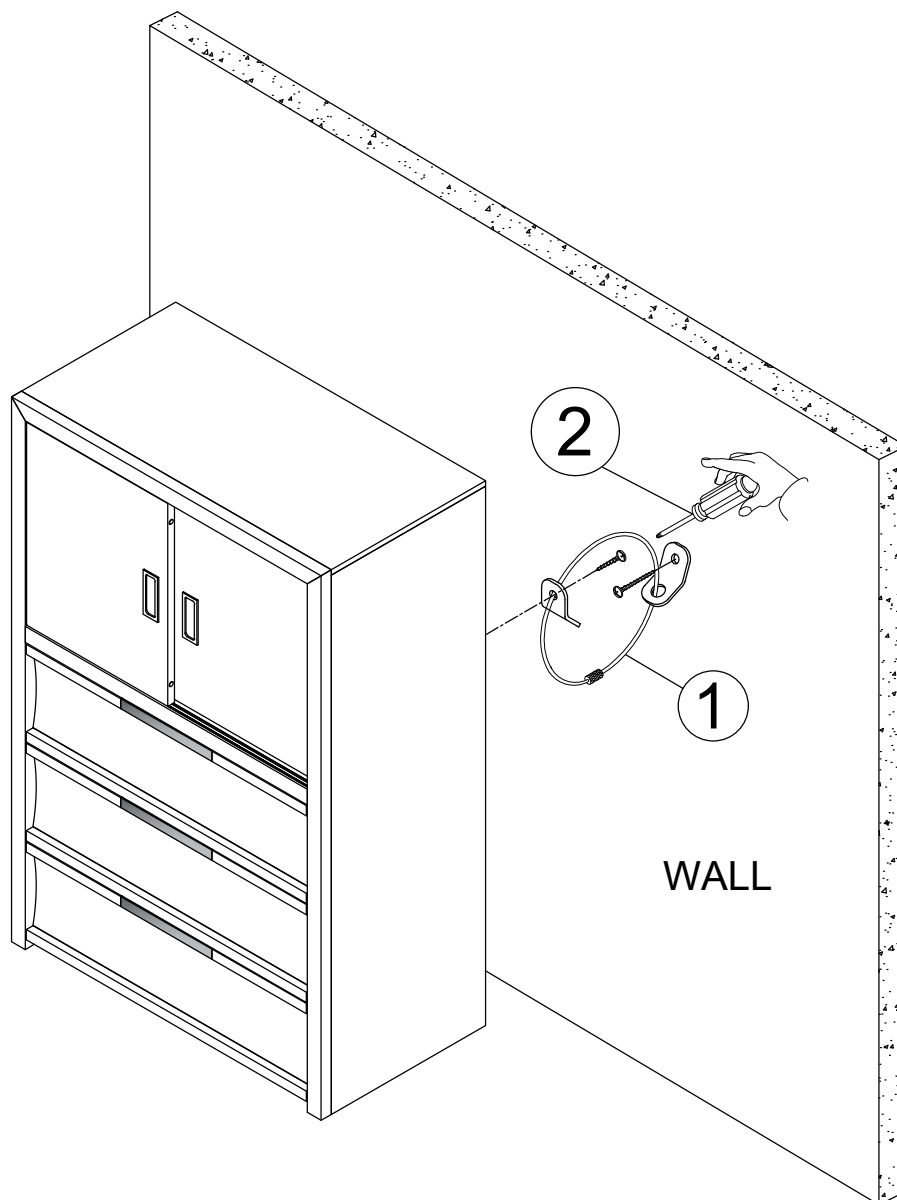

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST.

This product is manufactured by (GLOB) for **ROOMS TO GO® | KIDS**

WOODEN FURNITURE CARE

The beauty of furniture care is that it helps to protect your investment. Fine furniture is an important purchase. Proper care will help maintain your furniture's finish and ensure that it looks great year after year.

Caring for Furniture

Caring for furniture is easy. Following a few simple guidelines will help extend the life of your furniture.

- Always dust with a cloth moistened with polish. Polish cushions the cloth, eliminating the scratching that occurs with dry dusting. Dust will scratch furniture if not removed quickly. Use a soft clean cloth that won't scratch the surface. Avoid coarse or scratchy materials or fabrics.
- Avoid using soap and water on furniture. Water can penetrate the finish and raise the grain on wood. Causing damage.

The Enemies of Furniture

Many common problems in furniture care are caused by the elements. If you are aware of these troublemakers, the resulting damage can easily be avoided.

- Sunlight's ultraviolet rays can damage wood finishes. Arrange furniture out of direct sunlight; use sun screening drapes during intense sunlight hours, rotate furniture in place and room arrangement.
- Liquid spills will damage furniture if not removed promptly. Use coasters under beverage glasses and saucers under cups and flowerpots. If a spill occurs, immediately blot it gently without rubbing the surface.
- Heat creates a chemical change in the furniture finish, which can result in a white spot. Use protective mats under hot dishes, utensils or cooking appliances.
- Cyclic changes in temperature can damage furniture. Placing furniture near to central heating radiators and air ducts should be avoided because this causes extreme localized drying of the wood.

Tips for Better Dusting

- Be sure to use the same type of polish consistently. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchange.
- Always use a fine furniture polish when dusting. Never dry dust, as it could cause microscopic scratches on your furniture's surface. Remember to change dusting cloths frequently since a dirty cloth may scratch your furniture's surface.
- Spray your furniture surface evenly, but not too generously. Wipe in a circular motion with a soft clean cloth to clean and loosen old polish.
- Then buff until completely dry for a beautiful shine and a smudge free finish. For wood trim spray polish on the cloth first, then dust.

There is a desiccant pack attached. Please remove it before using.