


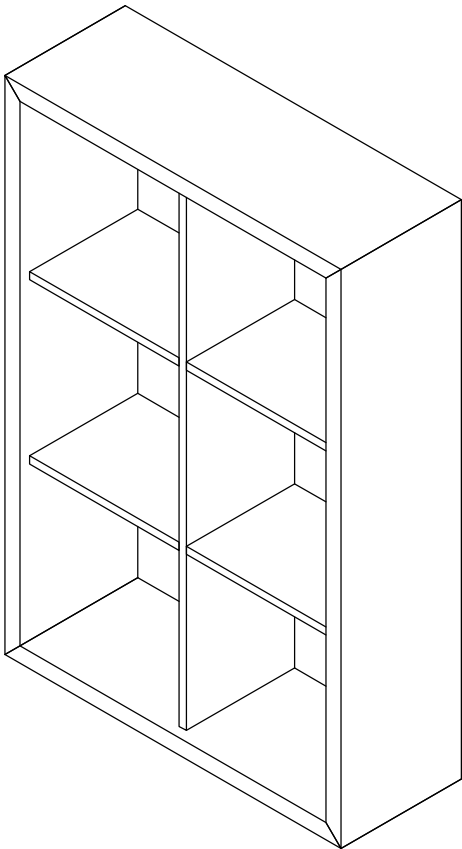


SIERRA SUMMIT

BOOKCASE



(OPTION 1: narrow side at the bottom)

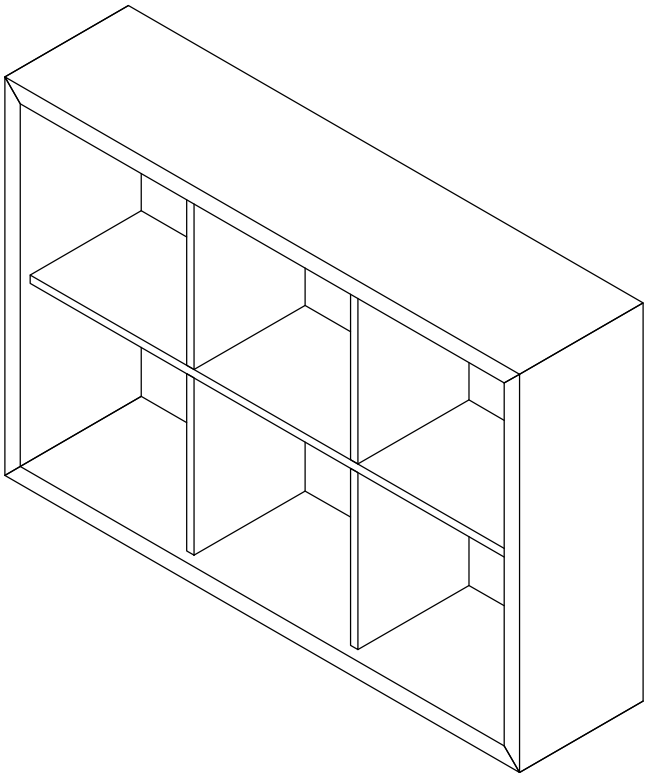

(OPTION 2: wide side at the bottom)



SKU #	STYLE	COLOR	ITEM DESCRIPTION
34459405	594-4	LINEN	BOOKCASE
34459417	694-4	BROWN OAK	BOOKCASE

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST.

This product is manufactured by (GLOB) for **ROOMS TO GO® | KIDS**


SIERRA SUMMIT

 BOOKCASE

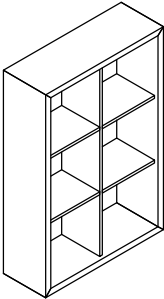BOOKCASE PART LIST				HARDWARE LIST			
	ITEM DESCRIPTION	IMAGE	QTY		ITEM DESCRIPTION	IMAGE	QTY
A	BOOKCASE		1 PC	1	FLOOR PROTECTOR PAD		6 PCS
				2	TIPPING RESTRAINT (CUSTOMER TO ASSEMBLE)		1 SET
				3	PHILIPS SCREWDRIVER (NOT PROVIDED)		1 PC

HARDWARE PACK LOCATION

SKU #	STYLE	COLOR	ITEM DESCRIPTION
34459405	594-4	LINEN	BOOKCASE
34459417	694-4	BROWN OAK	BOOKCASE

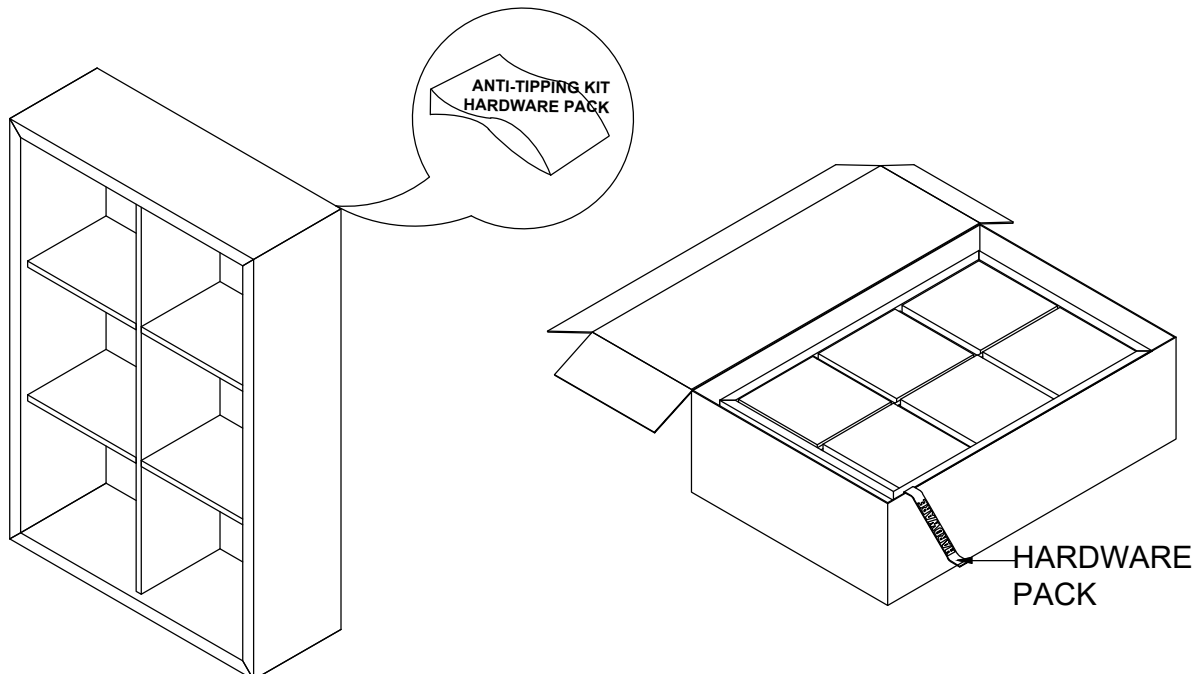

**NOTE: ANTI-TIPPING KIT HARDWARE PACK
IS LOCATED ON THE BACK OF BOOKCASE**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST.


This product is manufactured by (GLOB) for **ROOMS TO GO® | KIDS**

Assembly Instructions:


NOTE: The Bookcase can be placed horizontally (wide side at the bottom) or vertically (narrow side at the bottom). Please choose your preferred orientation before assembling.

STEP 1 Attach the Floor Protector Pads(1) to the bottom corners of the Bookcase(A) to prevent floor scratches then set up the bookcase as preferred

(OPTION 1: narrow side at the bottom)

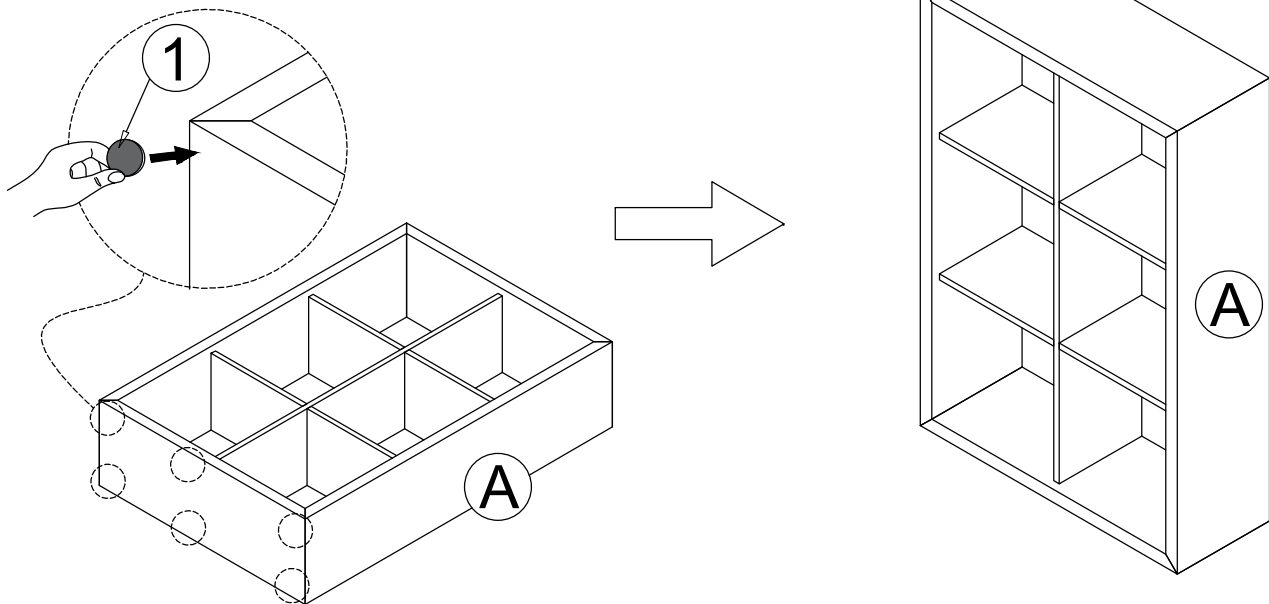

(OPTION 2: wide side at the bottom)

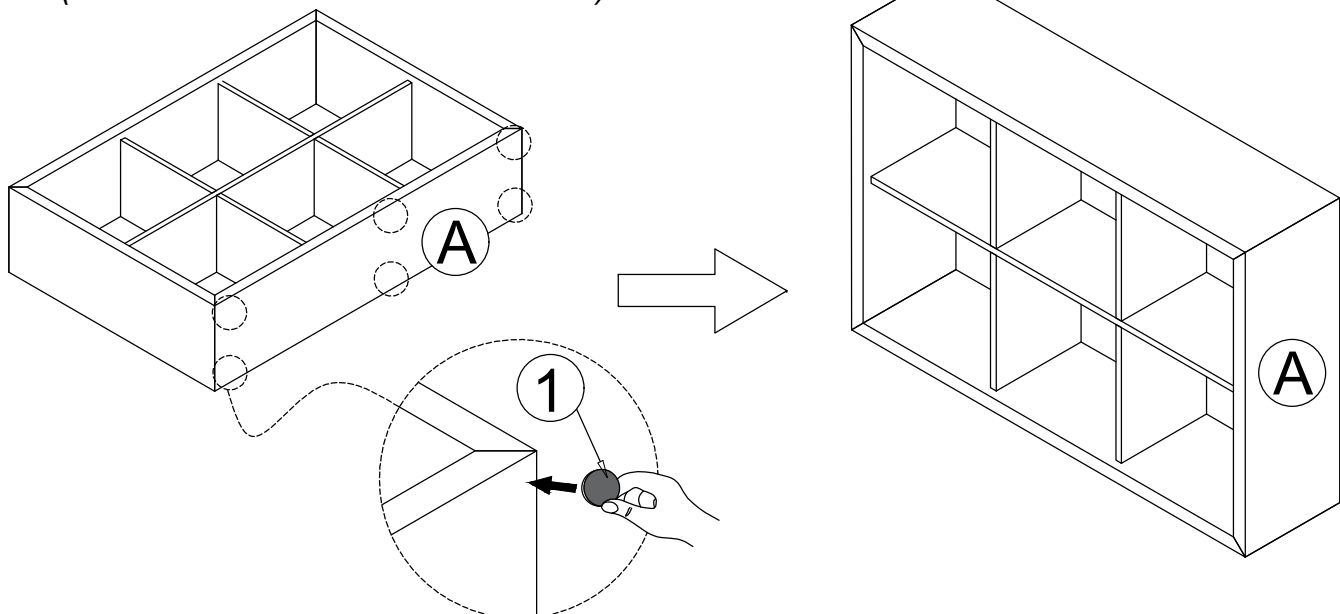

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST.


This product is manufactured by (GLOB) for **ROOMS TO GO® | KIDS**

Assembly Instructions:


STEP 2

Install Tipping Restraint (2) (Customer to Assemble) with a Phillips Screwdriver (3) (Not provided) by following the assembly instructions that come in the Tipping Restraint package.

(OPTION 1: narrow side at the bottom)

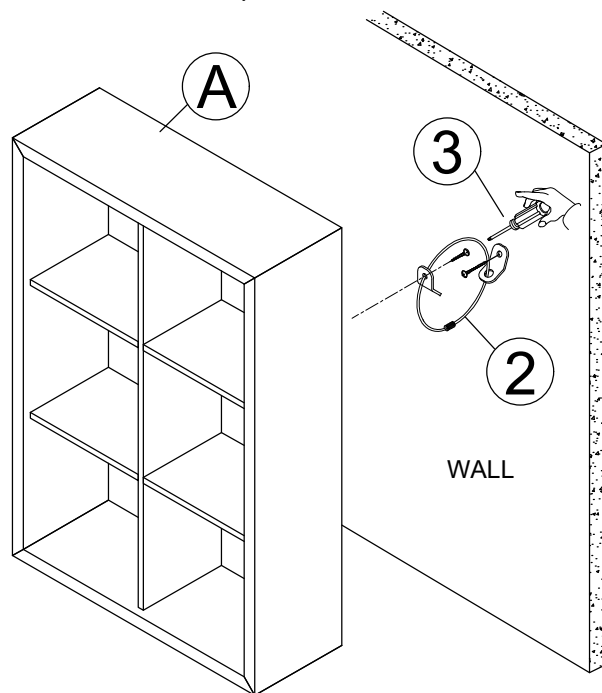

(OPTION 2: wide side at the bottom)

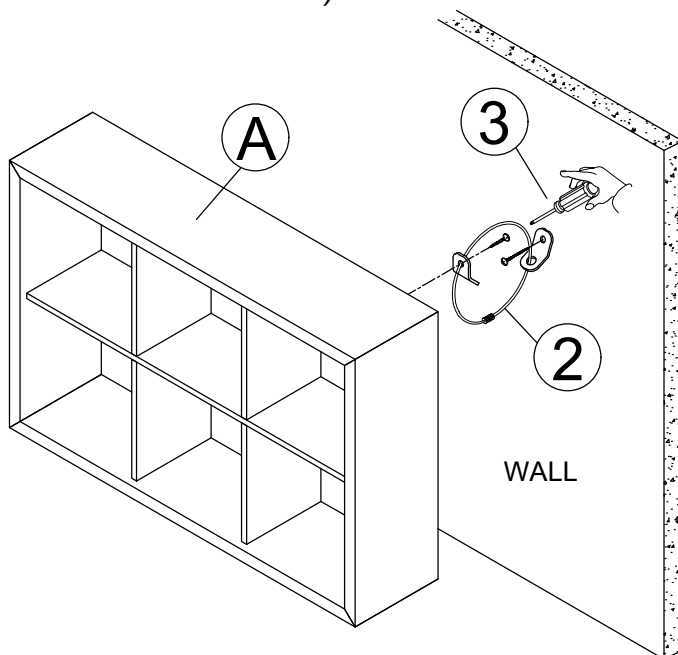

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST.

This product is manufactured by (GLOB) for **ROOMS TO GO® | KIDS**

WOODEN FURNITURE CARE

The beauty of furniture care is that it helps to protect your investment. Fine furniture is an important purchase. Proper care will help maintain your furniture's finish and ensure that it looks great year after year.

Caring for Furniture

Caring for furniture is easy. Following a few simple guidelines will help extend the life of your furniture.

- Always dust with a cloth moistened with polish. Polish cushions the cloth, eliminating the scratching that occurs with dry dusting. Dust will scratch furniture if not removed quickly. Use a soft clean cloth that won't scratch the surface. Avoid coarse or scratchy materials or fabrics.
- Avoid using soap and water on furniture. Water can penetrate the finish and raise the grain on wood. Causing damage.

The Enemies of Furniture

Many common problems in furniture care are caused by the elements. If you are aware of these troublemakers, the resulting damage can easily be avoided.

- Sunlight's ultraviolet rays can damage wood finishes. Arrange furniture out of direct sunlight; use sun screening drapes during intense sunlight hours, rotate furniture in place and room arrangement.
- Liquid spills will damage furniture if not removed promptly. Use coasters under beverage glasses and saucers under cups and flowerpots. If a spill occurs, immediately blot it gently without rubbing the surface.
- Heat creates a chemical change in the furniture finish, which can result in a white spot. Use protective mats under hot dishes, utensils or cooking appliances.
- Cyclic changes in temperature can damage furniture. Placing furniture near to central heating radiators and air ducts should be avoided because this causes extreme localized drying of the wood.

Tips for Better Dusting

- Be sure to use the same type of polish consistently. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchange.
- Always use a fine furniture polish when dusting. Never dry dust, as it could cause microscopic scratches on your furniture's surface. Remember to change dusting cloths frequently since a dirty cloth may scratch your furniture's surface.
- Spray your furniture surface evenly, but not too generously. Wipe in a circular motion with a soft clean cloth to clean and loosen old polish.
- Then buff until completely dry for a beautiful shine and a smudge free finish. For wood trim spray polish on the cloth first, then dust.

There is a desiccant pack attached. Please remove it before using.