 
 

 


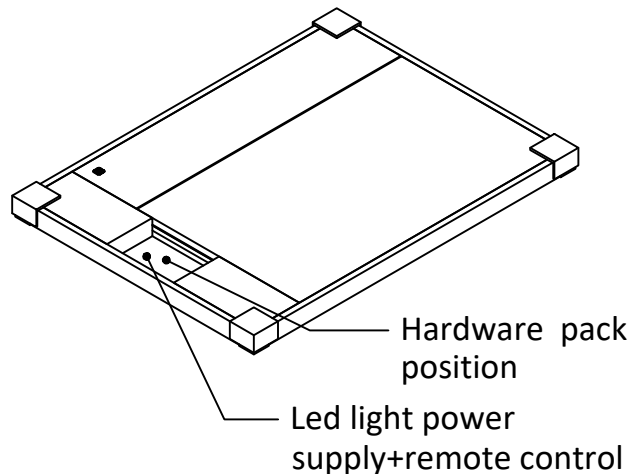


FIBI

NO.	Item description	IMAGE	QTY
1	Mirror BLACK / PEWTER LACQUER		1
2	Metal supports		2

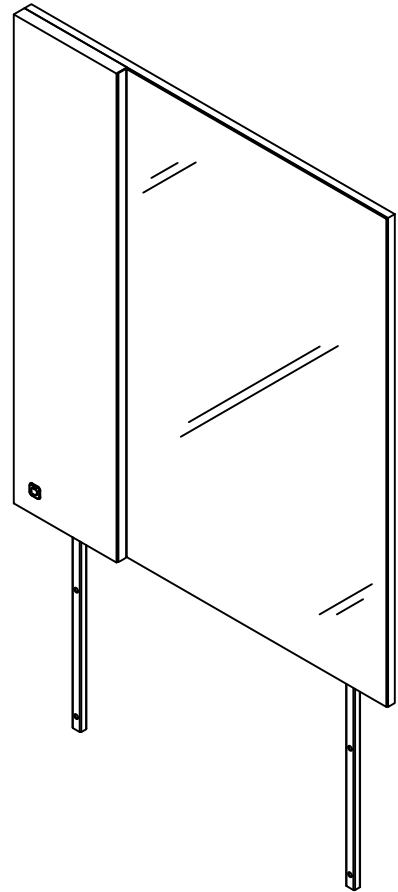

HARDWARE LIST			
NO.	Item description	IMAGE	QTY
A	Screw m6x25mm		6PCS
B	4mm ALLEN wrench		1 PIECE
C	Lock washer Ø11-Ø6.4 2.1Thk		6 PCS

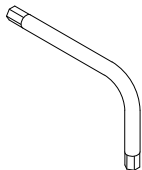


©&™ Lucasfilm Ltd


Page 1/10

Assembly Instructions

- 1** The mirror supports are already attached to the mirror.

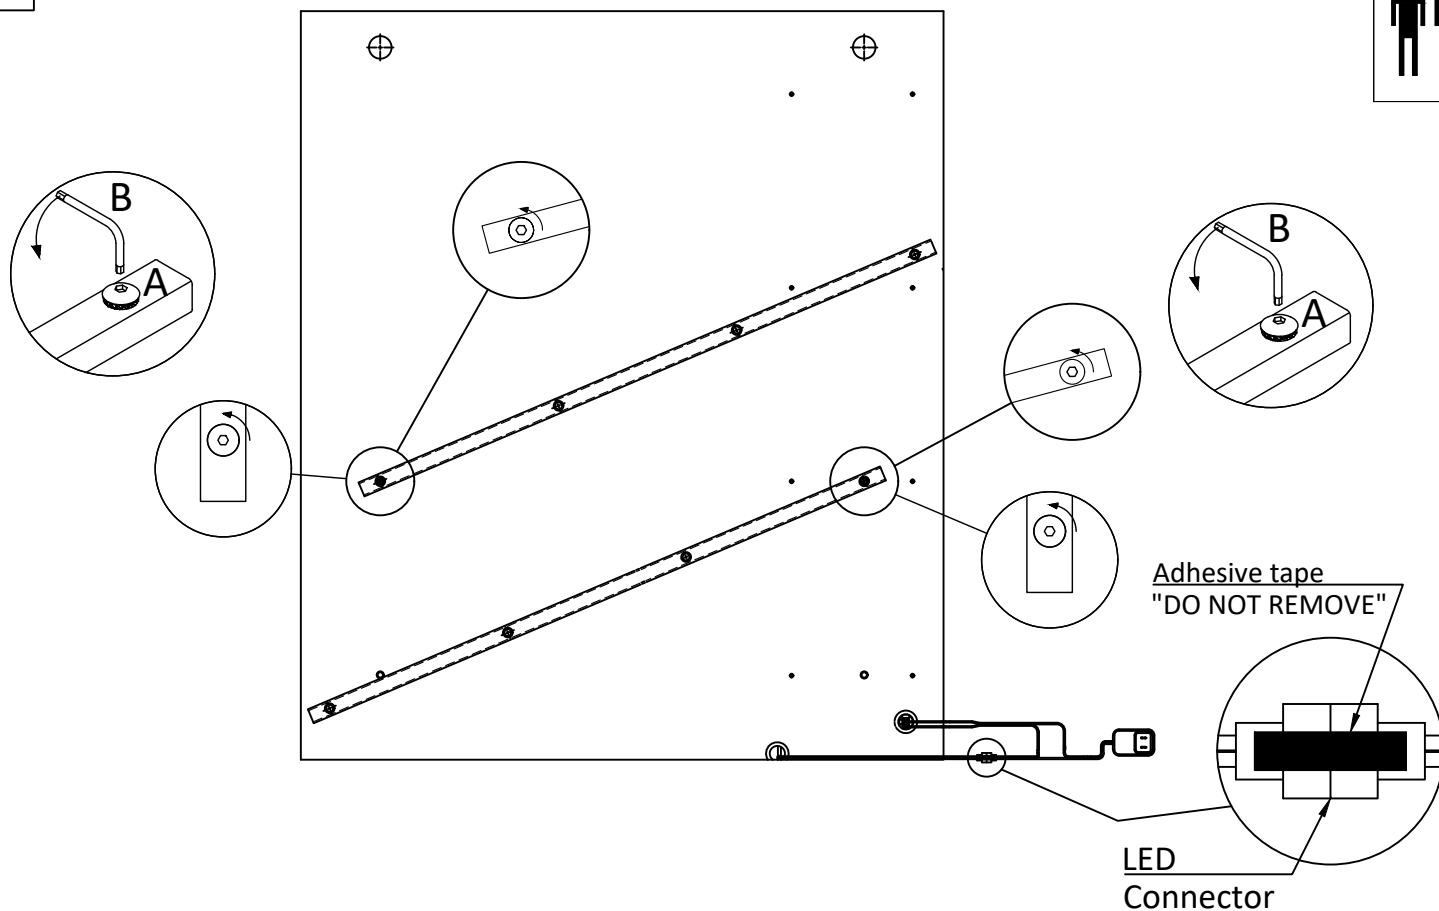

- 2** Loosen the screws A so that the supports can be moved into extension mode to be attached to the dresser.
Use 4mm ALLEN wrench B.
Pass electrical cords over the metal support.

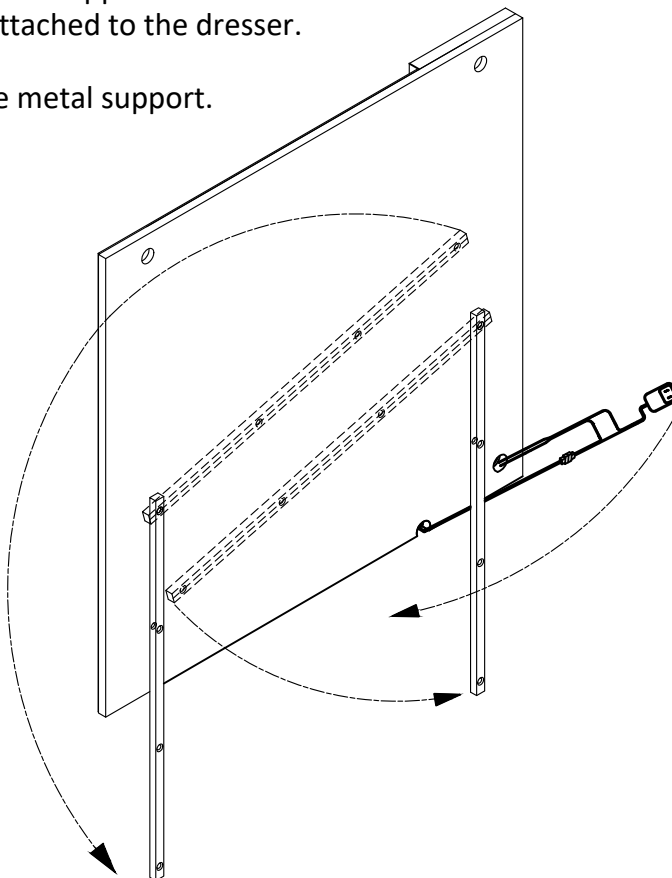

© &™ Lucasfilm Ltd


This product is manufactured by FBI for **ROOMS TO GO | KIDS**

Version 2 - 2024/07/19


Page 2/10

Assembly Instructions

- 3** Insert the screws A and lock washer C into the second hole to secure the supports into the top section of the mirror.
Use 4mm ALLEN wrench B.

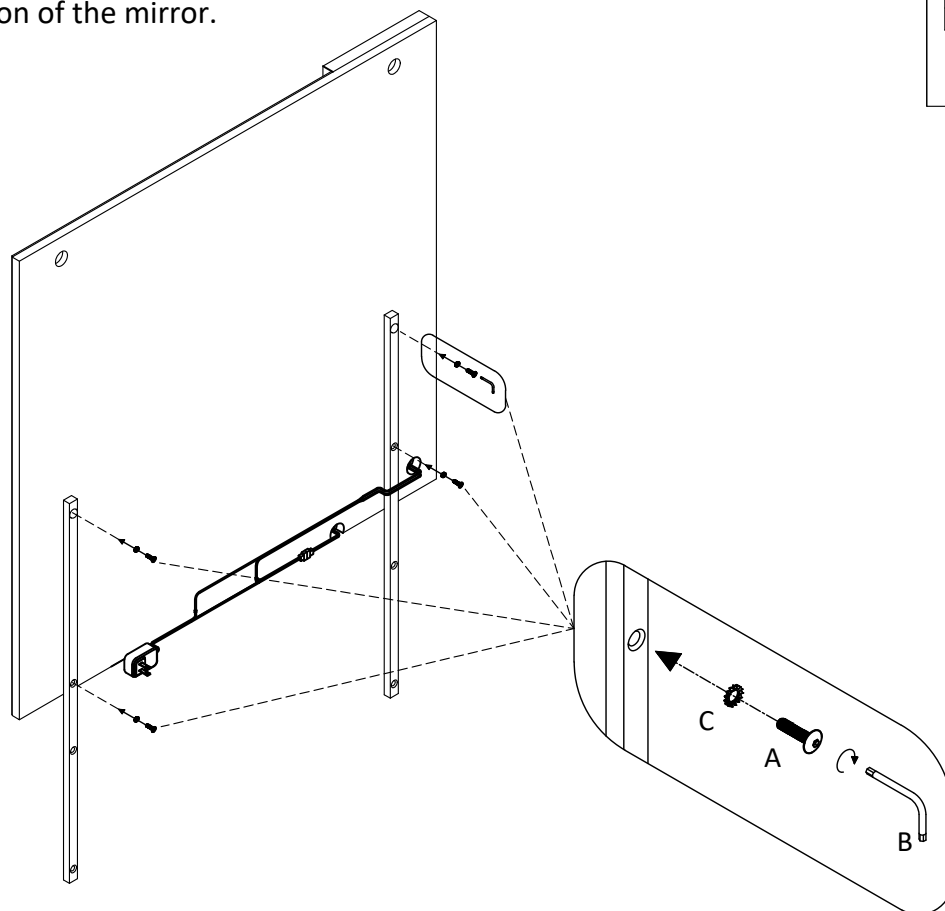


- 4** Carefully place the mirror on top of the dresser

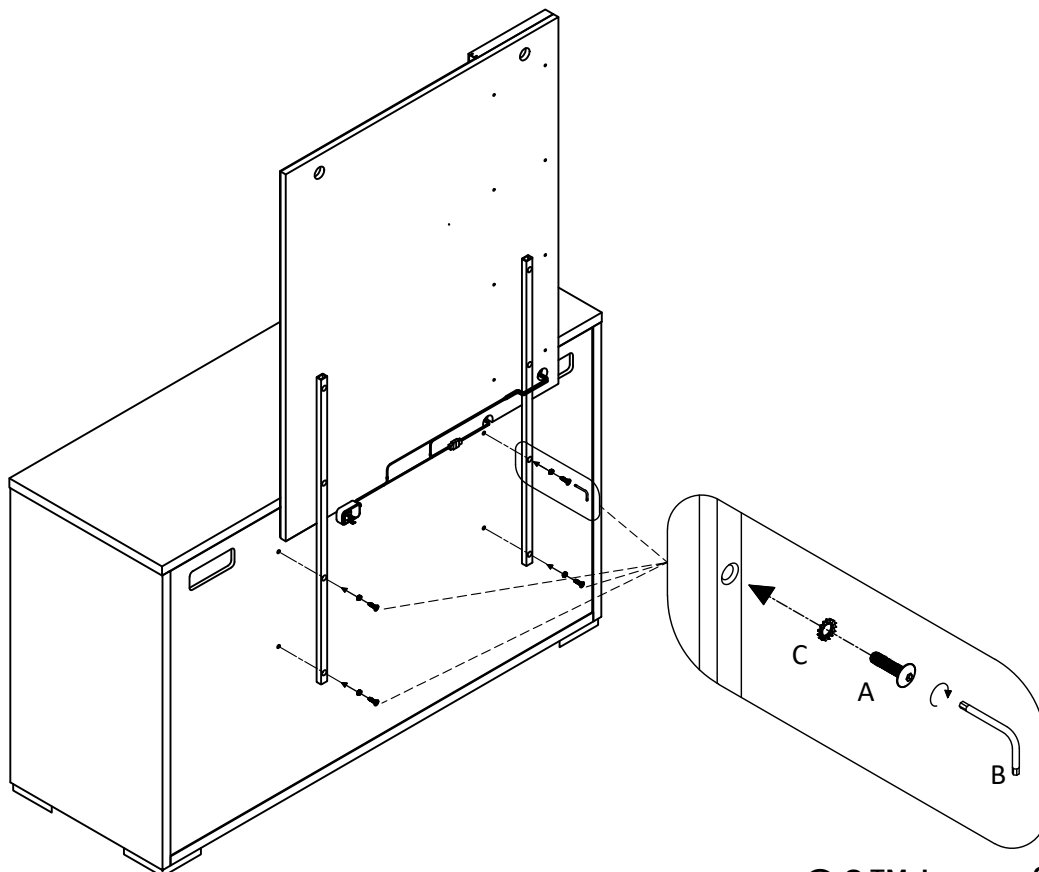


© &™ Lucasfilm Ltd

Assembly Instructions

- 5** Insert the screws A and lock washer C into the dresser.
Use 4mm ALLEN wrench.
Ensure that all screws are tight and mirror is secure.

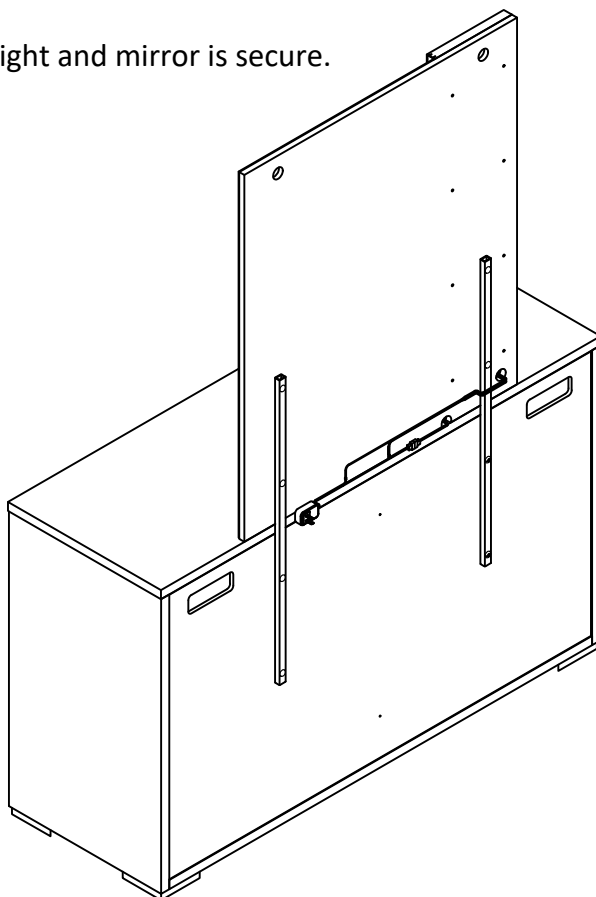

- 6** Dresser & Mirror ready to go.

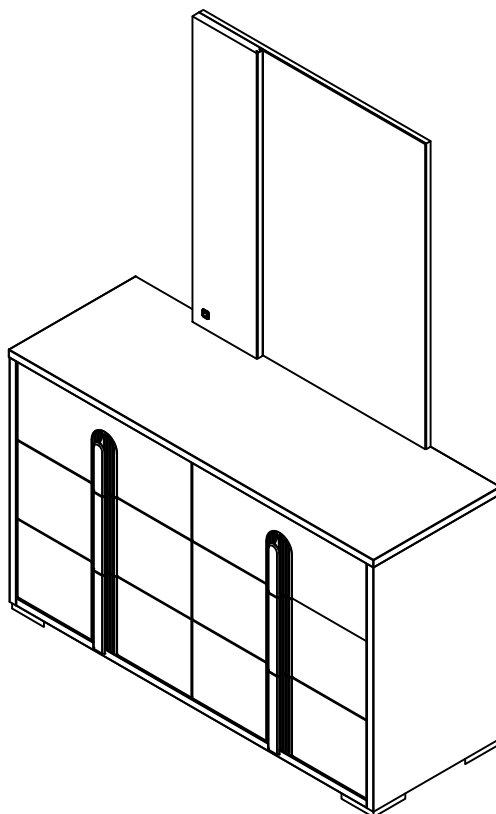

© &™ Lucasfilm Ltd

This product is manufactured by FIBI for **ROOMS TO GO | KIDS**

Version 2 - 2024/07/19

Page 4/10

LED Light Setup and Instructions

7



Ensure Power Connection:

- Plug the mirror light cord into a wall outlet.


Remove the battery pull tab from the back of the remote:

- Pull out the battery isolation tab at the bottom of the remote from the back.
- The remote control is now operational. The remote will not work until the security tab is inserted




Turning on the switch:

- Ensure the mirror switch is in the "on" position for the remote control to function correctly. The "on" position is recognizable because it will turn the LED light of the mirror on.
- The switch can be used to turn off the light without the use of the remote. It is thought as a parental control.
- The mirror's LED light has a memory function, which means it retains the last brightness setting used before it was turned off.

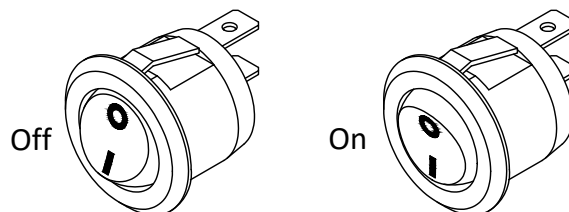

Adjusting Brightness:


- Use the remote control to select the desired brightness level.
- If the lower brightness button is pressed accidentally, the light will dim. It will remain at this dim setting until adjusted with the remote control.

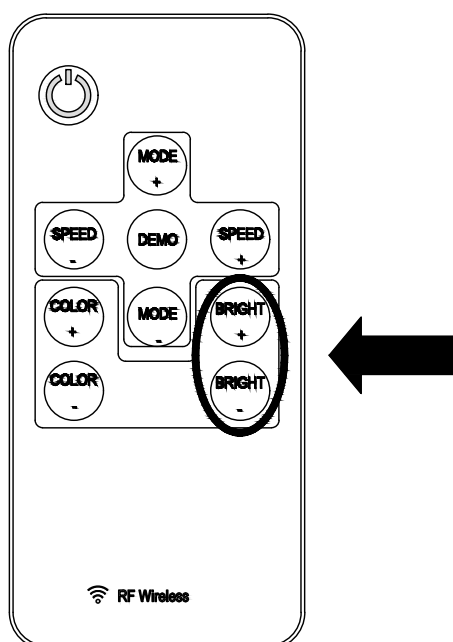

© &™ Lucasfilm Ltd


LED Light Setup and Instructions

 8




Changing Light Color:

- Use the remote control to change the color of the LED light.
- Ensure you are pressing the correct buttons for color change as indicated on the remote control diagram.
- If a color is selected, the LED light will keep that selection even after being turned off and on by the switch. Use the buttons in the remote control to change it again.

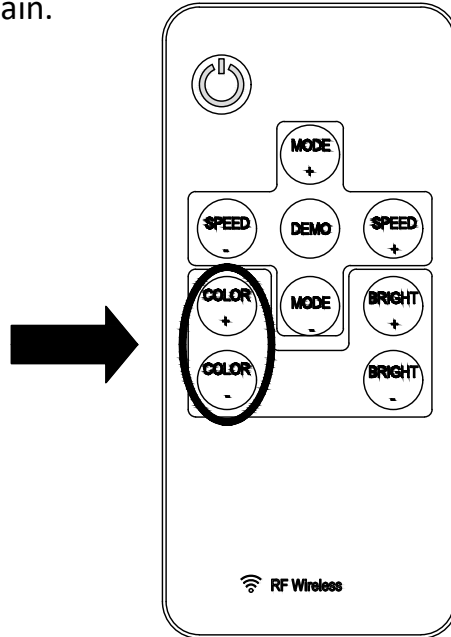

Changing Speed and Light modes:

- Use the remote control to change the speed and light modes of the LED light.
- If a light setup is selected, the LED light will keep that selection even after being turned off and on by the switch. Use the buttons in the remote control to change it again.

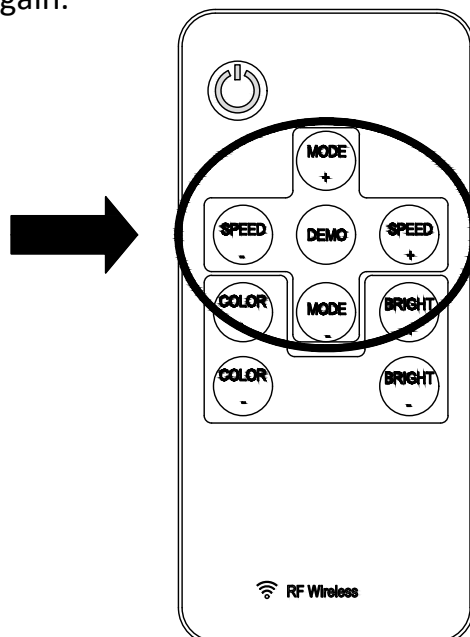

© &™ Lucasfilm Ltd

This product is manufactured by FIBI for **ROOMS TO GO | KIDS**

Version 2 - 2024/07/19

Page 6/10

Troubleshooting and Replacing a Remote

12


Issue: Led Light Stuck on One Color or One Setting.:

1. Turn the switch on the mirror to the "on" position.
2. Use the remote control to adjust brightness and change the color of the light.
3. If the light remains stuck, turn the LED off using the switch, wait a few seconds, and turn it back on. Use the remote control to reselect the desired settings.
4. If the remote is not working properly, move to ISSUE nr 2.

Issue: Remote Control Not Responding

Solution:



1. Ensure there are no obstructions between the remote control and the mirror.
2. Verify the mirror switch is in the "on" position.
3. If the remote is still not responding, put the switch in the "off" position.
4. Unplug the LED light from the wall outlet, wait 5 seconds, and plug it back in.
5. Put the switch back in the "on" position.
6. When the switch is powered on, within 3 seconds, press the 2 buttons "COLOR- and BRIGHT-" together: the lights will flash and match the remote control with the receiver.
7. If it doesn't work, check the status of batteries on the remote and repeat the procedure.

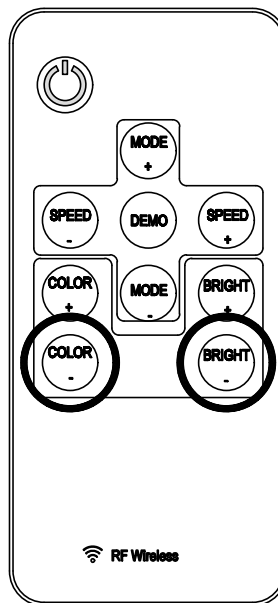

©&™ Lucasfilm Ltd


Battery Packaging

 10

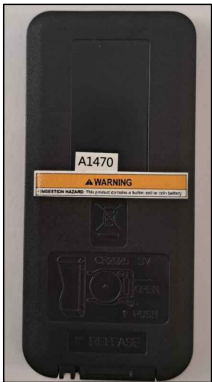

⚠ WARNING

- **INGESTION HAZARD: DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

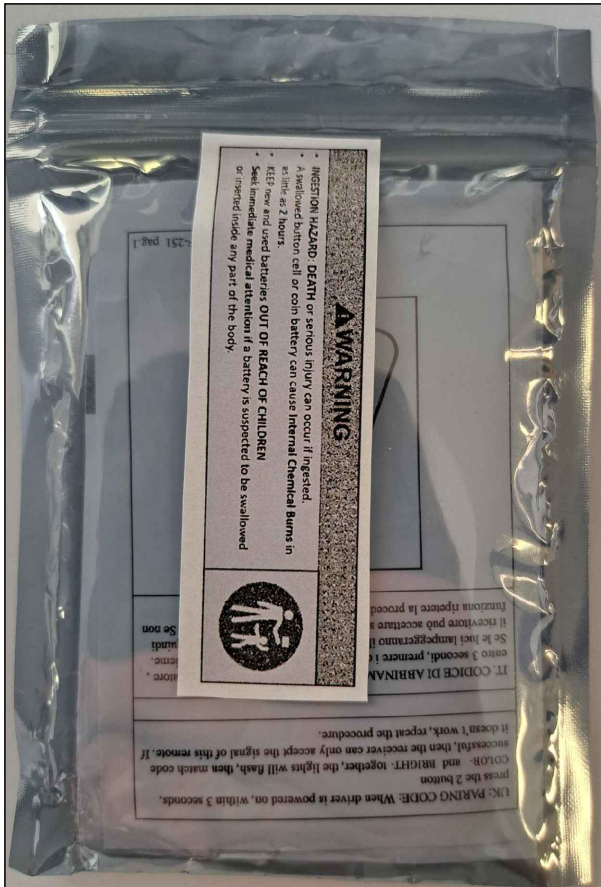

©&™ Lucasfilm Ltd


This product is manufactured by FIBI for **ROOMS TO GO | KIDS**

Version 2 - 2024/07/19

Page 8/10

Assembly Instructions

11

**WARNING**

Misuse can result in **FIRE** or **DEATH** by **ELECTRICAL SHOCK**

12VOLTS; 0,6AMPERES/METER; 7,2WATTS/METER
MONTEFELTRO LUCE SRL
POWER SUPPLY CORD FITTING CATALOG NUMBER: EPBU7.E338509
- Direct-plug-in and Cord-connected Class 2 Power Units Certified

Read all instructions before using this furnishing.

DANGER - To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING - to reduce the risk of burns, fire, electric shock, or injury to person:

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other
4. heat sources.
To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children. This is not a toy.
9. Plug directly into a compatible electrical socket.
10. Do not modify the plug or use any adapters.

©&™ Lucasfilm Ltd


This product is manufactured by FIBI for **ROOMS TO GO | KIDS**

Version 2 - 2024/07/19

Page 9/10

Assembly Instructions

12



PRECAUCIÓN

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELECTRICA

12VOLTS; 0,6AMPERES/METER; 7,2WATTS/METER
MONTEFELTRO LUCE SRL
NUMERO DE CATALOGO DE LA INSTALACION
DEL CABLE DE ALIMENTACION: EPBU7.E338509
- Direct-plug-in and Cord-connected Class 2 Power Units Certified
Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO - Para reducir el riesgo de descarga eléctrica:

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

1. Desenchufe del tomacorriente antes de colocar o quitar partes.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
Al operar, asegúrese de que el cable eléctrico no este debajo de la base,
5. las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilizar cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete.
9. Enchúfelo directamente a una toma de corriente compatible.
10. No modifique el enchufe ni utilice adaptadores.

©&™ Lucasfilm Ltd

This product is manufactured by FIBI for **ROOMS TO GO | KIDS**

Version 2 - 2024/07/19

Page 10/10