



RECHARGED
FULL BED WITH NIGHTSTAND,
LOUNGER AND SIDE BOOKCASE

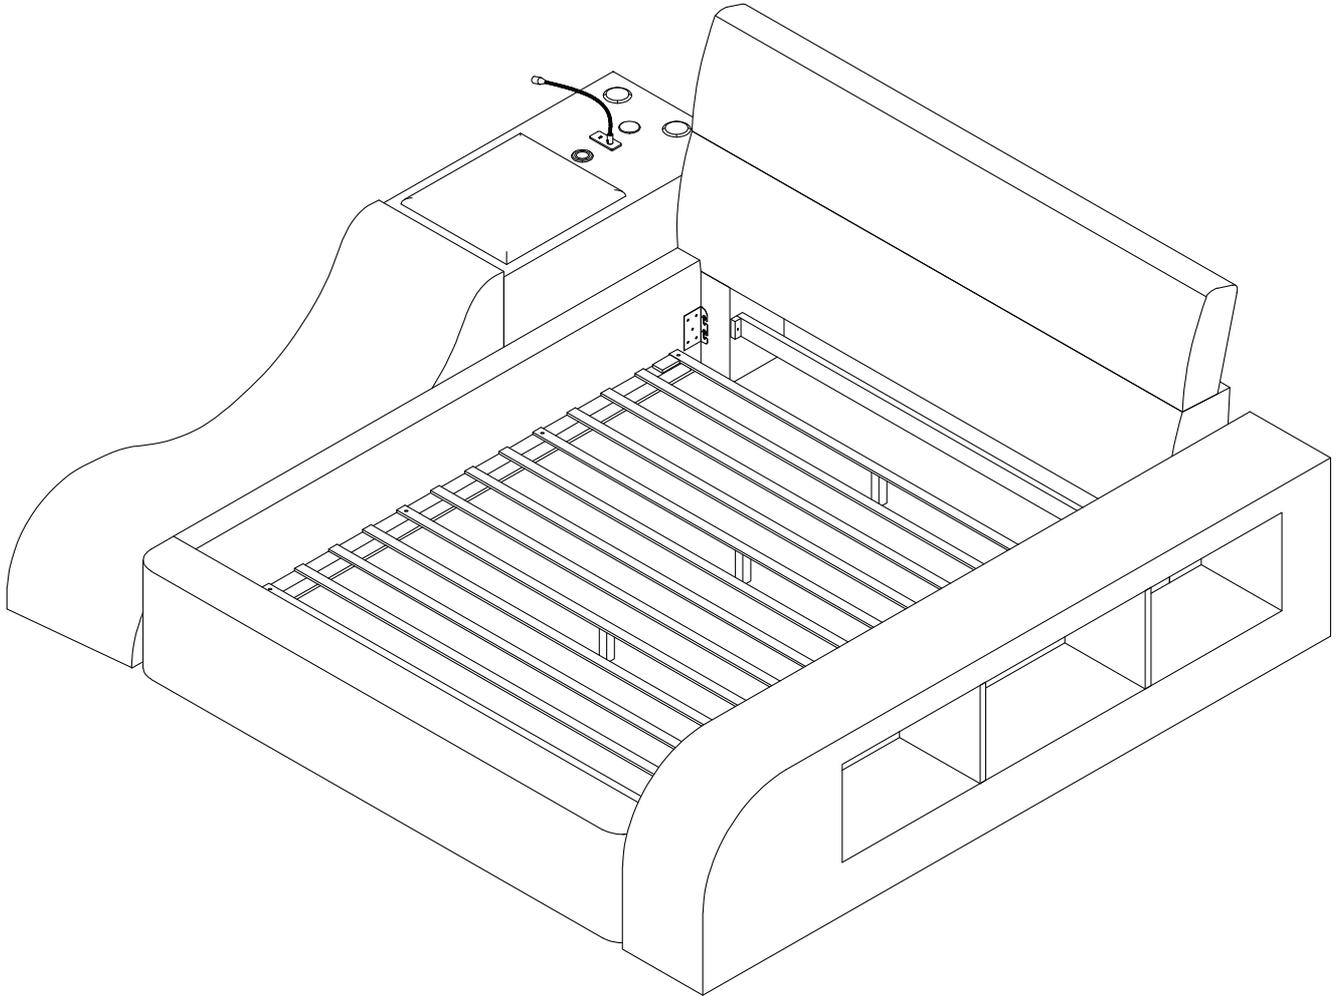

This product is manufactured by HOUS for **ROOMS TO GO | KIDS™**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR www.roomstogo.com
WITH SERVICE OR PARTS REPLACEMENT REQUEST

RECHARGED FULL BED

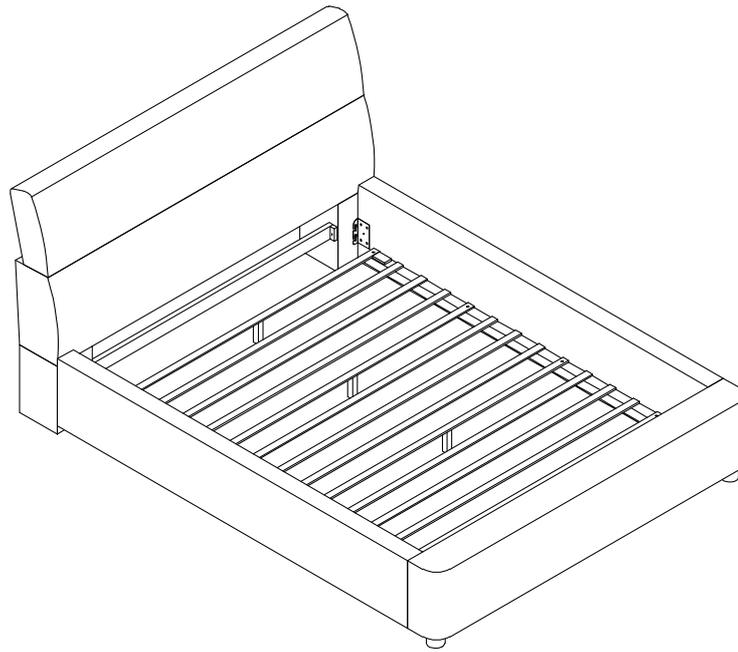

3419291P - FULL BED - GREY

| SKU# | ITEM# | ITEM DESCRIPTION |
|----------|-----------|-----------------------------------|
| 34892922 | 9291-26H | Full Headboard with Finished Back |
| 34992924 | 9291-26FR | Full Footboard/ Rails/ Slats |

FULL HEADBOARD PARTS LISTS

| CODE | DESCRIPTION | PARTS | Q.TY |
|------|---------------------|---|------|
| A | Headboard |  | 1PC |
| B | Left headboard leg |  | 1PC |
| C | Right headboard leg |  | 1PC |
| D | Cross bar |  | 1PC |

FULL FOOTBOARD/ RAILS/ SLATS PARTS LISTS


| CODE | DESCRIPTION | PARTS | Q.TY |
|------|---------------|---|------|
| E | Footboard |  | 1PC |
| F | Side bed rail |  | 2PCS |
| G | Straight slat |  | 1PC |
| H | Support leg |  | 4PCS |

This product is manufactured by HOUS for **ROOMS TO GO | KIDS™**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR www.roomstogo.com
WITH SERVICE OR PARTS REPLACEMENT REQUEST

RECHARGED FULL HEADBOARD WITH FINISHED BACK

| FULL HEADBOARD HARDWARE LISTS | | | Q.TY |
|-------------------------------|--|--|------|
| 1 | Allen Key 75x32x4mm |  | 1PC |
| 2 | Allen Bolt Ø5/16"x 2"L CAHA |  | 6PCS |
| | Lock Washer Ø5/16" | | 6PCS |
| | Flat Washer Ø5/16"x19mm | | 6PCS |

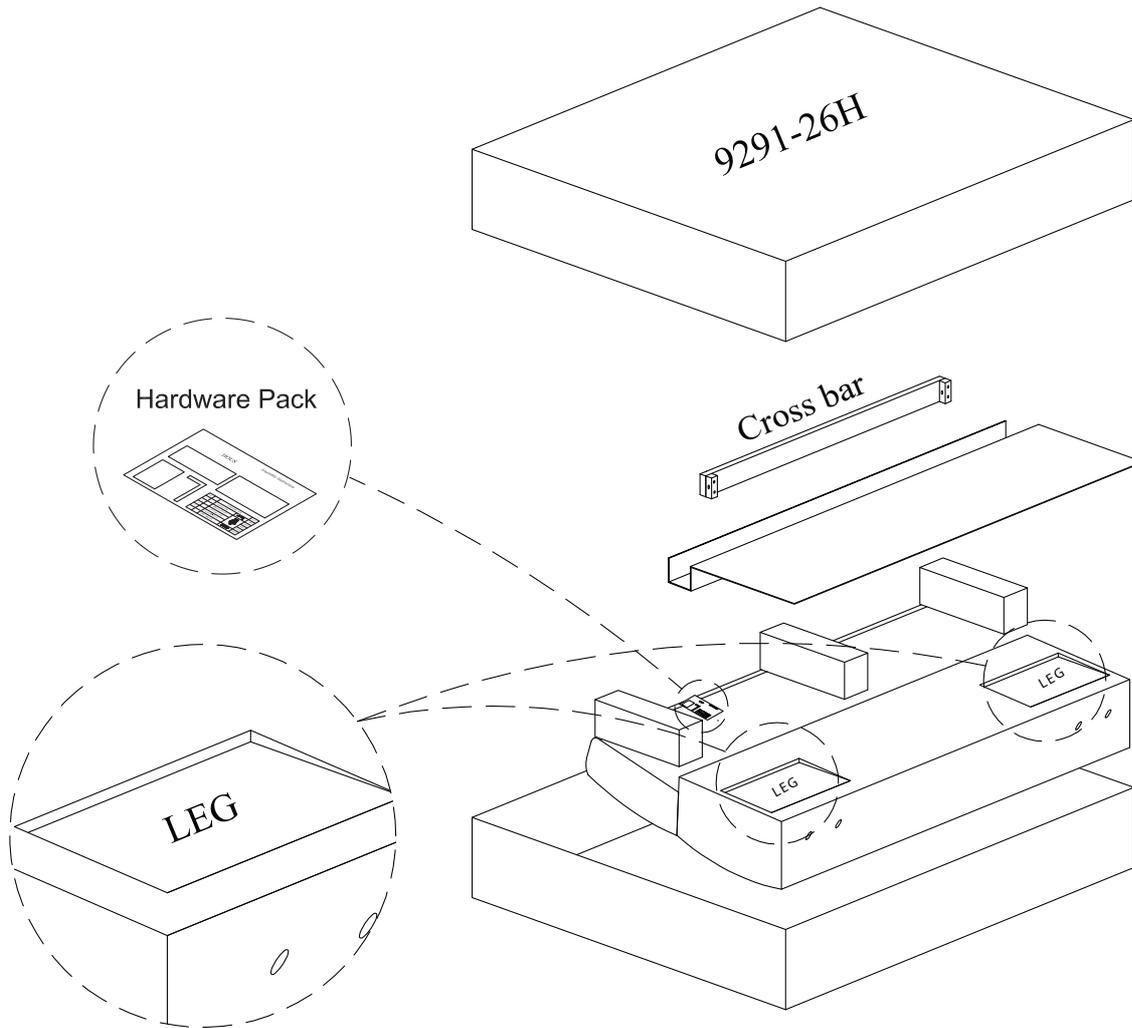

Hardware Pack Location(s):


9291-26H Full Headboard SKU# 34892922

This product is manufactured by HOUS for **ROOMS TO GO | KIDS™**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR www.roomstogo.com
WITH SERVICE OR PARTS REPLACEMENT REQUEST

RECHARGED FULL FOOTBOARD/ RAILS /SLATS

| FULL FOOTBOARD/ RAILS/ SLATS HARDWARE LISTS | | | Q.TY |
|---|-------------------------------------|--|------|
| 3 | Screw #8x30mm |  | 8PCS |
| 4 | Phillips Screwdriver (Not Provided) |  | 1PC |

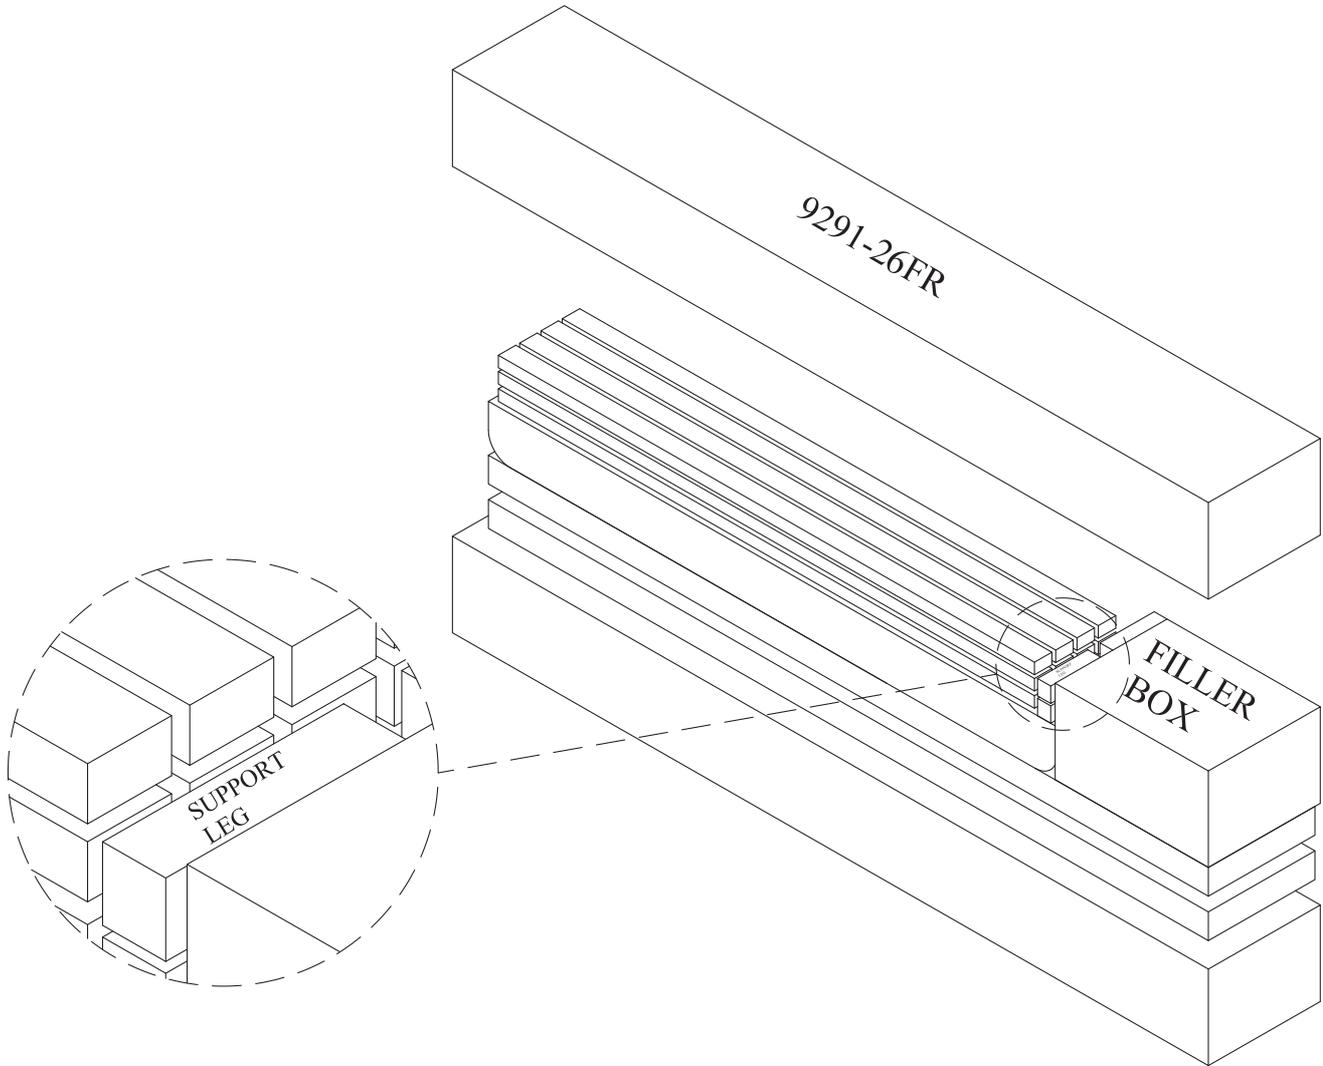


Hardware Pack Location(s):
9291-26H Full Headboard SKU# 34892922

This product is manufactured by HOUS for **ROOMS TO GO | KIDS™**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR www.roomstogo.com
WITH SERVICE OR PARTS REPLACEMENT REQUEST

RECHARGED NIGHTSTAND W/SPEAKER, USB-A, QI CHARGER & LED LIGHT

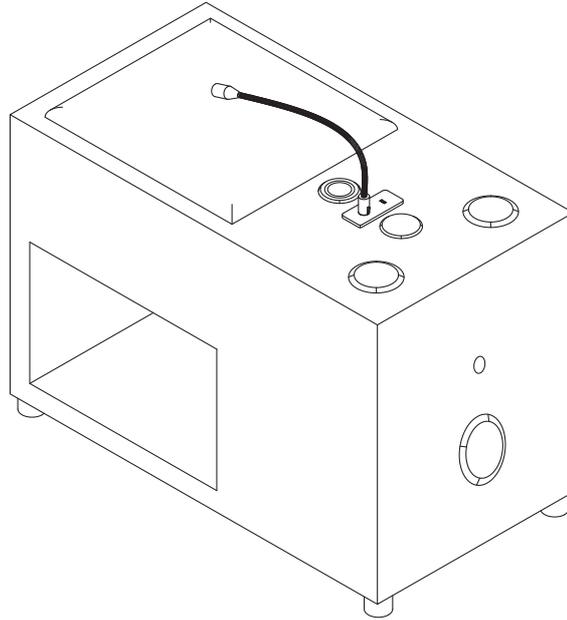


| NIGHTSTAND - GREY | | |
|-------------------|---------|--|
| SKU# | ITEM# | ITEM DESCRIPTION |
| 35192929 | 9291-29 | Nightstand w/ Speaker, USB-A, Qi Charger & LED light |

| NIGHTSTAND PARTS LISTS | | | |
|------------------------|--------------|---|------|
| CODE | DESCRIPTION | PARTS | Q.TY |
| A | Speaker |  | 1PC |
| B | Seat |  | 1PC |
| C | Led Light |  | 1PC |
| D | Charger cord |  | 1PC |
| E | Leg |  | 4PCS |

This product is manufactured by HOUS for **ROOMS TO GO | KIDS™**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR www.roomstogo.com
WITH SERVICE OR PARTS REPLACEMENT REQUEST


RECHARGED NIGHTSTAND W/SPEAKER, USB-A, QI CHARGER & LED LIGHT

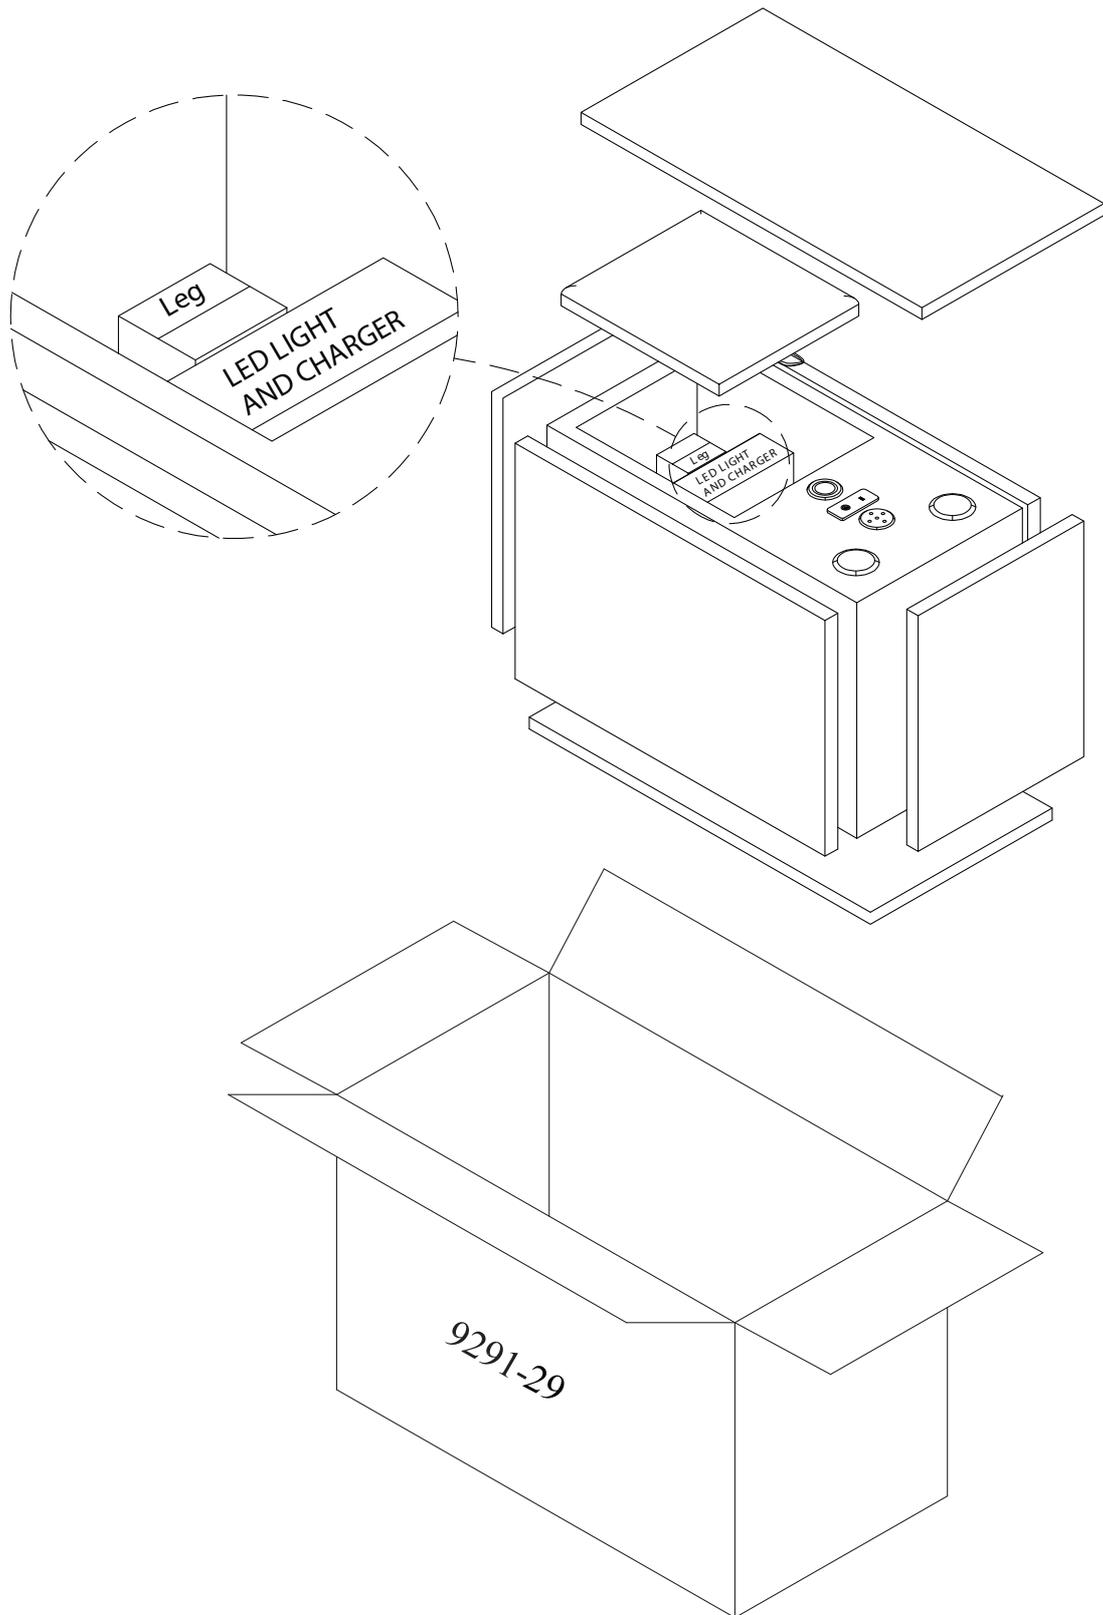

This product is manufactured by HOUS for **ROOMS TO GO | KIDS™**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR www.roomstogo.com
WITH SERVICE OR PARTS REPLACEMENT REQUEST

RECHARGED LOUNGER CHAIR

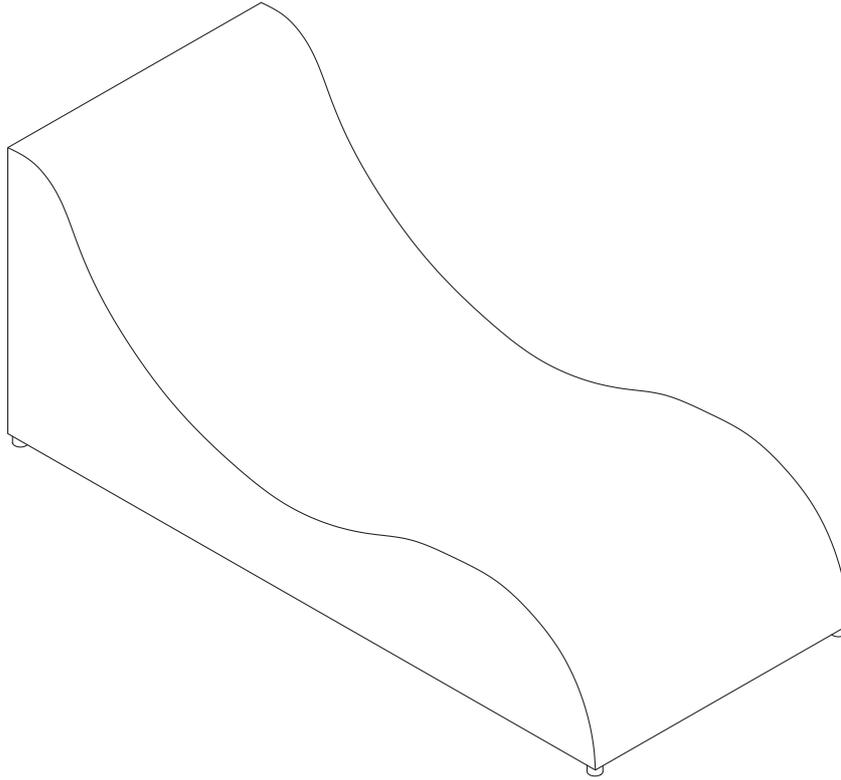


| LOUNGER CHAIR - GREY | | |
|----------------------|---------|------------------|
| SKU# | ITEM# | ITEM DESCRIPTION |
| 35292921 | 9291-27 | Lounger Chair |

This product is manufactured by HOUS for **ROOMS TO GO | KIDS™**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR www.roomstogo.com
WITH SERVICE OR PARTS REPLACEMENT REQUEST


RECHARGED LOUNGER CHAIR

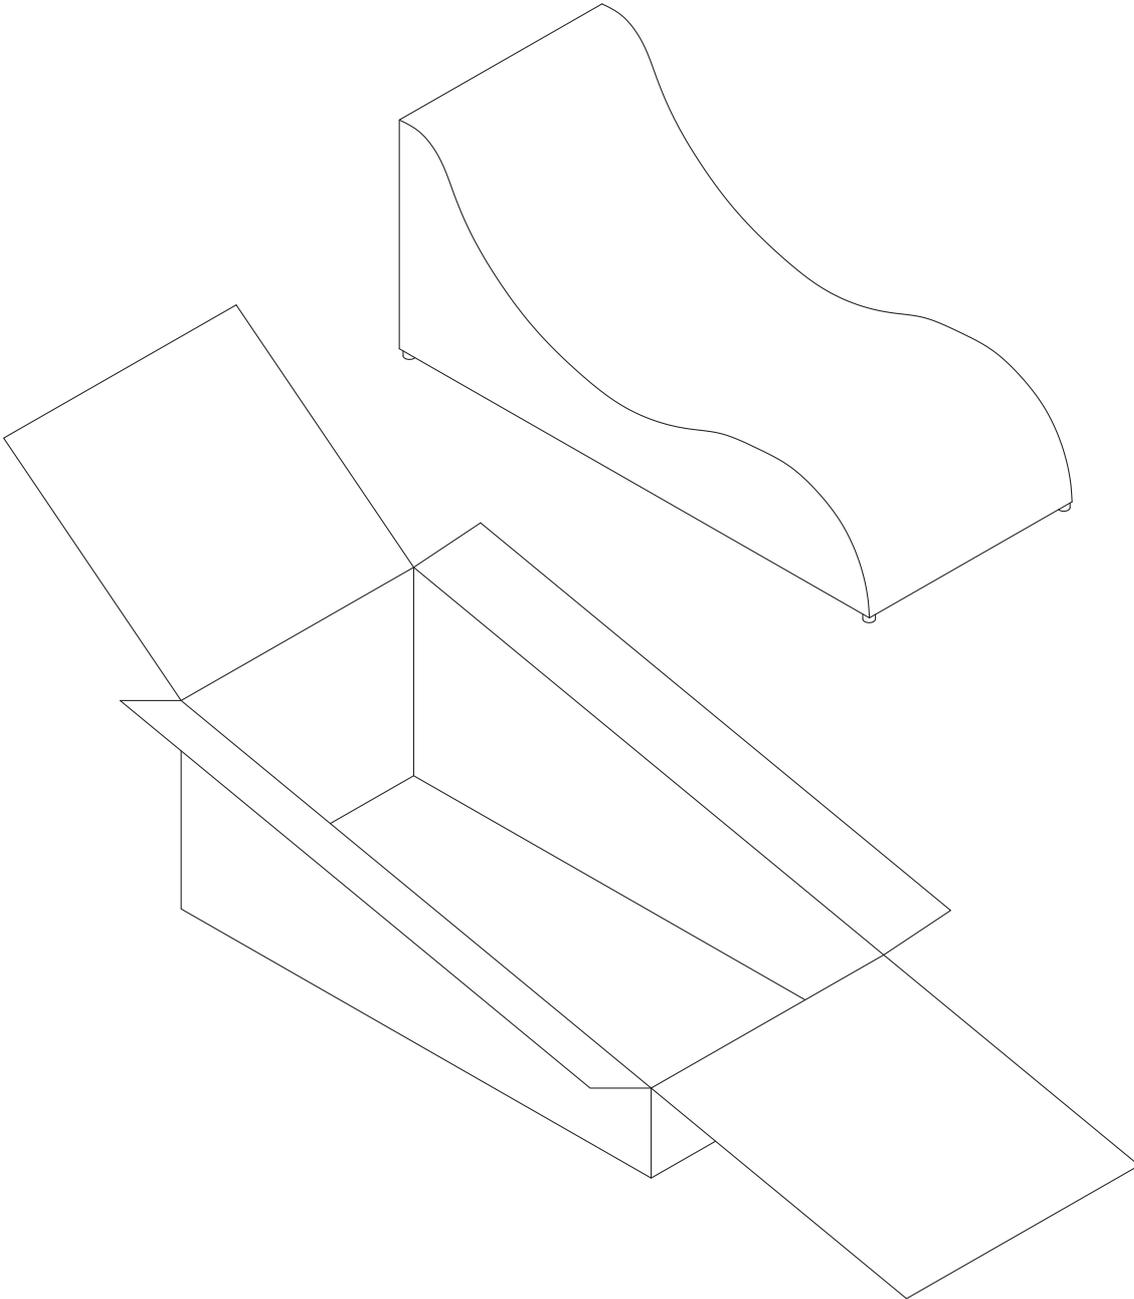

This product is manufactured by HOUS for **ROOMS TO GO | KIDS™**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR www.roomstogo.com
WITH SERVICE OR PARTS REPLACEMENT REQUEST

RECHARGED BOOKCASE

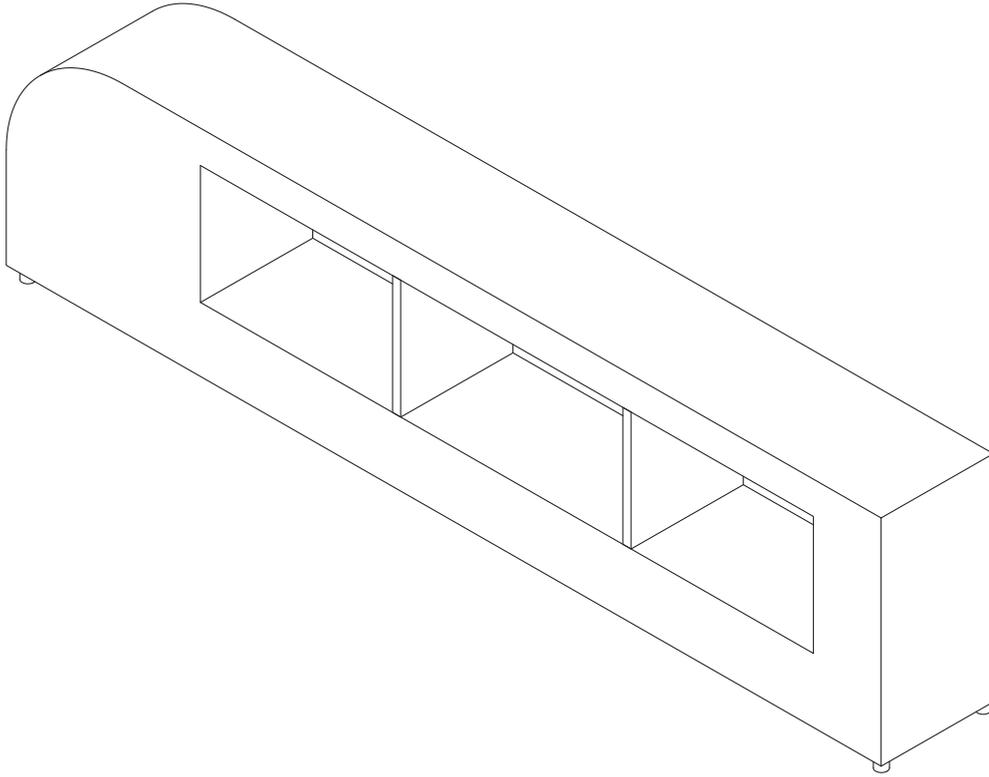


| BOOKCASE - GREY | | |
|-----------------|---------|------------------|
| SKU# | ITEM# | ITEM DESCRIPTION |
| 35092927 | 9291-28 | Bookcase |

This product is manufactured by HOUS for **ROOMS TO GO | KIDS™**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR www.roomstogo.com
WITH SERVICE OR PARTS REPLACEMENT REQUEST

RECHARGED BOOKCASE

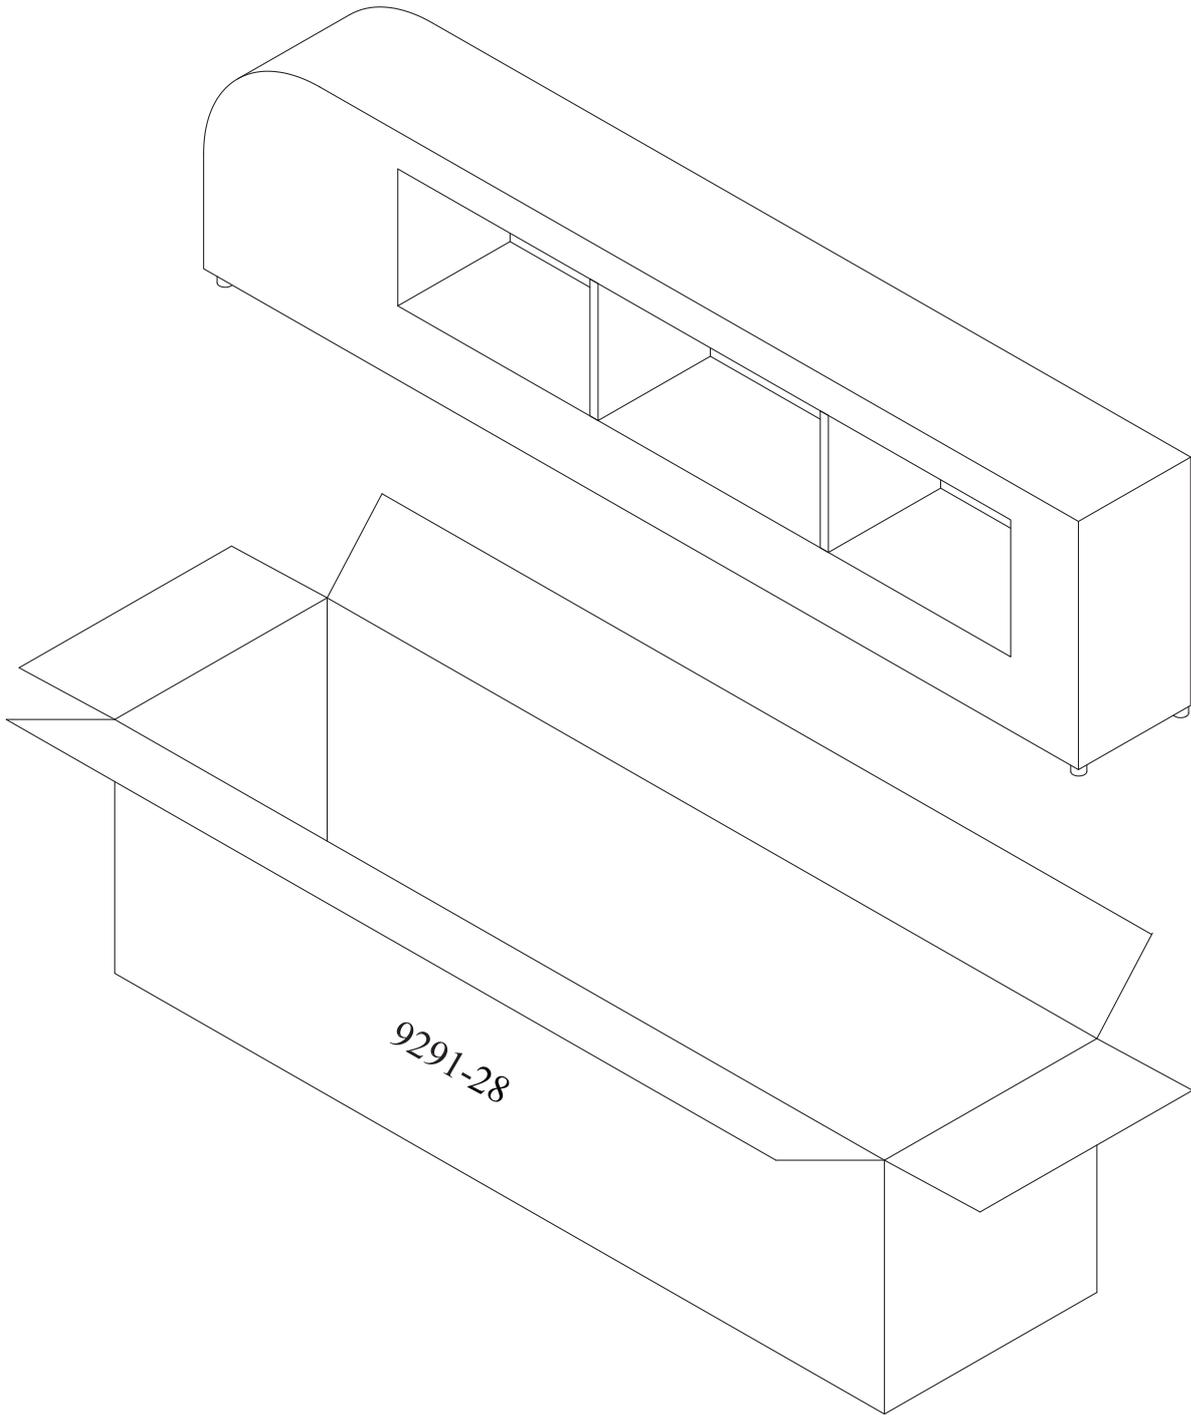


This product is manufactured by HOUS for **ROOMS TO GO | KIDS™**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR www.roomstogo.com
WITH SERVICE OR PARTS REPLACEMENT REQUEST

ASSEMBLY INSTRUCTION


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

STEP 1:

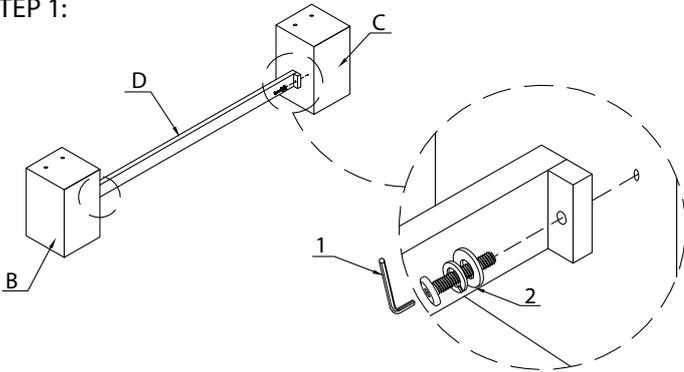


Attach the Cross bar (D) to the Left Headboard Leg (B) and the Right Headboard Leg (C). Tighten bolts with Allen Key.

STEP 2:

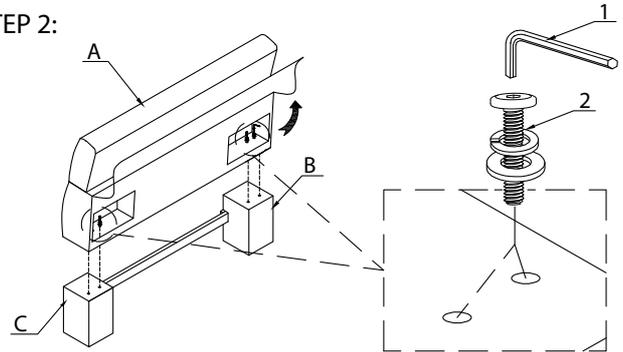


Open the cover behind the headboard. Place the Left Headboard Leg (B) and the Right Headboard Leg (C) into position. Tighten bolts with Allen Key. Then close the cover.

STEP 3:

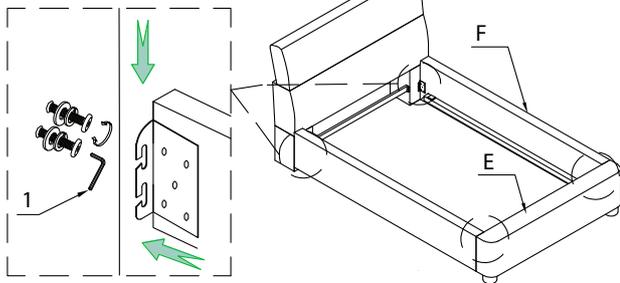


Loosen bolts on Headboard Leg (B, C) and Footboard (E), place side bed rails (F). Tighten bolts on Headboard leg & Footboard with Allen Key.


Headboard

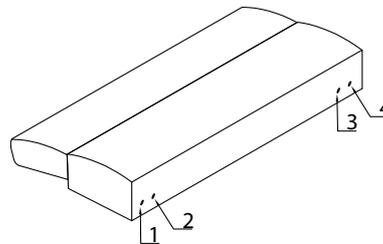


Legs

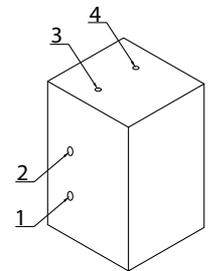


Footboard

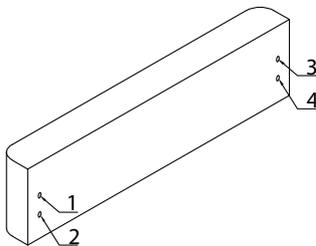


Rails

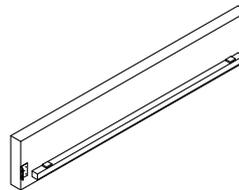

Cross bar

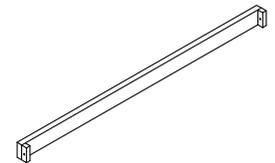


STEP 4:

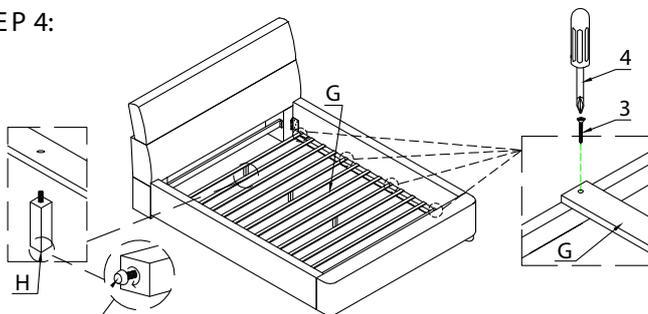

Adjustable leveler

Install the Support Leg (H). Place Straight slat (G) in middle. Then secure it with screw onto side bed rail.

COMPLETED

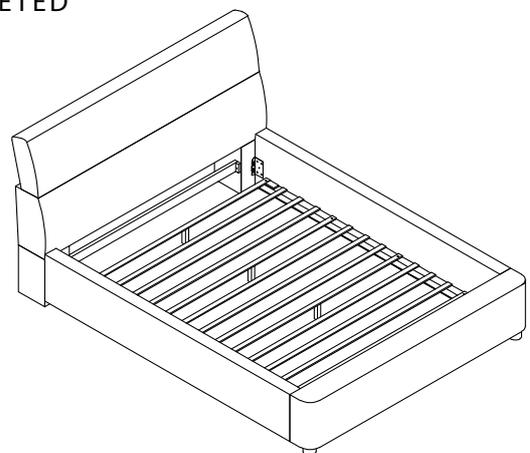

This product is manufactured by HOUS for **ROOMS TO GO | KIDS™**


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WITH SERVICE OR PARTS REPLACEMENT REQUEST

www.roomstogo.com

ASSEMBLY INSTRUCTION

*****Caution:**Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

STEP 1:

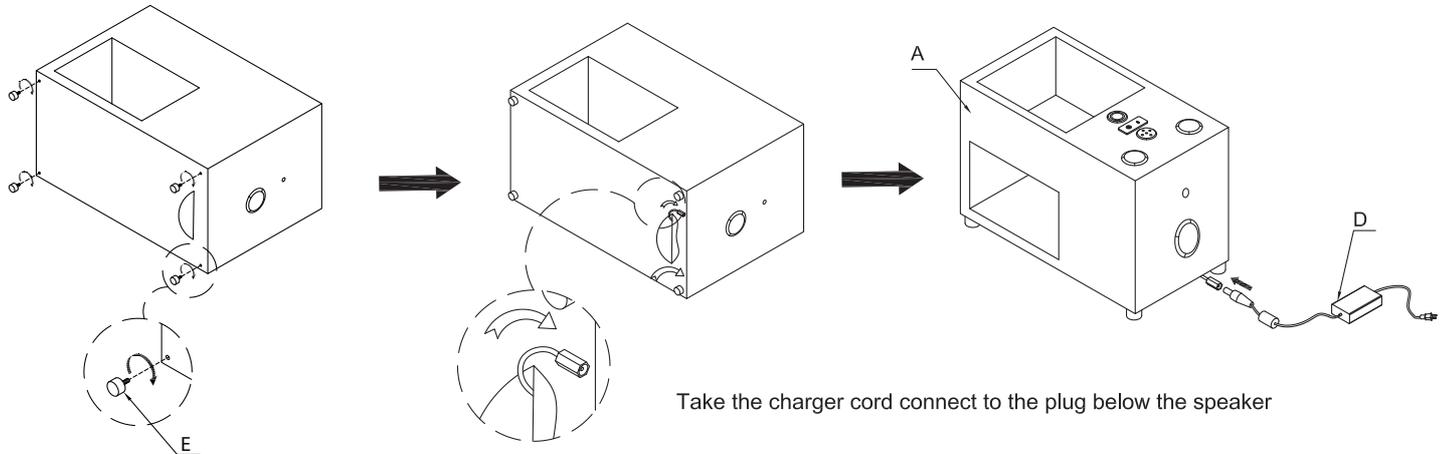


STEP 2:

Connect the led light into position and put the seat into position. Connect to the Speaker via the bluetooth.

* FUNCTIONS AND OPERATION OF CONTROL PANEL THE SPEAKER

| Number | Icon | Function |
|--------|------|--|
| 1 | | To turn on/off the unit; to play/stop |
| 2 | | To decrease the volume |
| 3 | | To increase the volume |
| 4 | | Touch to return to the previous track; hold to fast rewind through the current track |
| 5 | | Touch to jump to the next track; hold to fast forward through the current track |

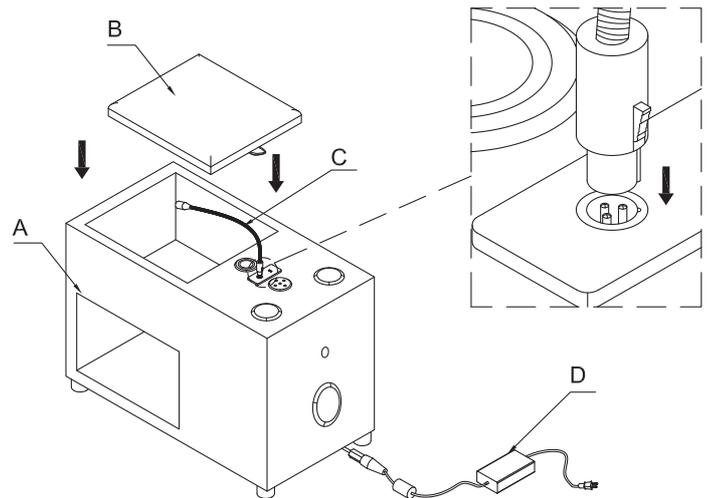

* BASIC OPERATION:

- When power on, the power button will be red;
- Press power button for 2 seconds, the other buttons will change from no light to having blue lights and the power button will be red and flashing. This indicates the unit is searching in the Bluetooth mode;
- The Remo Bluetooth device name is eMoMo, code is 0000. When pairing with the Bluetooth device, the power button red light will be off, the blue light will be on and a signal sound will be made to indicate a successful pairing to the Bluetooth device;
- Touch slightly to play or pause the audio file;
- Touch power button for 2 seconds again to turn off the unit.

- The method of quick disconnect bluetooth: Touch & hold ON/OFF button for 2 seconds.


This product is manufactured by HOUS for **ROOMS TO GO | KIDS™**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR www.roomstogo.com WITH SERVICE OR PARTS REPLACEMENT REQUEST

ASSEMBLY INSTRUCTION

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

COMPLETED

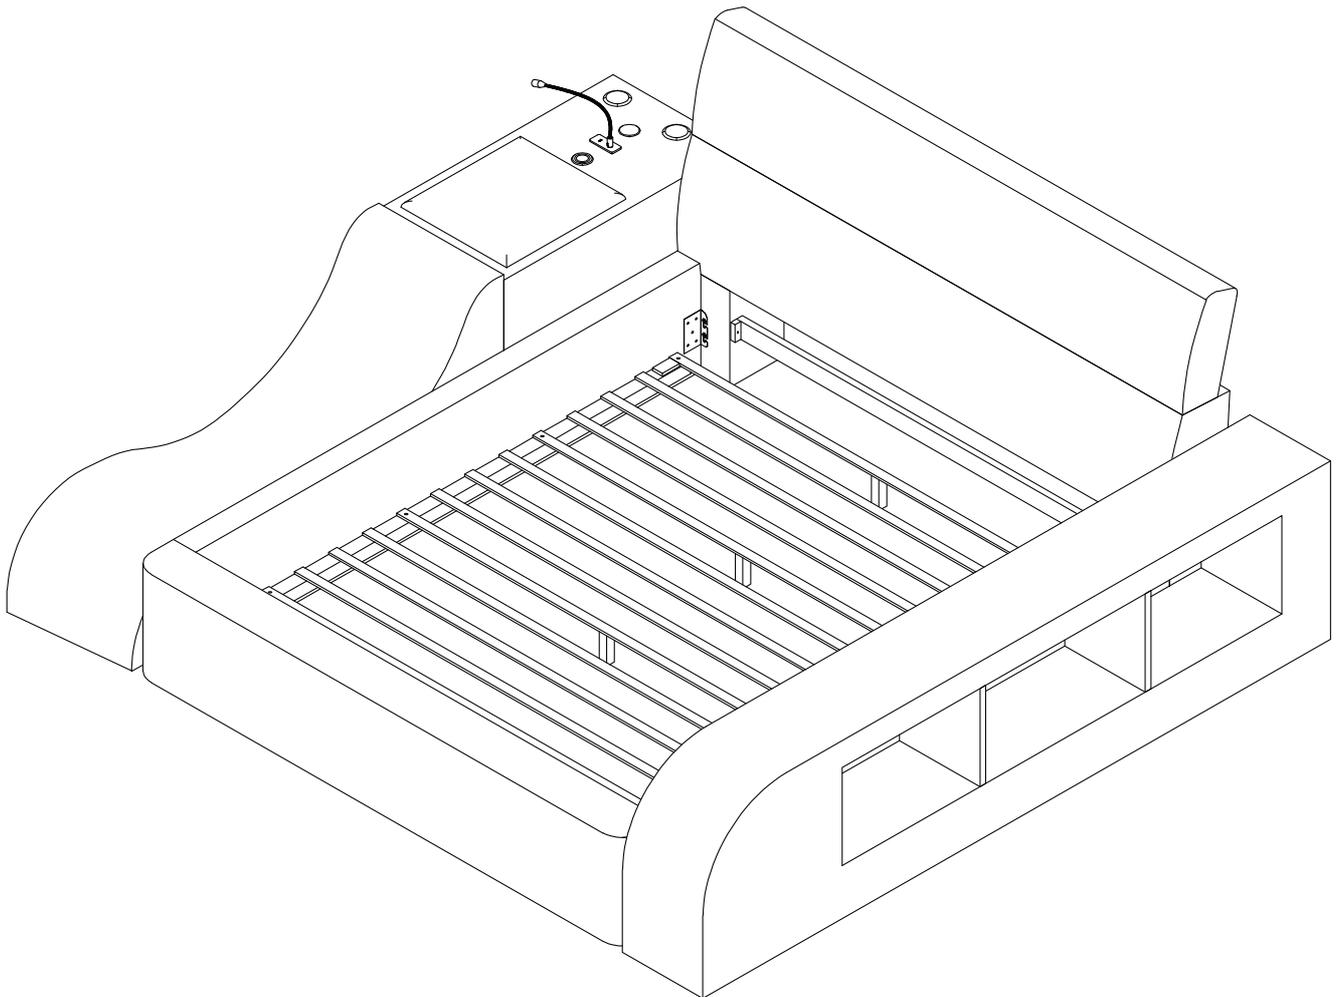

This product is manufactured by HOUS for **ROOMS TO GO | KIDS™**

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR www.roomstogo.com
WITH SERVICE OR PARTS REPLACEMENT REQUEST

ROOMS TO GO KIDS

Manufactured for Rooms To Go Kids



WARNING

Misuse can result in FIRE or DEATH by ELICTRICAL SHOCK

ELECTRICAL RATING: 100-240V~50/60Hz 1.5AMPERES

ShenZhen Green Power Electronic Technology Co.,Ltd

POWER SUPPLY :ZBHWX-A120040-A

Read all instructions before using this furnishing.

DANGER - To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
4. To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children. This is not a toy.
9. Plug directly into a compatible electrical socket.
10. Do not modify the plug or use any adapters.

ROOMS TO GO KIDS

Manufactured for Rooms To Go Kids



WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

CLASIFICACION ELECTTRICA: 100-240V~50/60Hz 1.5AMPERES

ShenZhen Green Power Electronic Technology Co.,Ltd

CABLE DE ALIMENTACION: ZBHWX-A120040-A

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO – Para reducir el riesgo de descarga electrica:

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

1. Desenchufe del tomacorriente antes de colocar o quitar partes.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilizar cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete.
9. Enchúfelo directamente a una toma de corriente compatible.
10. No modifique el enchufe ni utilice adaptadores