
CARBON OPTIX

TWIN GAMING LOFT BED WITH LED LIGHT AND ACCESSORIES

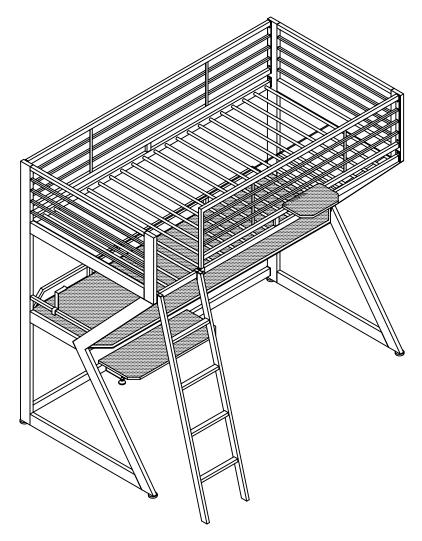

Use only correct mattress dimensions:
Twin size mattress- 74" - 75" long and 37-1/2"-38-1/2" wide

36212619 BLACK / 36212621 WHITE TWIN GAMING LOFT BED WITH LED LIGHT AND ACCESSORIES QTY PART# DESCRIPTION **IMAGE** STYLE# LEFT SIDE FRAME 1 RIGHT SIDE FRAME 2 3 **BASE FRAME** 1 1 4 DESK TOP WITH LED LIGHT 5 1 **BACK GUARDRAIL** 1 6 FRONT GUARDRAIL 31261B/ 31261W 7 1 **BOTTOM BAR** 8 1 **LADDER** 9 1 **BIG SHELF** 10 SMALL SHELF 1 11 **HEADPHONE HOOK** 1 12 SUPPORT BAR 2 13 1 LED POWER PLUG **E701 REMOTE CONTROL** 14 WITH LITHIUM BATTERY Type:CR2025

MATTRESS AND BUNKIE BOARD CHART

PACKAGE	DESCRIPTION	TOP BED	BOTTOM BED
36212619 BLACK	Twin Gaming Loft Bed With LED Light and Accessories	Twin Mattress Twin Bunkie board recommended	NA
36212621 WHITE	Twin Gaming Loft Bed With LED Light and Accessories	Twin Mattress Twin Bunkie board recommended	NA

Use only correct mattress dimensions:

Twin size mattress- 74" - 75" long and 37-1/2"-38-1/2" wide

Twin size Bunkie board-74" long and 37-1/2" wide



WARNING DANGER:

Failure to follow these warnings and assembly instructions could result in serious injury or death. To help prevent serious or fatal injuries from entrapment or falls:

- Read all instructions before assembling bunk bed and keep these instructions for future reference.
- Before each usage or assembly, inspect bunk bed for damaged hardware, loose joints, missing parts, or sharp edges. DO NOT use bunk bed if any parts are missing or broken.
- DO NOT use substitute parts. Contact your local Rooms To Go or visit www.ROOMSTOGO.com for replacement parts and instructional literature if needed.
- Follow the information on the warnings appearing on the upper bunk end structure and on the carton. DO NOT REMOVE WARNING LABEL FROM BED.
- Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
- Ensure thickness of mattress and does not exceed 10" and mattress surface is at least 5 inches (127mm) below upper edge of guardrails for the upper bunk.
- Do not allow children under 6 years of age to use the upper bunk.
- Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
- Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- Limit top bunk use to one person.
- Always use the ladder for entering and leaving the upper bunk.
- Use of a night light may provide added safety precaution for a child using the upper bunk.
- Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
- The use of water or sleep flotation mattresses is prohibited.
- This bunk bed meets all the requirements of ASTM 1427.



STRANGULATION HAZARD:

Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts and jump ropes.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by WRLW for Version 03-2023/04/20



Pre - Assembly

Warning:

The bed slats included with this bed will support a mattress alone, this bed does not require Bunkie boards.

Read all the instructions, identify all components, choose your configuration, and be sure you have all parts prior to assembly.

Two people are needed to assemble.

Tools Needed

4mm allen wrench (included) 5mm allen wrench (included)


MAKE SURE ALL BOLTS ARE TIGHTENED COMPLETELY

CARE INSTRUCTIONS:

Dust with a clean, soft cloth. Avoid the use of all abrasive cleaners.

PLEASE CONTACT YOUR RETAIL STORE WITH SERVICE OR PARTS REPLACEMENT REQUEST

Parts List

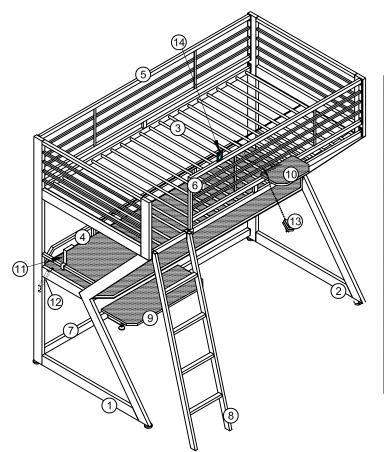


NO.	ITEM DESCRIPTION	IMAGE	QTY
Α	1/4" _X 20x5/8"	((()	21
В	1/4"x20x1-1/4"		4
С	1/4"x20x2-1/4"		2
D	5/16"x18x1-1/4"		2
Е	1/4"x22mm	\bigcirc	1
F	4x4x60mm		2
G	5x5x60mm		1
Н	5/16"x18xø2"		4
J	5/16"x18x¢1-1/2"		2

Hardware Pack Location:

Hardware Pack Location:

SKU# STYLE# DESCRIPTION


36212619 31261B TWIN GAMING LOFT BED WITH LED LIGHT 36212621 31261W TWIN GAMING LOFT BED WITH LED LIGHT

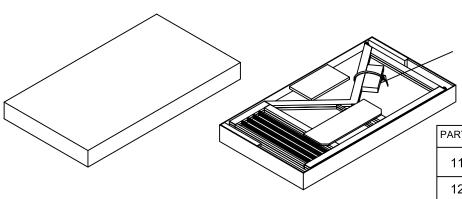



31261B/31261W Hardware Pack & parts 11, 12 & 13 location


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST


This product is manufactured by WRLW for ROOMS TO GO | KIDS | Version 03-2023/04/20 | PAGE 06 of 16

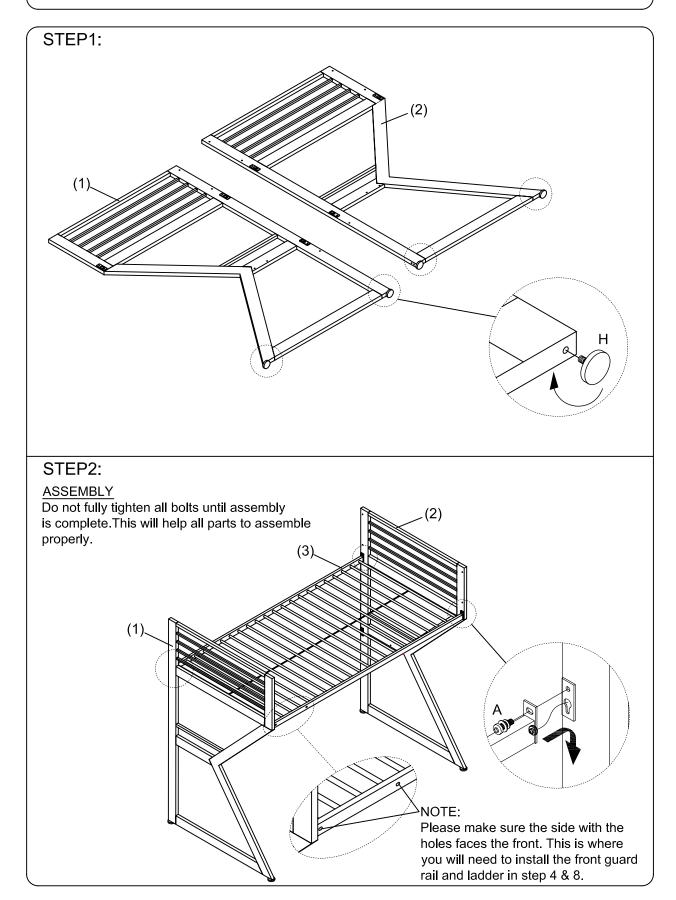

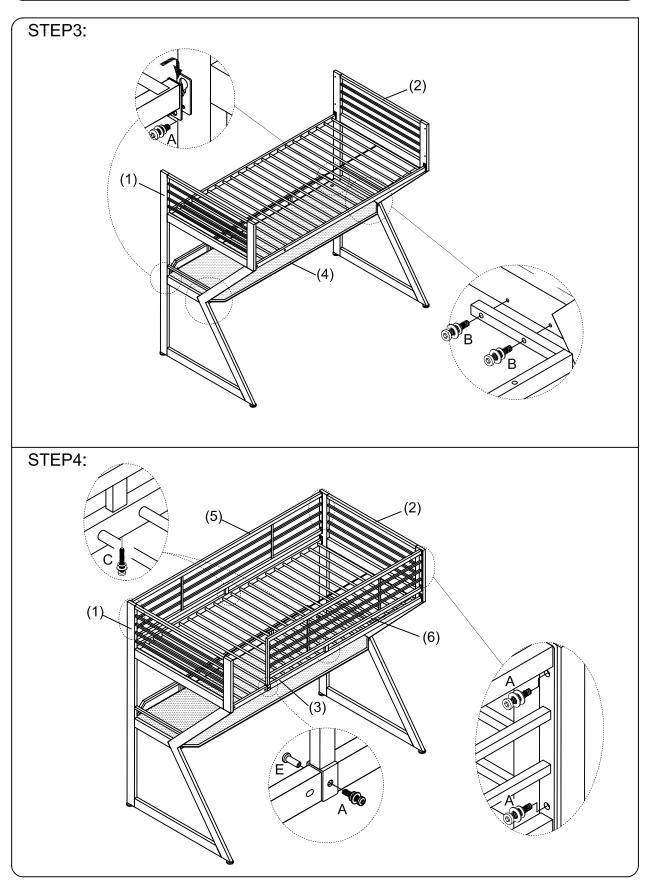

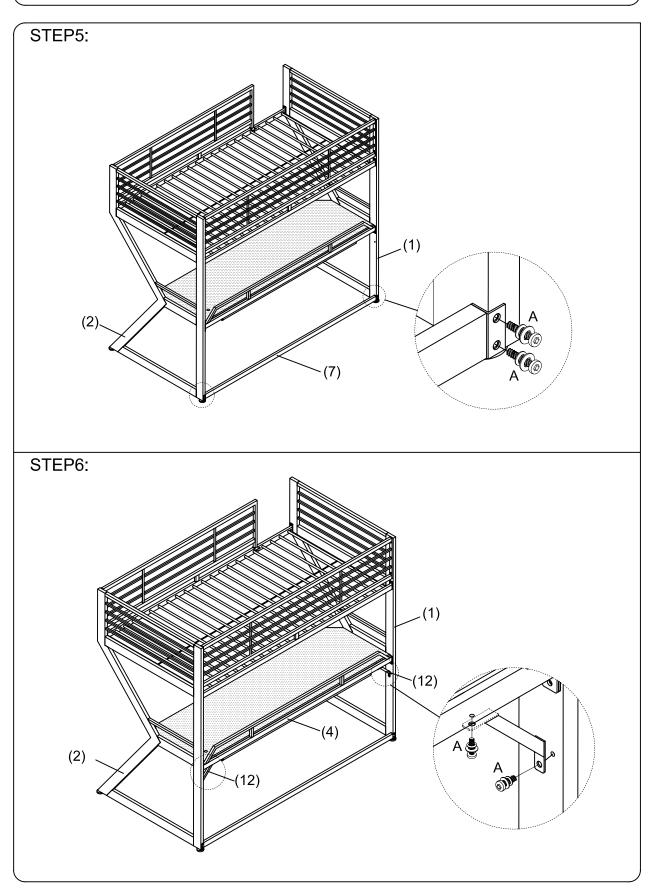


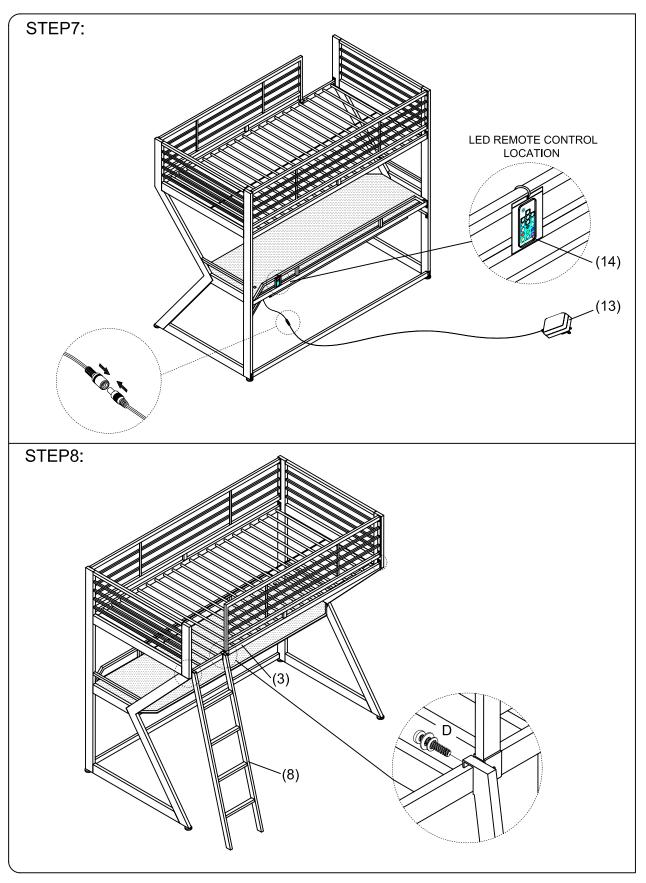

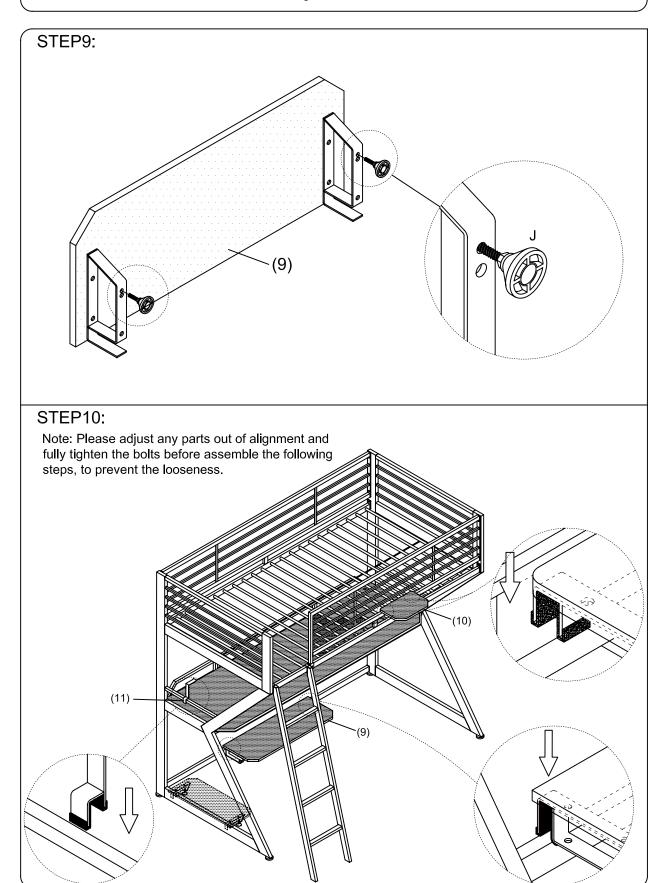


Manual:

Panel description

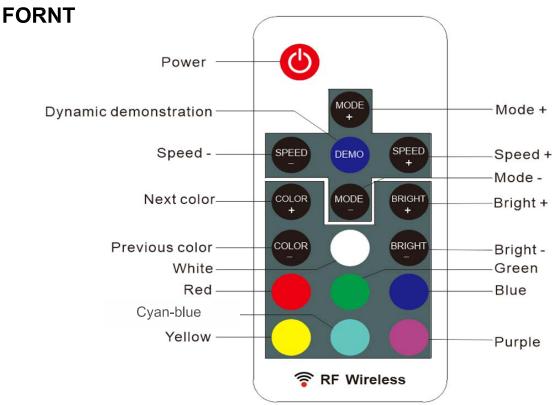

BACK

TO REPLACE 3V CR2025 LITHIUM BATTERY

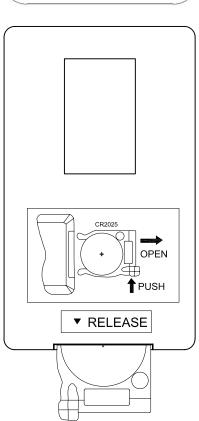

Manual:

Key description

(+-Cycle Pick)

Key	Function	Explanation
POWER	On/Off	The status information will be saved when shutdown, and the state of the last shutdown will be restored when startup
MODE+/MODE -	Switch mode	Built-in 15 modes (static monochrome, monochrome gradient, monochrome jump 3 modes 7 colors adjustable)
COLOR+/COLOR-	Switch color	In red, green, blue, yellow, blue, purple, white 7 color cycle selection (in static monochrome, monochrome gradient, monochrome jump 3 modes adjustable)
SPEED+/SPEED-	Switch speed	Level 1-10 speed cycle selection
BRIGHT+/BRIGHT-	Adjust brightness	Level 0-9 Brightness cycle selection (0 equals off)
DEMO	Dynamic demonstration	Seven color demo mode
COLOR KEY	Color selection	Turn on the static colors of red, green, blue, yellow, Cyan-blue, purple or white.

Manual:

Mode declaration NO Model name **Explanation** 1 Static monochrome COLOR+/COLOR- key to select a static color Single color gradient COLOR+/COLOR- key to select a static color 2 3 Red, green and blue lights up slowly and fade out slowly RGB gradual change YCMgradual change Yellow, Cyan-blue and purple lights up slowly and fade 4 out slowly **RGBYCMWgradual** Red, green, blue, yellow, Cyan-blue, purple and white 5 lights up slowly and fade out slowly RGBDifferent color cycles light The cycle of red, green and blue gradually lights up 6 up gradually YCMDifferent color cycles light The cycle of yellow, Cyan-blue and purple gradually lights 7 up gradually **RGBYCMW Different color** The cycle of red, green, blue, yellow, Cyan-blue, purple and 8 cycles light up gradually white gradually lights up Monochrome flash and bright off COLOR+/COLOR- key to select flash color 9 cycle RGB three colors flash and Red, green and blue flash and bright off cycle 10 bright off cycle 11 YCM three colors flash and Yellow, Cyan-blue and purple flash and bright off cycle bright off cycle 12 RGBYCMW seven colors flash The cycle of red, green, blue, yellow, Cyan-blue, purple and and bright off cycle white flash and bright off cycle 13 RGB three colors are lit up in Red, green and blue are lit up in cycles cycles 14 YCM three colors are lit up in Yellow, Cyan-blue and purple are lit up in cycles cycles RGBYCMW seven colors are lit The cycle of red, green, blue, yellow, Cyan-blue, purple and 15 up in cycles white are lit up in cycles

Warning:



Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

12VDC/2A eMoMo Technology Co.,Ltd R241-1202000U

Read all instructions before using this furnishing.

DANGER - To reduce the risk of electric shock

1.Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1. Unplug from outlet before putting on or taking off parts.
- 2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- 3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
- 4. To disconnect, turn all controls to the off position, then remove plug from outlet.
- 5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- 6. Do not strain or stretch electrical cord.
- 7. Do not use extension cords or power strips.
- 8. Keep out of reach of children. This is not a toy.
- 9. Plug direcly into a compatible electrical socket.
- 10. Do not modify the plug or use any adapters.

Warning:



El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

12VDC/2A eMoMo Technology Co.,Ltd R241-1202000U

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO – Para reducir el riesgo de descarga electrica:

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

<u>ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:</u>

- 1. Desenchufe del tomacorriente antes de colocar o quitar partes.
- 2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- 3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- 4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- 5.Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- 6. No fuerce ni estire el cable eléctrico.
- 7. No utilizar cables de extensión o tomas de corriente.
- 8. Mantener fuera del alcance de los niños. Esto no es un juguete.
- 9. Enchúfelo directamente a una toma de corriente compatible.
- 10. No modifique el enchufe ni utilice adaptadores.