## XRocker L-SHAPE GAMING DESK



**VENDOR CODE: ABAY** 

SKU#: 37751509/37851501/37951503

## **NEED HELP?**


EMAIL: SUPPORT@XROCKERGAMING.COM

**BESOIN D'AIDE?** 


COURRIEL: SUPPORT@XROCKERGAMING.COM

¿NECESITAS AYUDA?


CORREO ELECTRÓNICO: SUPPORT@XROCKERGAMING.COM

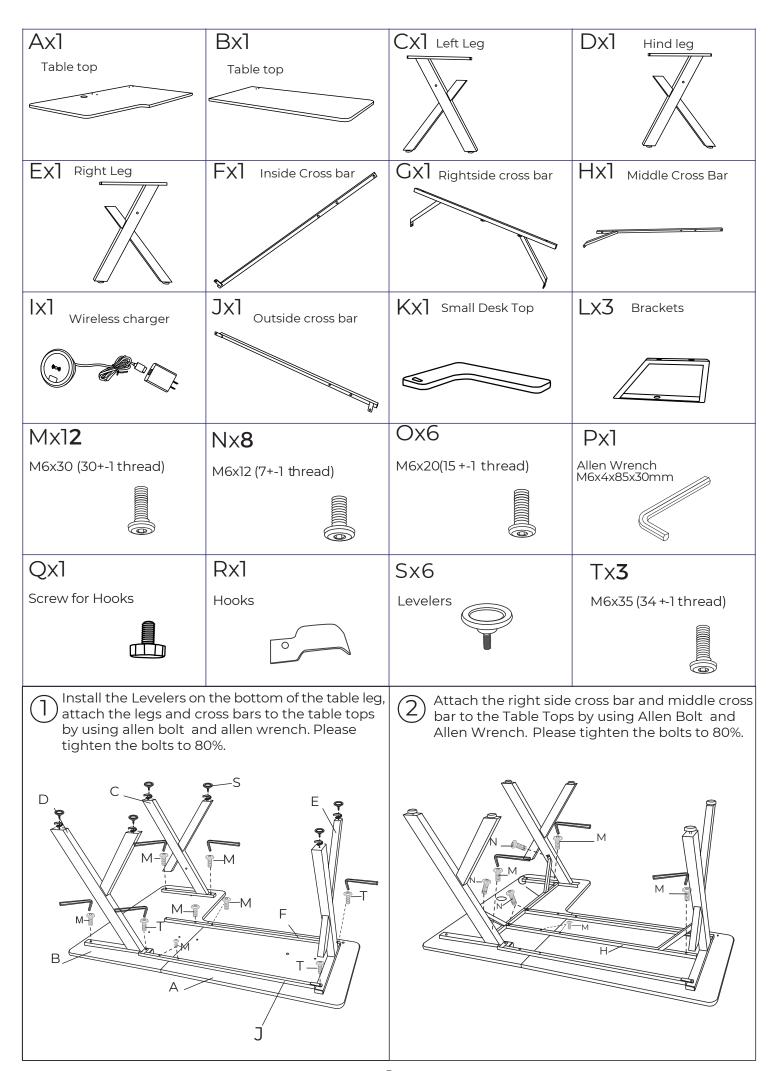




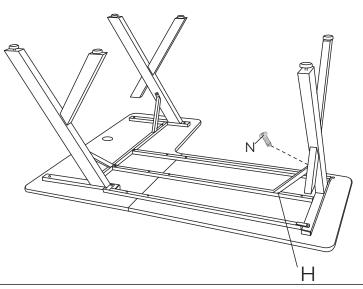

Attach the brackets to the Small Desk Top by using Allen Bolt and Allen Wrench.
Please fully tighten the bolts.

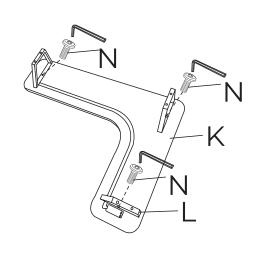


Please Push the wireless charger into the table top. Attach the hooks to the table top by using hook screw.

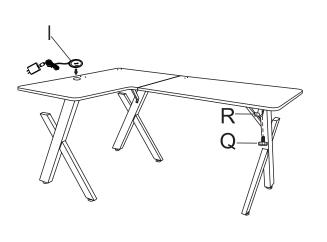

Attach the Small Desk Top to the table top by using Allen Bolt and Allen Wrench. Please fully tighten the bolts.



7 Then Assembly is finished.

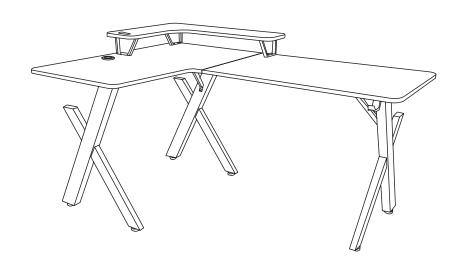

To turn the LED Lights on (The control button of the light strip needs to be long pressed for three seconds to turn it on):

- 1. Plug the USB cord into the Qi Charger USB port on the top of the desk
- 2. Plug the Qi Charger into the wall using the power supply cord.

For additional details, please refer to the Qi Charging Manual included in the box

**Caution:** The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **NEED HELP?**

EMAIL: SUPPORT@XROCKERGAMING.COM

**BESOIN D'AIDE?** 

COURRIEL: SUPPORT@XROCKERGAMING.COM

¿NECESITAS AYUDA?

CORREO ELECTRÓNICO: SUPPORT@XROCKERGAMING.COM