

Cushy Cloud

L A R G E



JAXX


GOT QUESTIONS?

✉ SERVICE@JAXXLIVING.COM

☎ 1.866.384.2802




Cushy Cloud Set-up Instructions

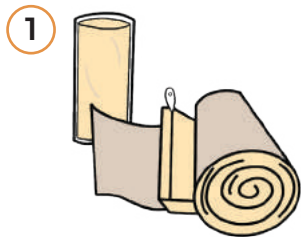

1
Unroll the plastic film from the foam. DO NOT CUT OPEN or remove the protective liner. The foam can take 24 hours to expand fully, but a cover can be applied after 20 minutes.



2
Flip & knead the foam to introduce air back into the micro cushions.

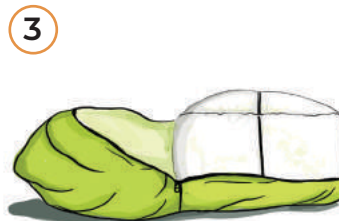

3
Open the cover and spread it out on the floor. Place the bean bag in the cover. The liner zipper and cover zipper should be perpendicular to each other, with the cover zipper running parallel to the floor.



4
Pull the cover over the bean bag and zip it closed. Enjoy!

Q: I opened my bean bag and it still has some hard clumps in the foam, is this normal?

A: Your foam bag may take 24-48 hours to fully expand from its compressed packaging. Regular flipping and fluffing will help introduce air back into the foam and release any lumps.

Q: My bean bag is too firm for me, can I remove foam to make it softer?

A: Yes you can. While your foam bag should be perfect right out of the box, some customers may choose to remove some foam to make the product sink in more. To remove foam, insert a paperclip into the zipper head on the inner liner. Be ready with a large bag and plastic scoop / cup to scoop up the foam. Hold up the liner around the zipper and slowly zip open. Scoop out a small amount of foam / as desired. When done, zip the liner back up, put the cover back on and enjoy!

Q: My bean bag has gotten kind of hard, it's not as soft as it used to be.

A: Fluff regularly for the softest seat around! Whenever your bean bag needs it, flip it on to one side, push the foam down and around a bit to fluff it back up. Regular fluffing and flipping helps keep your product as comfy as possible. Enjoy!

Washing instructions (cover only): Machine-wash cold with mild detergent and hang dry. Do not bleach.



Protective
Inner Liner



Machine
Washable
Cover



Childproof
Zipper



One Year
Warranty