 





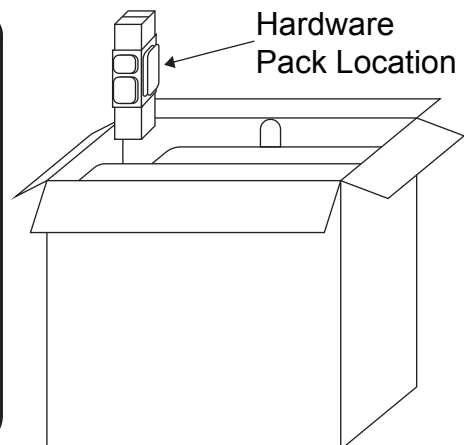 


VENTURE QUEST GAMING CHAIR



RTG SKU#	STYLE#	FINISH	ITEM DESCRIPTION
38002034	RCS2303-U6	BLACK	GAMING CHAIR
38302030	RCS2303-U6BL	BLACK	GAMING CHAIR
30402032	RCS2303-U6GN	BLACK	GAMING CHAIR

HARDWARE LIST				
A		ROUND HEAD BOLT 6x17x19mm	4 PCS	Box 2
B		FLAT WASHER 6x18mm	4 PCS	Box 2
C		ROUND HEAD BOLT 8x42x44mm	4 PCS	Box 4
D		FLAT WASHER 8x18mm	4 PCS	Box 3
E		ROUND HEAD BOLT 8x27x29mm	4 PCS	Box 3
F		ALLEN WRENCH	1 PCS	












DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (BLMD) for **ROOMS TO GO** | **KIDS**

Assembly Instructions - Important:

         
Carefully unpack and identify each component before attempting to assemble. Refer to parts list. Please take care when assembling the unit and always set the parts on a clean, soft surface. If you require any assistance with assembly, parts or information on other products, please visit our website: www.Roomstogo.com or call or write us.

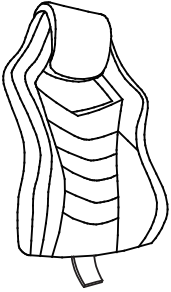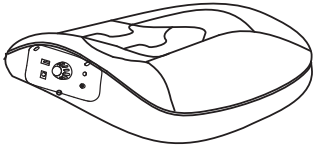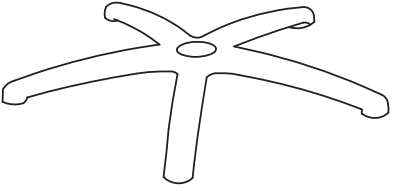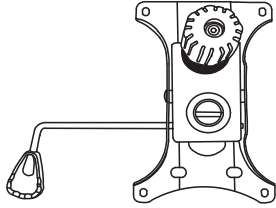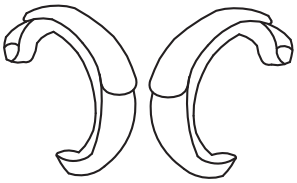	
1 (Backrest) - 1 Piece	2 (Seat) - 1 Piece
	
3 (Base) - 1 Piece	4 (Pneumatic Cylinder) - 1 Piece
	
5 (Bellows) - 1 Piece	6 (Seat Plate) - 1 Piece
	
7 - (Arms 7L & 7R) - 2 Pieces	8 (Caster) - 5 Pieces
	
9 (auxiliary cord) - 1 Piece	

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (BLMD) for ROOMS TO GO | KIDS

 
Step 1

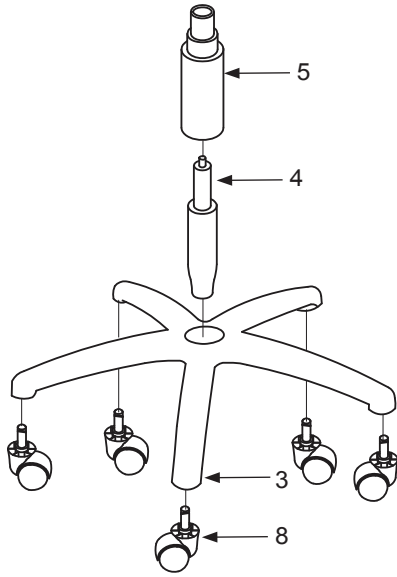

Insert five Casters (8) into Base (3), push hard until you feel or hear the Caster (8) snap into place. Insert Pneumatic Cylinder (4) into Base (3) and slip Bellows (5) over Pneumatic Cylinder (4).

Step 2

 
Box 2

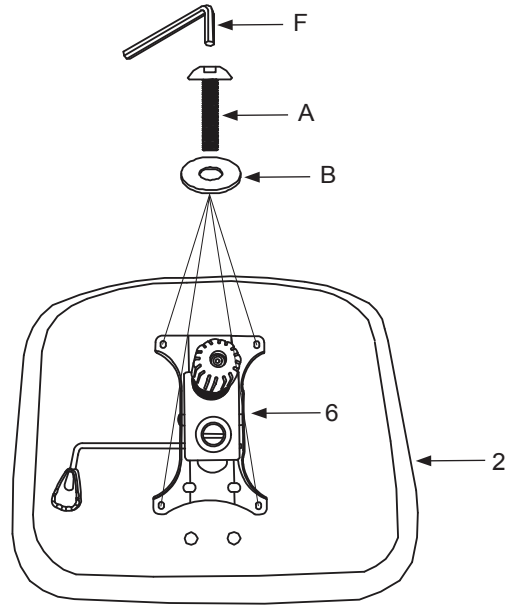

Attach Seat Plate (6) to Seat (2) using four Flat Washers (B) and four Round Head Bolts (A). FULLY TIGHTEN BOLTS USING ALLEN WRENCH (F).

Step 3

 
Box 3

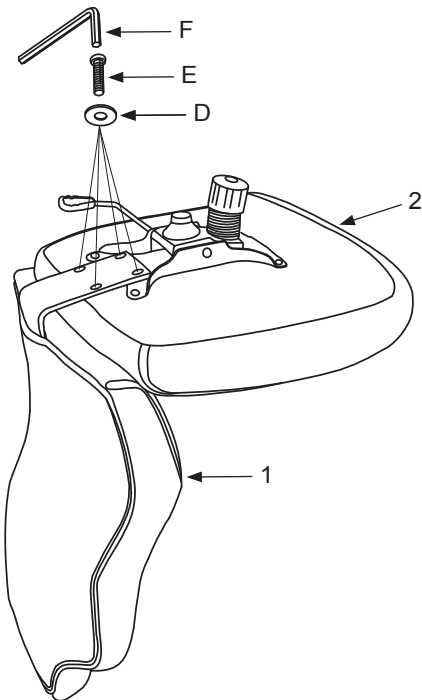

Attach Backrest (1) to Seat (2) using four Flat Washers (D) and four Round Head Bolts (D). DO NOT FULLY TIGHTEN BOLTS.

Step 4

 Box 4

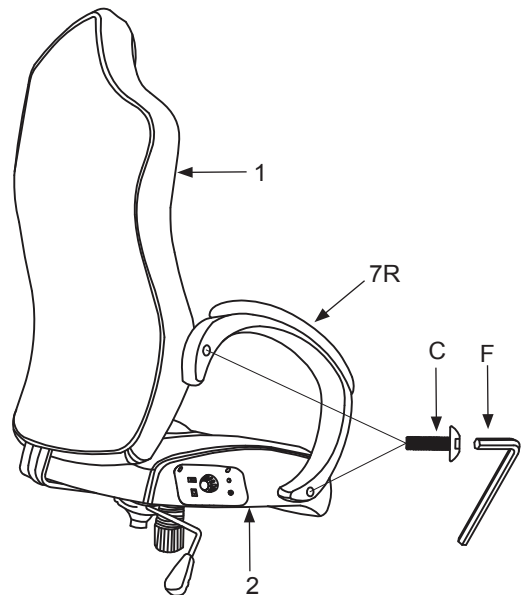


Attach Arms (7L & 7R) to Seat (2) and Backrest (1) using two Round Head Bolts (C) for each Arm (7). FULLY TIGHTEN BOLTS USING ALLEN WRENCH (F).

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST


This product is manufactured by (BLMD) for ROOMS TO GO | KIDS

 Step 5

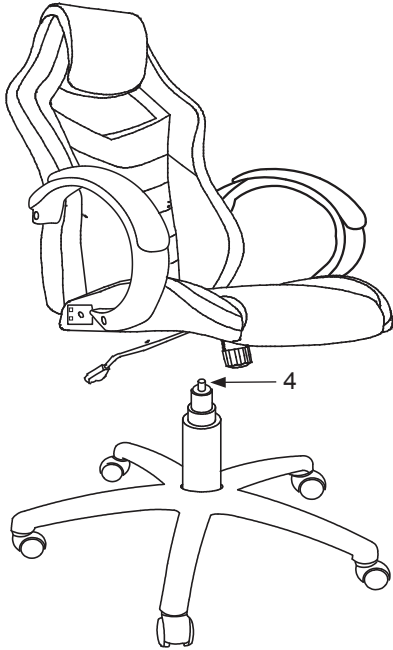

Place assembled seat onto Pneumatic Cylinder (4) and apply downward pressure.

 
Step 6

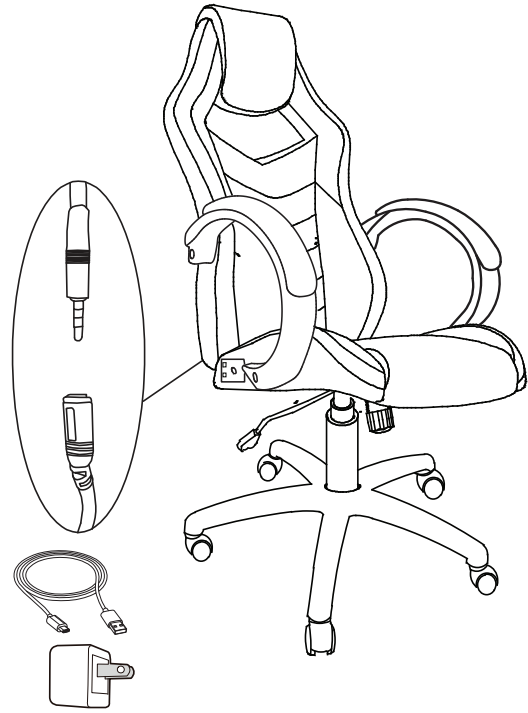

Connect auxiliary cord.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (BLMD) for **ROOMS TO GO** | **KIDS**

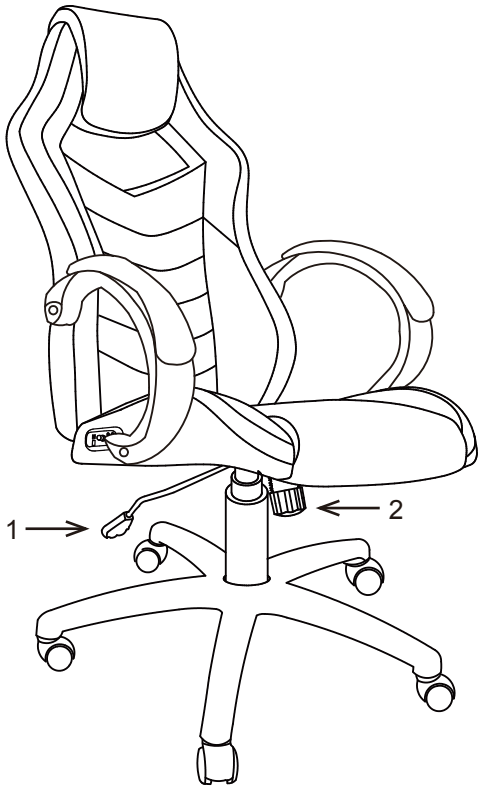 

FEATURE

• HEIGHT ADJUSTMENT

To raise seat remove pressure from seat and lift lever (1). To lower seat height sit on chair and lift lever(1).

NOTE: It is normal for chair to slightly lower under body weight.

• LOCKING TILT ADJUSTMENT

For individual comfort, this chair has been equipped with an adjustment that will allow the user to change the tension of the tilting feature. Turn knob (2) clockwise to increase tension and counter-clockwise to decrease or ease the tension. To lock return chair to the upright position and push lever (1) in. To unlock pull lever (1) out.

NOTE: Be careful not to loosen back tilt adjustment knob completely.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (BLMD) for **ROOMS TO GO** | **KIDS**

IMPORTANT SAFETY INSTRUCTIONS



WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

5 VDC / 2.0 A
BLUE IRON HOLDINGS LTD
BI12T-050200-BdU

Read all instructions before using this furnishing.

DANGER – To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
4. To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children. This is not a toy.
9. Plug directly into a compatible electrical socket.
10. Do not modify the plug or use any adapters.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (BLMD) for ROOMS TO GO | KIDS

INSTRUCCIONES DE SEGURIDAD IMPORANTES



WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

5 VDC / 2.0 A
BLUE IRON HOLDINGS LTD
BI12T-050200-BdU

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO – Para reducir el riesgo de descarga eléctrica:

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

1. Desenchufe del tomacorriente antes de colocar o quitar partes.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilizar cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete
9. Enchúfelo directamente a una toma de corriente compatible.
10. No modifique el enchufe ni utilice adaptadores.


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (BLMD) for ROOMS TO GO | KIDS

FEATURES

A- Control Panel

 - A1-Audio Input Jack
- A2- Volume Adjustment
- A3-5V DC Power Input Jack
- A4-Audio Output Jack
- A5-Bluetooth indicator light
- A6-USB Power Port

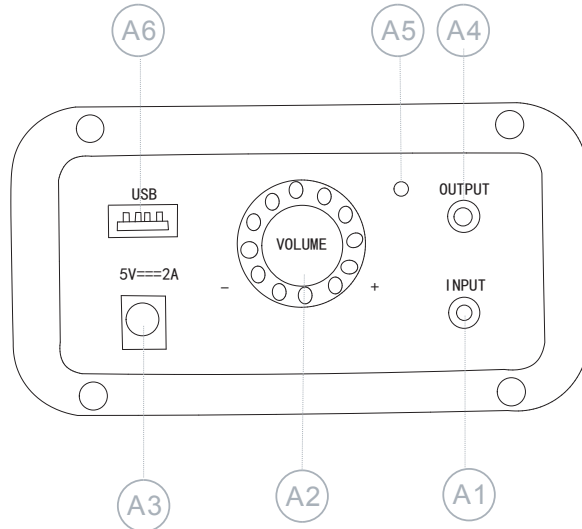

B- Accessories Supplied

- B1-3m3.5mm stereo male to 3.5mm stereo male cable(1pc)
- B2-INPUT:100-240V AC 50/60Hz
OUTPUT:5V DC 2000mA Main POWER Adapter.



+

B1

+



B2

C- Audio Specification

- Signal-to-Noise Ratio(Amplifier):Satellite :> 60dB
- Frequency Response: 60Hz~20kHz
- Distortion: Satellite.: < 1% (F=1 kHz)
- Input: DC 5V / 2A

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (BLMD) for ROOMS TO GO | KIDS

FUNCTIONS:

Side control panel with volume input jacks.
Ergonomic design with full back support.
Easy to clean heavy duty upholstery grade PU cover.
Play your iPhone, iPod touch, iPad or other device enabled with Bluetooth technology wirelessly through your chair.
Control your music directly from your Bluetooth device.
Connect device without ever going near chair.

ATTENTIONS:

Bluetooth connection has a 30ft. range of virtually unlimited wireless listening in your home.
The bluetooth indicator light(A4) will be automatically slow flashing when connect the power adapter.

READ BEFORE USAGE:

Excessive use of audio equipment could lead to hearing loss.
Excessive sound pressure from earphones and headphones can cause hearing loss.
Children under the age of 13 should not use this product without adult supervision.
Strictly for indoor use. Do not expose to direct sunlight, moisture or extreme temperatures.
If the cover becomes wet, disconnect the power immediately and don't use until it is completely dry.
Do not attempt to remove the cover or any components. Removal of the cover or tampering with components puts you at risk for injury or death from electrical shock.

SET UP:

1. Lift all the spareparts out of box.
2. Review the set up diagrams to familiarize yourself with the chair's component,accessories, and set-up.
3. Please complete steps 1-7 to assemble the chair.
4. Unpack the power adapter and connect it to the main power outlet then to the power jack on the control panel(A5).
5. Switch Power On/Off Button Switch and Volume Adjustment(A2) and confirm that the power indicator light(A3) and bluetooth indicator light(A4) are on.
6. Follow the connection diagrams. They show how to connect the X-701L to the audio source of your choice.
7. Adjust the volume levels to your preference---start rocking.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST



This product is manufactured by (BLMD) for **ROOMS TO GO** | **KIDS**

WIRE MODE CONNECTION GUIDE

DIAGRAM 1

PORTABLE DEVICES

  MP3/CD/DVD/GAMES/PSP

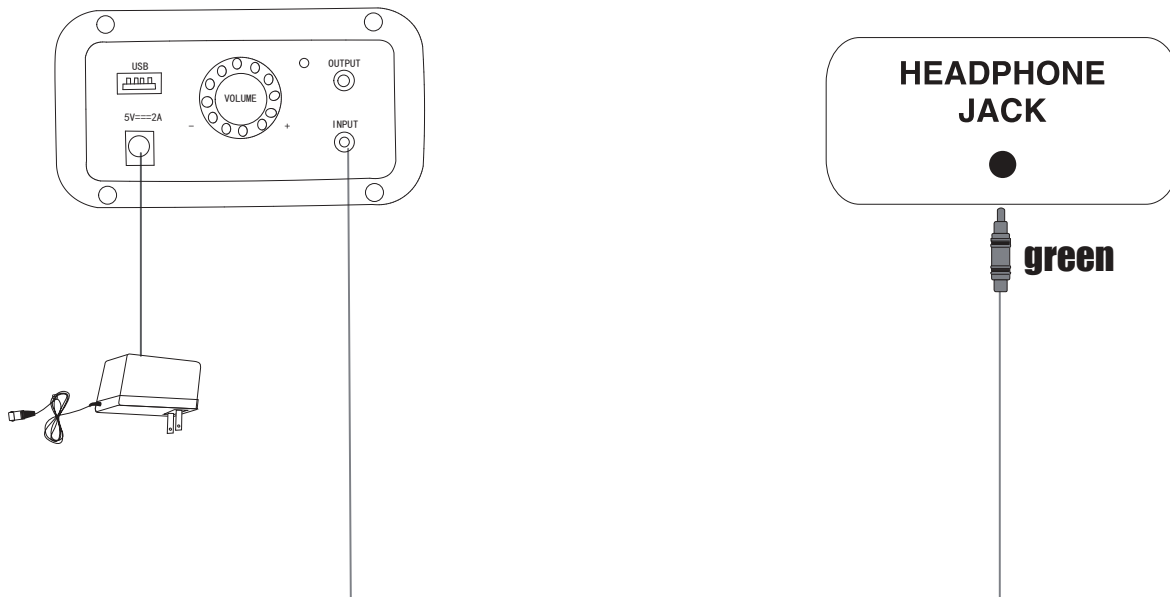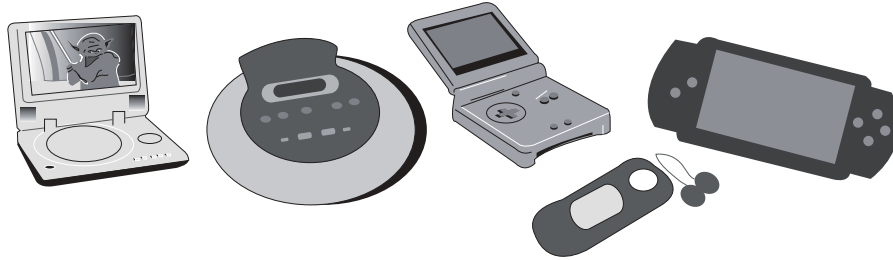



DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (BLMD) for ROOMS TO GO | KIDS

BLUETOOTH MODE CONNECTION GUIDE

DIAGRAM

  Bluetooth Device

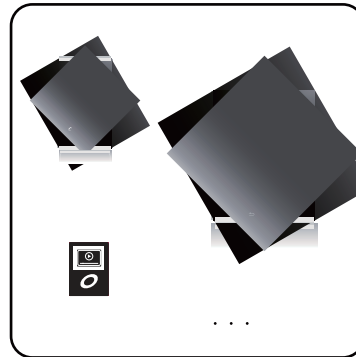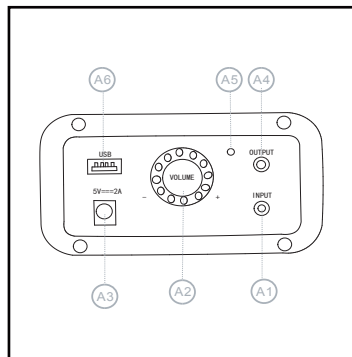

Pairing Your X-701L:

Only 1 device can be paired to X-701L at a time, to pair X-701L with a mobile device, refer to the Bluetooth pairing procedures in corresponding mobile phone or music player user manual and follow the steps below:

- Make sure that there is no wired line that insert in your device before using bluetooth.
- Make sure that the power adapter is well connected while you use bluetooth function since the bluetooth indicator light will be automatically slow flashing and the audio also will be automatically under the bluetooth Status when connect the power adapter.
- Select the device name "X-701L" on the screen of your device, add the unit to the your device's paired device list.
- When pairing is successful, the blue LED indicator will stay on.
- Confirm the connection on your device.
- Your X-701L is now connected and ready to play music! Just play music on your device as you normally would and the sound will come out of your X-701L!

Keep in mind that X-701L has a 30-feet / 10 meters range.

Reconnecting Your Device

If you move out of range, or turn off the Bluetooth feature on your mobile device, X-701L will disconnect from your device. To reconnect, simply access the Bluetooth Manager on your device and select "X-701L" device listed.

Changing Connected Device

If you want to switch from one device to another, follow the steps below:

- End the existing Bluetooth connection with the connected device, access the Bluetooth Manager and disable the Bluetooth function of the device.
- The X-701L can now be connected to a different device.
- Follow the directions in "PAIRING YOUR X-701L" to connect a different device.

Out of Range or Lost Signal

If the music device is out of range(beyond 30-feet / 10 meters) of the X-701L, or there is something blocking the Bluetooth signal, the LED light will turn off to indicate that the Bluetooth connection with the music device has been lost.

To avoid a lost connection:

- Move the music device back into the range(within 30-feet / 10 meters), and/or make sure there is a clear line of sight and that there are no obstructions between the X-701L and the music device.
- Within 30 seconds , the connection will automatically be re-established and the blue LED light will turn on. For your own device ,you need to re-start your music player .
- If the connection is lost for more than 30 seconds , the connection will need to be re-established, follow the directions in "Reconnecting Your Device".

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (BLMD) for ROOMS TO GO | KIDS

TROUBLE SHOOTING

- Unable to connect to game console -

Most game consoles are shipped from the manufacturers with an Audio/Video RCA cable. The A/V RCA cable has three RCA plugs: a video plug (yellow) and two audio plugs (red and white). If your gaming console came with an A/V RCA cable, please follow the instructions supplied by the manufacturer for setting it up and connecting it to the TV. Please note that you must leave the red and white audio jacks on the A/V cable UNCONNECTED. Once the console is properly connected to your TV, please follow the diagram in the illustrated X-701L Set-up guide to connect the gaming console to the X-701L. If your gaming console was shipped with a coaxial cable, instead of an A/V RCA cable, you must follow an alternate set-up procedure (coaxial cable is the same type of cable that is used to connect a VCR to a TV). You will quickly recognize if your gaming console uses this type of cable. It connects the gaming console directly to the television and carries both the audio and video signal over a single cable. If your gaming console uses a coaxial cable, you CAN NOT connect it directly to the X-701L. Instead, you must

Use an intermediary A/V device (such as a TV, VCR, DVD, TiVO, etc)

- a. Connect your gaming console to the intermediary A/V device via the coaxial cable.
- b. Connect the X-701L to the 'Audio Out' jack on the intermediary A/V device.
- c. Follow diagram 2 in the X-701L set-up guide to connect the X-701L to the intermediary A/V device and finalize the setup.

If your gaming console is attached to an HD TV with an HDMI cable. You will need to connect the chair using either the audio out jacks on the back of the TV or by plugging into the headphone jack on the front of the TV.

- Unable to hear any sound from the X-701L -

1. Check to ensure that the power adapter is properly connected to the power jack (A5). When properly connected, the indicator light (A3) on the control panel should light up when the power switch is turned on. If the indicator light (A3) does not light up, try to use another power outlet in your home.
2. Make sure the power unit is turned on and indicator light on the control panel is lit. If it is not, please press the power switch on the control panel.
3. When you use wire mode, just insert the wired lined on control panel (A1) and your device
4. When you use Bluetooth mode, just insert the wired lind on control panel (A1) and your device.
 - Make sure that there is no wired line that insert in your device before using bluetooth.
 - Make sure that the power adapter is well connected while you use bluetooth functation since the bluetooth indicator light(A4) will be actumatically slow flashing and the audio also will be automatically under the bluetooth Status when connect the power adapter
 - Make sure the volume of X-701L and the volume of mobile music device is set to a comfortable listening level.
 - Make sure you are within range of the X-701L and your mobile music device is connected via Bluetooth technology with the X-701L.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (BLMD) for ROOMS TO GO | KIDS