


HEPBURN

CHAISE W/ 1 PILLOW

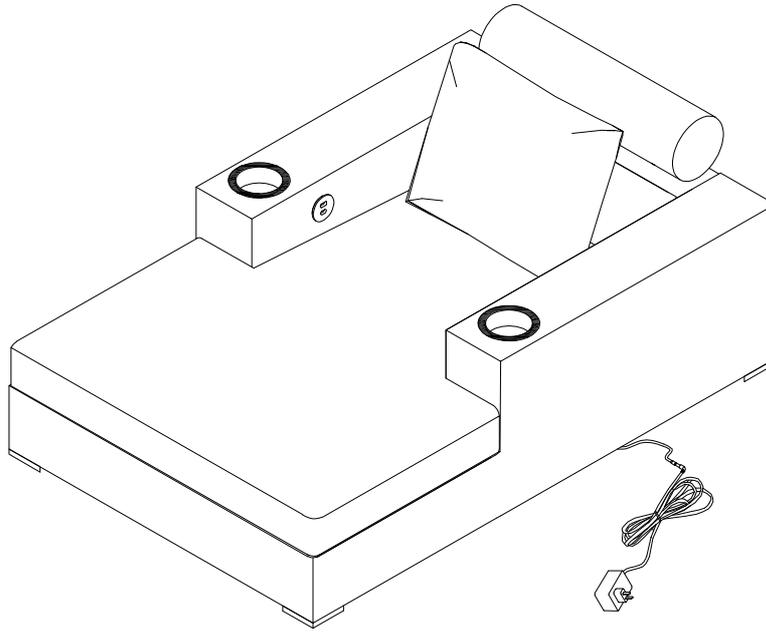


SKU#	STYLE	COLOR	ITEM DESCRIPTION
38224096	24009-1	PINK	CHAISE W/ 1 PILLOW
38324098	24009-2	GRAY	CHAISE W/ 1 PILLOW
38424090	24009-3	BLUE	CHAISE W/ 1 PILLOW


CHAISE W/ 1 PILLOW PART LIST			
CODE	DESCRIPTION	IMAGE	QTY
A	CHAISE		1 Pc
B	HEAD REST		1 Pc
C	PILLOW		1 Pc
D	CUP HOLDERS (PRE-ASSEMBLED)		2 Pcs
E	ADAPTER (PRE-ASSEMBLED)		1 Pc

This product is manufactured by (GINA) for **ROOMS TO GO® | KIDS**
 DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
 WITH SERVICE OR PARTS REPLACEMENT REQUEST

Step 1 Carefully tilt the bed onto its side (90 degrees) and remove the AC-DC adapter from underneath

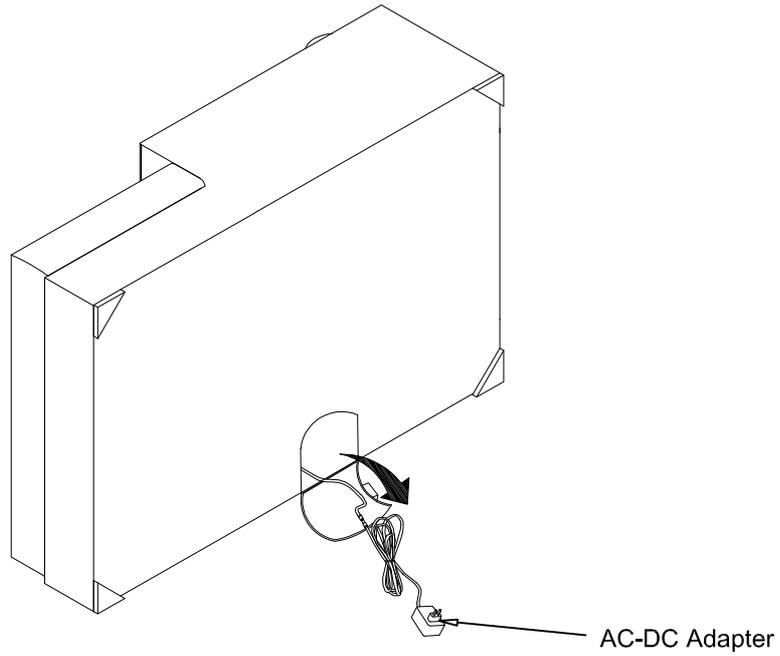


Step 2

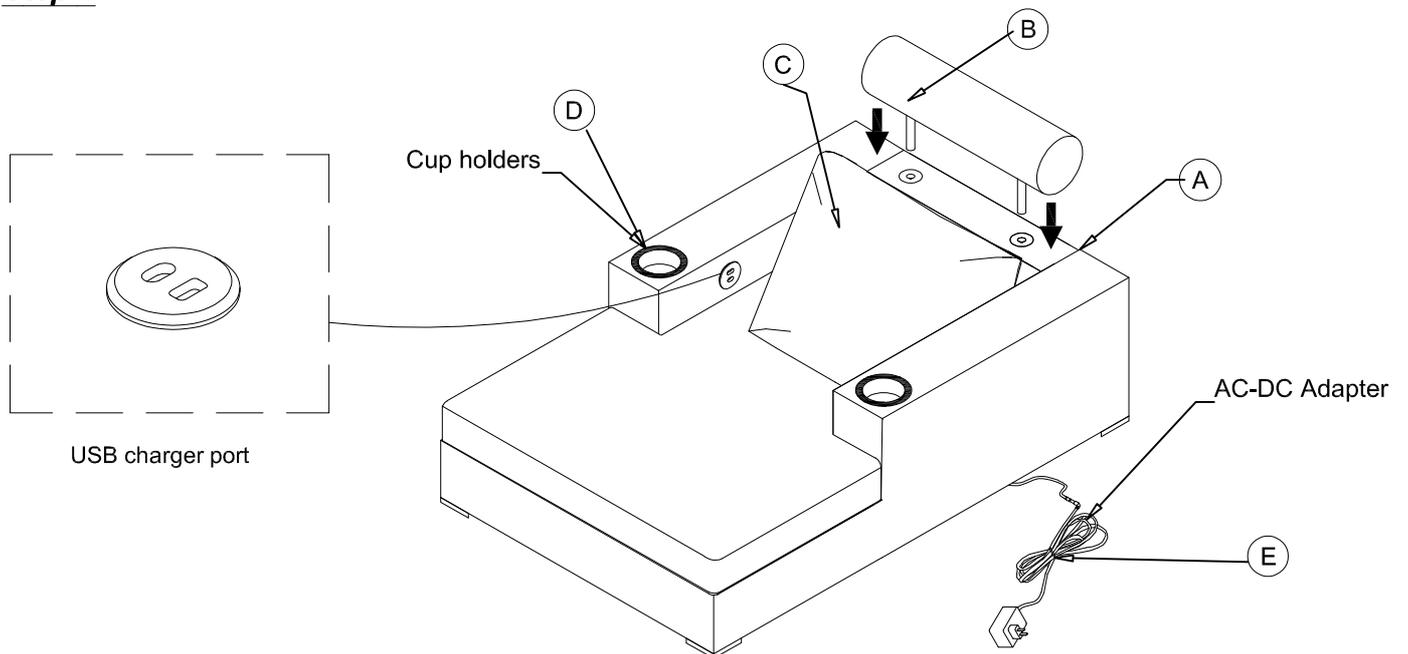

This product is manufactured by (GINA) for **ROOMS TO GO® | KIDS**
DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Read all instruction before assembling bed and keep these instructions for future reference.

Completed

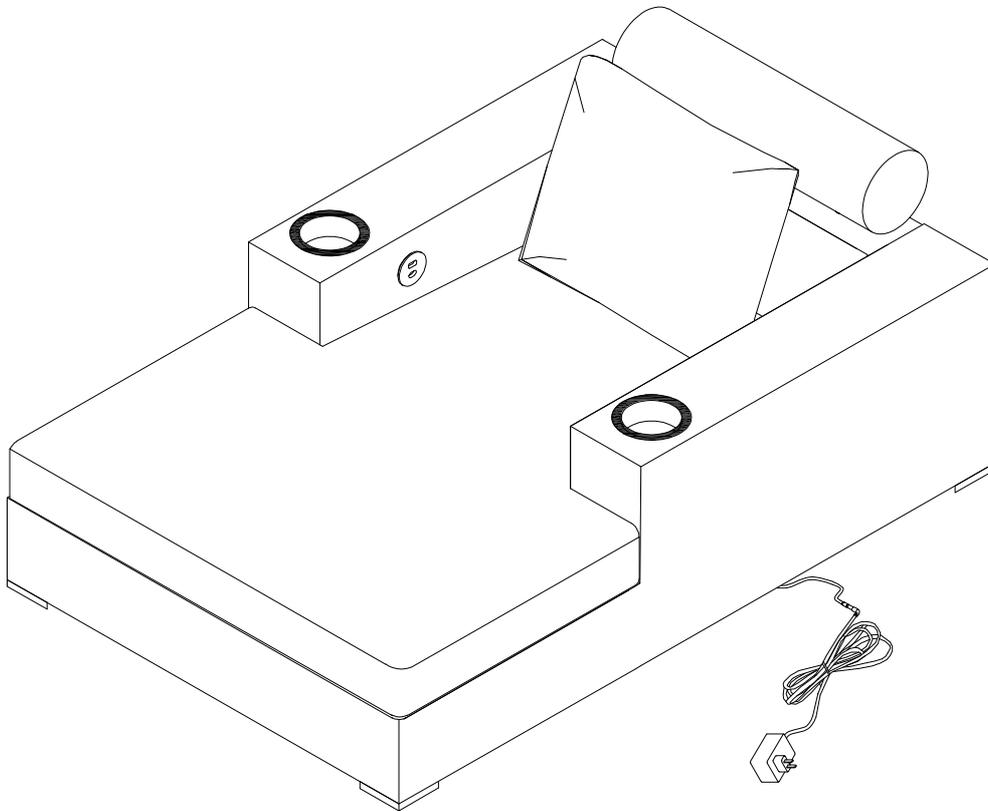

This product is manufactured by (GINA) for **ROOMS TO GO® | KIDS**
DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST

WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

24VDC/1.5A

Dongguan Shijie Hua Xu Electronics Factory

HX36B-2401500-AU

Read all instructions before using this furnishing.

DANGER - To reduce the risk of electric shock

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
4. To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children. This is not a toy.
9. Plug directly into a compatible electrical socket.
10. Do not modify the plug or use any adapters.

WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

24VDC/1.5A

Dongguan Shijie Hua Xu Electronics Factory
HX36B-2401500-AU

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO - Para reducir el riesgo de descarga eléctrica:

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras. incendios. descargas eléctricas o lesiones a personas:

1. Desenchufe del tomacorriente antes de colocar o quitar partes.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilizar cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete.
9. Enchúfelo directamente a una toma de corriente compatible.
10. No modifique el enchufe ni utilice adaptadores.

Caring for Your Furniture

To ensure your chair maintains its beauty and comfort for years to come, please follow these Care & Maintenance Guide.

The Enemies of Furniture

To extend the life of your chaise, avoid exposure to these common threats:

- **Sunlight & Heat:** Direct sunlight or heaters may cause fading and weaken fluffy fibers.
- **Moisture & Spills:** The fabric is absorbent—wipe dry immediately to prevent staining and protect electrical parts.
- **Harsh Chemicals:** Do not use bleach, ammonia, or alcohol-based cleaners, as they can damage fibers.
- **Sharp Objects & Pets:** Fluffy fabric can snag easily—avoid pet claws, keys, or other sharp objects.
- **Uneven Surfaces:** May affect the balance of the rubber wood legs.

Tips for Better Care

Simple habits to keep your chaise clean, soft, and functional:

- **Regular Vacuuming:** Use a soft-brush attachment to remove dust and debris between fibers.
- **Gentle Spot Cleaning:** Treat stains with a damp cloth and mild soap solution; blot gently, do not scrub.
- **Fabric Brushing:** Use a soft fabric brush to keep the fibers aligned and smooth.
- **USB & Power Care:** Keep the charging ports dry, dust-free, and away from liquids.
- **Cup holder Cleaning:** Wipe with a damp cloth and dry immediately.
- **Pillow Fluffing:** Lightly pat and fluff the pillow to maintain shape and comfort.
- **Wooden Legs:** Wipe clean with a dry cloth and avoid dragging the chaise to protect both the floor and the legs.

With regular care, your RTG Hepburn 24009 Chaise w/1 pillow will stay smooth, stylish, and supportive for years to come.

☞ For indoor residential use only.