

CYBER

Gaming Chair with Flip Up Arms



RTG SKU#	STYLE NO	COLOR	ITEM DESCRIPTION
38253035	53036-BLGY	Black	Gaming Chair with Flip Up Arms
38353037	53036-WHLA	White	Gaming Chair with Flip Up Arms

DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

The product is manufactured by LISI for ROOMS TO GO® | KIDS


NOTES:

- Please read the instruction sheets completely before assembly.
- Remove all parts from carton and ensure all parts are included prior to assembly.
- Assemble the chair on the carton or carpet to prevent scratching the chair.
- Be careful not to cross-thread bolts.
- Do not stand on the seat cushion.
- Do not allow children to play on or near this product.
- For indoor use only. Please do not expose to direct sunlight, sources of excessive heat, or use in wet or damp environments.
- Only a damp cloth should be used to clean the upholstery surface. For persistent stains and overall cleaning, contact a professional upholstery cleaning company.
- Light-colored upholstery is prone to color transfer from certain clothing and other materials, such as denim jeans. Promptly treat any color transfer with mixture of mild soap and water, avoiding contact with harsh chemicals. Never use cleaners containing alcohol or bleach. Spot-test cleaners on an inconspicuous area before applying to visible surfaces.
- The casters sold with this chair are intended for use on carpet and not recommended for use on tile or hardwood floors. Using these casters on tile or wood flooring may cause floor surface damage. Please consider purchasing a chair mat to protect your floor surfaces.
- Do not use power tools. Only use the allen key provided. Check and re-tighten bolts every 90 days.

DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST


The product is manufactured by LISI for ROOMS TO GO® | KIDS

Parts List

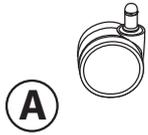


A

Casters
Quantity: 5

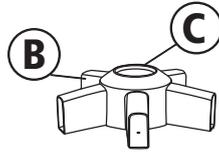


B + C

Base and Base Cover
Quantity: 1

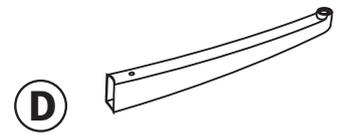


D

 Metal Legs
Quantity: 5




E

 Gas Lift
Quantity: 1



F

Seat Plate
Quantity: 1

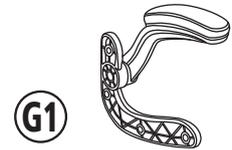


G1

Left Arm
Quantity: 1



G2

 Right Arm
Quantity: 1



H

Seat Cushion
Quantity: 1



I

Back Cushion
Quantity: 1

DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

The product is manufactured by LISI for ROOMS TO GO® | KIDS

Hardware List



Bolts
Size: M6 X 1mm X 16mm
 Quantity: 5



Bolts
Size: M8 X 1.25mm X 25mm
 Quantity: 2



Bolts
Size: M8 X 1.25mm X 32mm
 Quantity: 2



Bolts
Size: 1/4" X 1.27mm X 32mm
 Quantity: 8



Plastic Caps
 Quantity: 8



Allen Key
Size: ø5mm
 Quantity: 1




WARNING:
CHOKING HAZARD - Small Parts
This piece contains small parts, not intended for children under 3 years of age.

Hardware Pack Locations

RTG SKU#	STYLE NO	COLOR	ITEM DESCRIPTION
38253035	53036-BLGY	Black	Gaming Chair with Flip Up Arms
38353037	53036-WHLA	White	Gaming Chair with Flip Up Arms



**Note: Do not use power tools.
 Only use the allen key provided.**

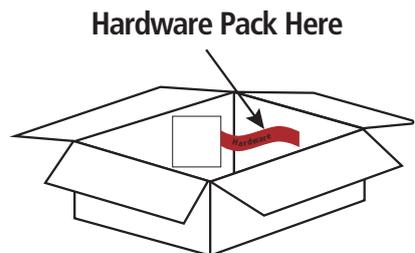

DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

The product is manufactured by LISI for ROOMS TO GO® | KIDS


Step 1

Select a smooth surface to avoid scratching the parts. Take off Base Cover (C) from the Base (B), then turn the base over. Insert Metal Legs (D) into the Base (B) and secure using 16mm Bolts (J) with Allen Key (O).

Note: Tighten the bolts completely.



Warning: Fully hand-tighten all 5 bolts at each leg/hub connection using Allen Key (O). Be careful **NOT** to overtighten or strip bolts. **DO NOT** use power tools. If you experience a problem with the leg attachment or are unable to fully tighten any of the bolts, **STOP. DO NOT** use the base. Contact Customer Support for assistance. All bolts should be checked and re-tightened every 90 days.


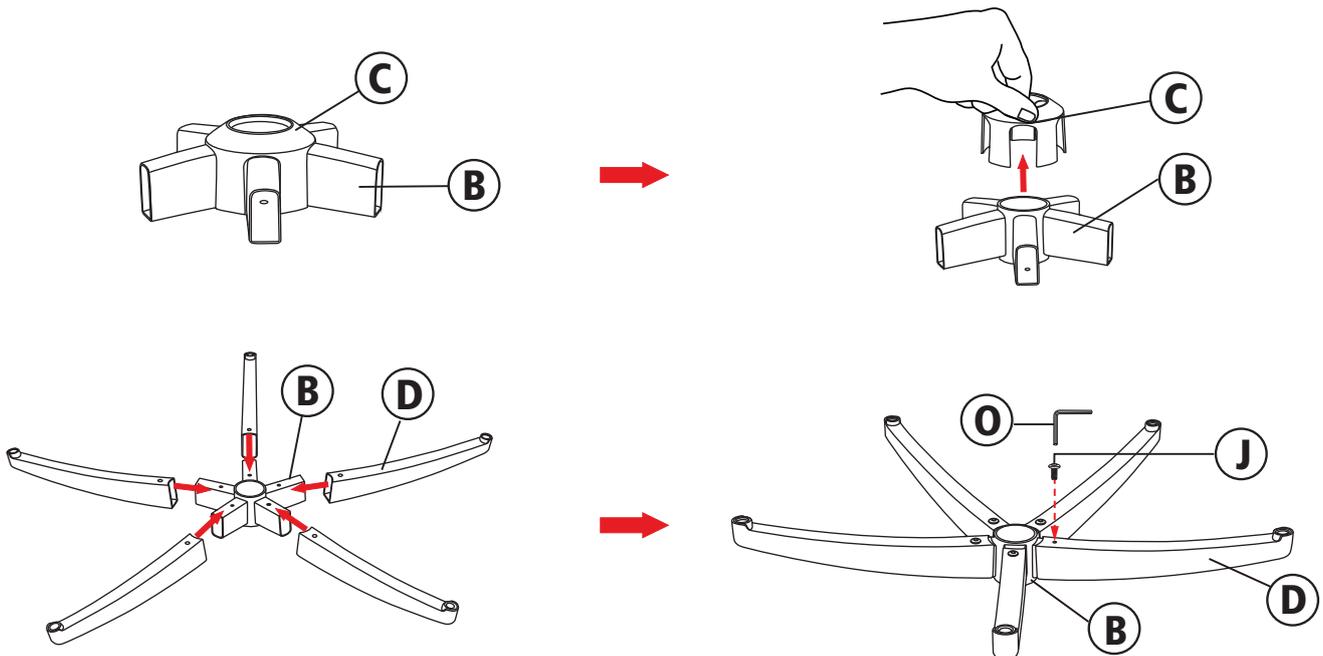


DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

The product is manufactured by LISI for ROOMS TO GO® | KIDS

Step 2

Press the Casters (A) into holes at the end of each leg. Turn the base upright and then attach the Base Cover (C) to the Base (B) as shown. Insert Gas Lift (E) into the center hole of base.

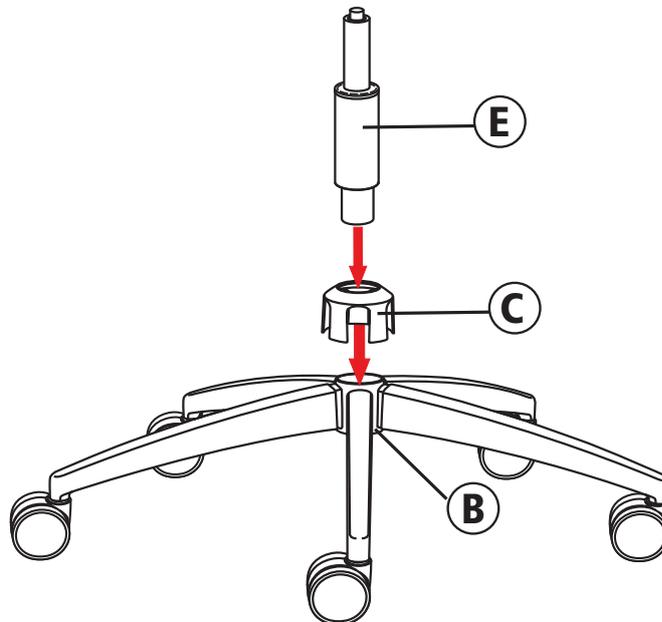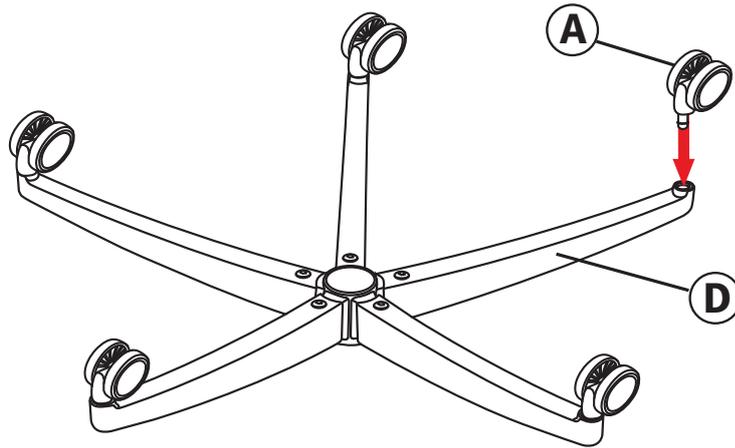


DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

The product is manufactured by LISI for ROOMS TO GO® | KIDS

Step 3

Align the Seat Plate (F) to the holes on the bottom of the Seat Cushion (H), with the front of the seat plate facing the front of seat cushion. (For reference, the large tension knob is near the front of the seat plate.) Attach by using 32mm Bolts (L) for the front holes of the Seat Plate (F) and 25mm Bolts (K) for the rear holes of the Seat Plate (F) with the Allen Key (O).

Note: Tighten the bolts completely.

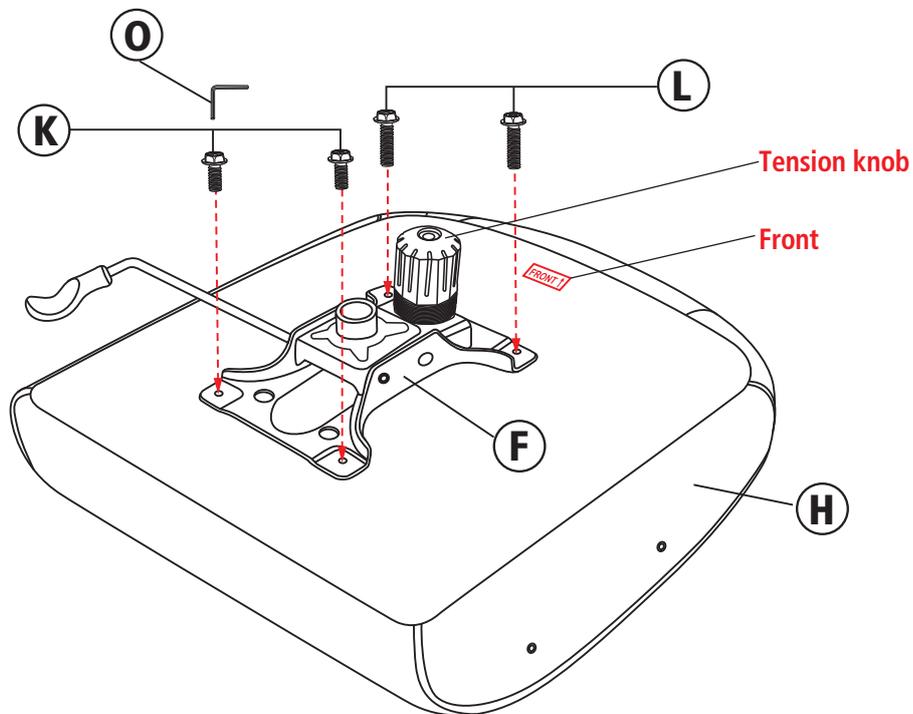


DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

The product is manufactured by LISI for ROOMS TO GO® | KIDS

Step 4

Turn assembled seat upright and insert the Gas Lift (E) into the center hole of the Seat Plate (F) located behind the tension knob. Push down firmly until connection is secure.

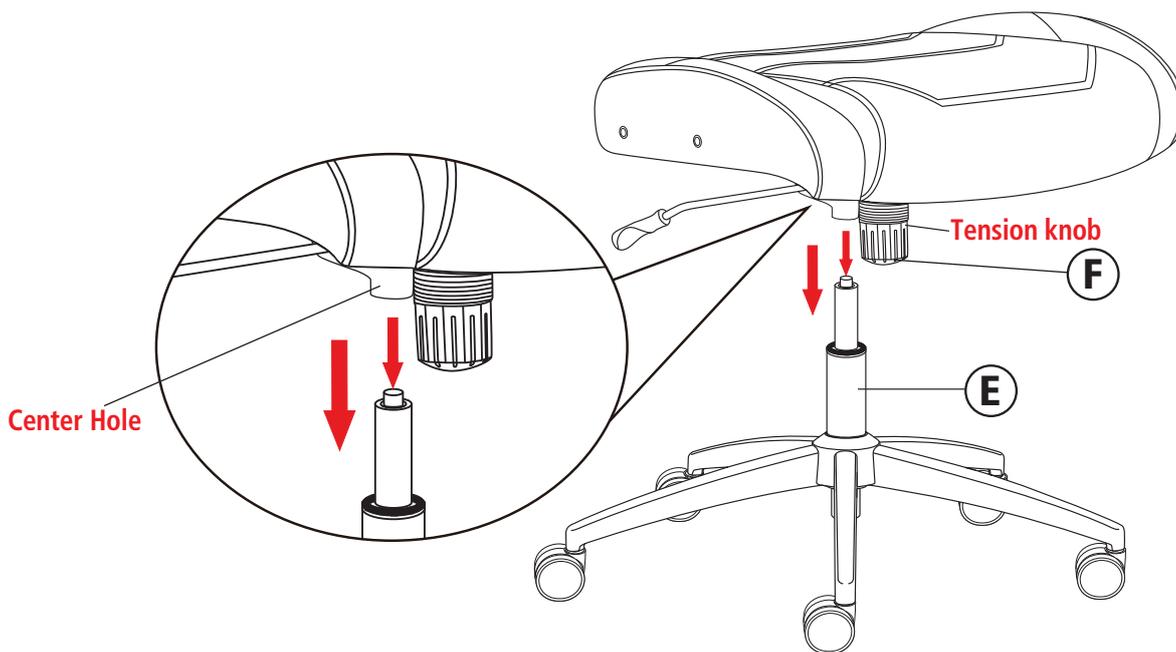


DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

The product is manufactured by LISI for ROOMS TO GO® | KIDS

Step 5

Fasten the Arms (G1 & G2) onto sides of the Seat Cushion (H) with 32mm Bolts (M) by using Allen Key (O).

Note: Do not tighten the bolts completely.

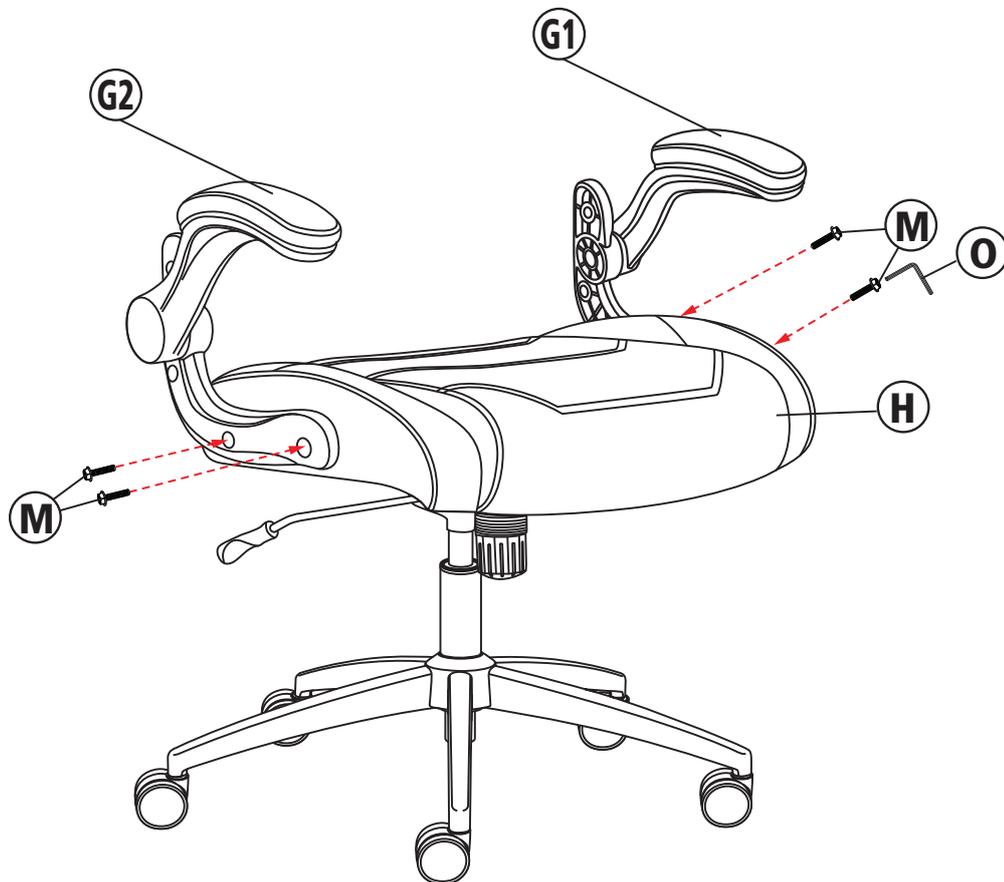


DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

The product is manufactured by LISI for ROOMS TO GO® | KIDS

Step 6

Place the Back Cushion (I) between Arms (G1 & G2). Locate the lower screw holes on both Arms (G1 & G2) & Back Cushion (I). Attach with 32mm Bolts (M) by using Allen Key (O).

Note: Do not tighten the bolts completely.

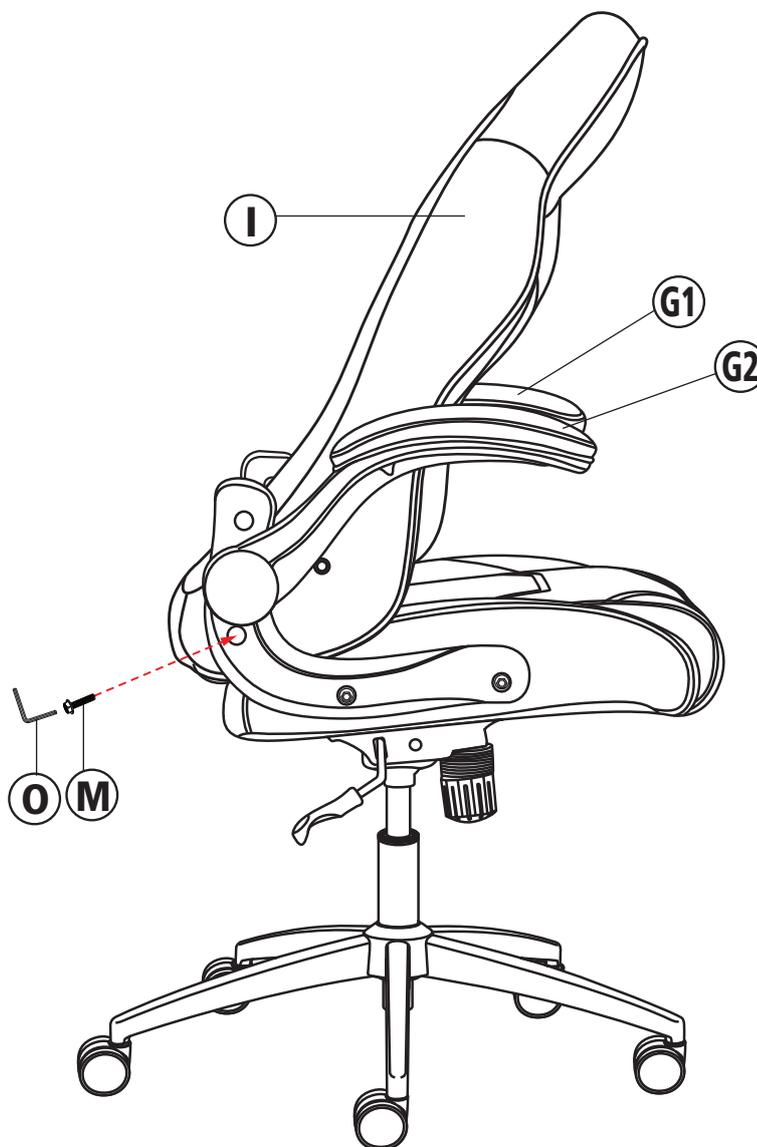


DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

The product is manufactured by LISI for ROOMS TO GO® | KIDS

Step 7

Push the Back Cushion (I) up to a vertical position and attach the Arms (G1 & G2) with 32mm Bolts (M) by using Allen Key (O).

Note: Tighten all the bolts completely.

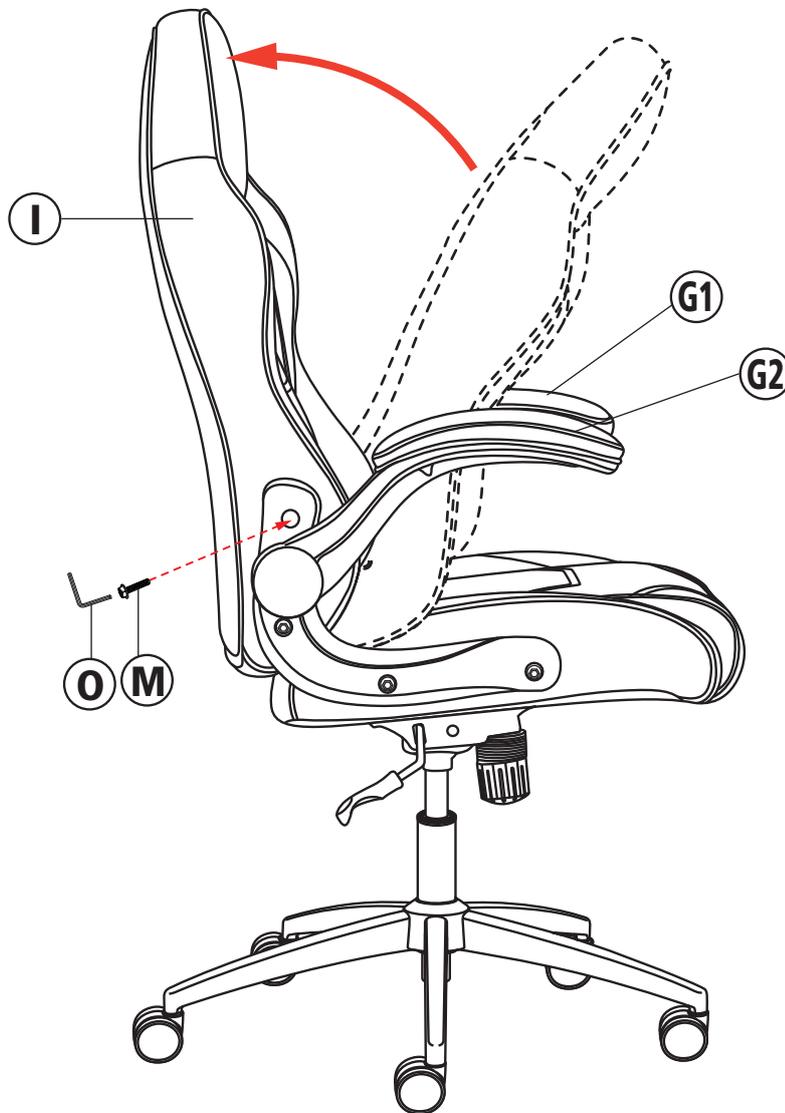


DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

The product is manufactured by LISI for ROOMS TO GO® | KIDS

Step 8

Place the Plastic Caps (N) into arm holes once screws have been tightened. The chair is now ready for use.

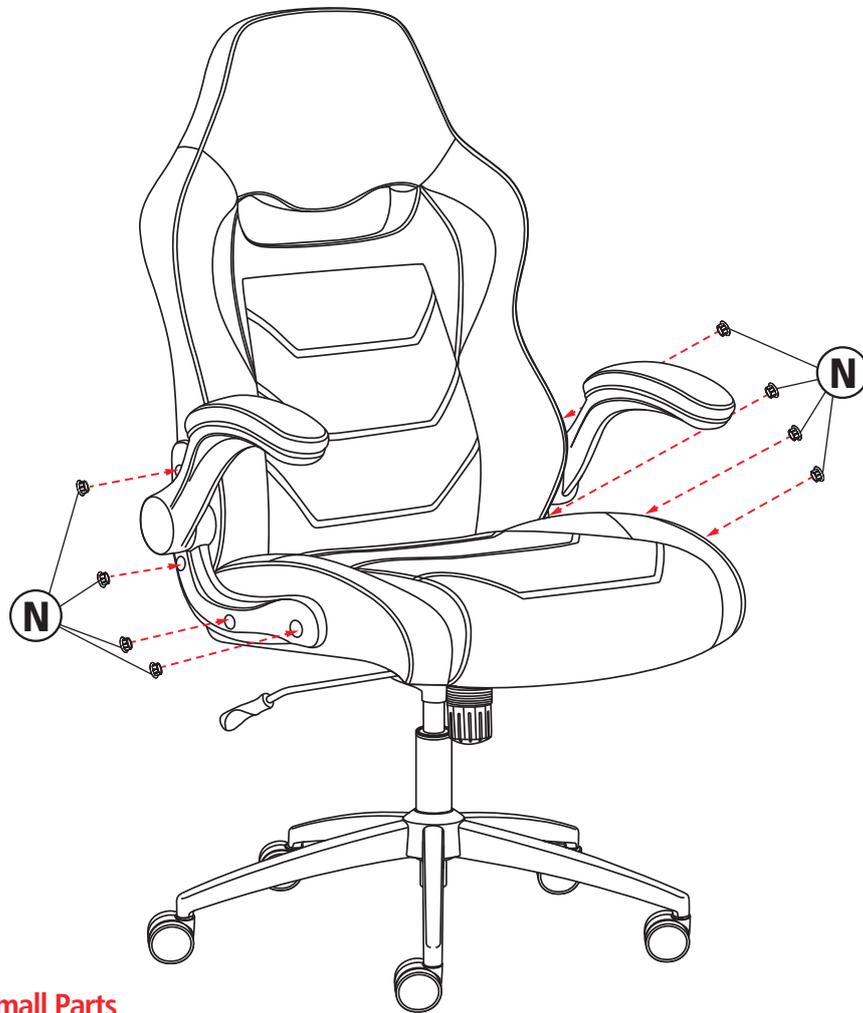

WARNING:

CHOKING HAZARD - Small Parts

This piece contains small parts, not intended for children under 3 years of age.

DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

The product is manufactured by LISI for ROOMS TO GO® | KIDS

Operating Instructions

Function Instruction - 1

To Adjust Seat Height:

While seated, lean forward and reach under the right side of the chair to find the handle. Lift the handle and raise your body up slightly to allow the chair to rise to the desired height. Once desired height is reached, release handle to lock chair at desired height. To lower the seat, lift the handle while seated. The chair will descend until the handle is released or the chair reaches the lowest position.



DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST


The product is manufactured by LISI for ROOMS TO GO® | KIDS

Operating Instructions

Function Instruction - 2

To Operate Tilt Lockout:

While seated, reach under the right side of the chair to find the height adjustment handle. Pull the handle all the way out (away from the gas lift) to allow the chair to tilt backwards. To lock the chair in the vertical position, sit upright and push the handle in towards the gas lift.

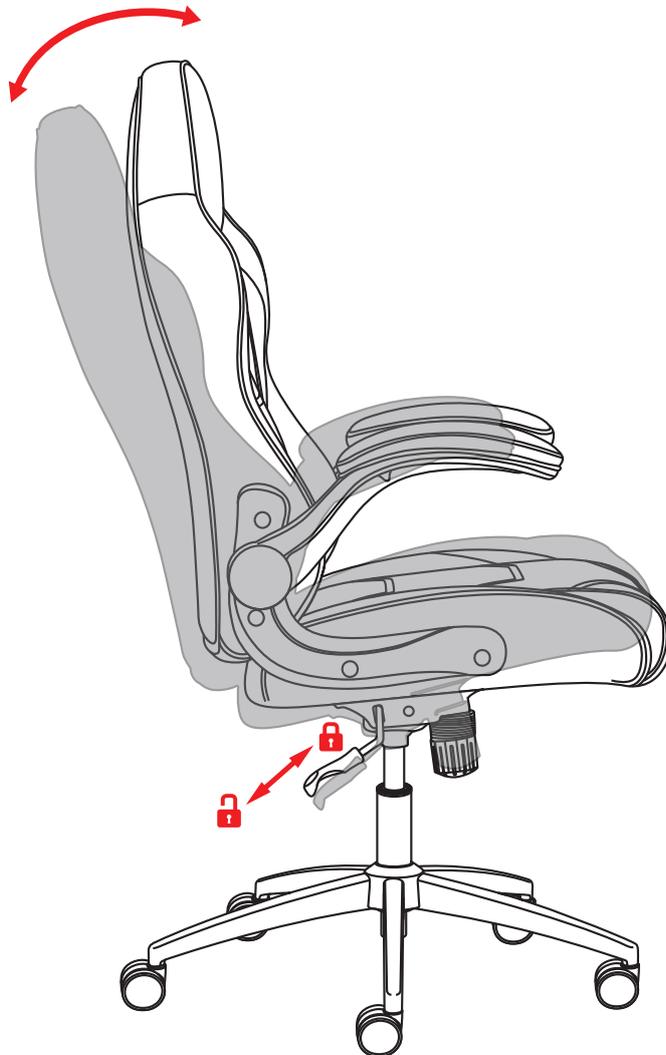

DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST


The product is manufactured by LISI for ROOMS TO GO® | KIDS

Operating Instructions

Function Instruction - 3

To Adjust Tension On The Tilt:

While seated, reach under the front center of chair seat and grasp the round black tension knob. To loosen the tilt mechanism, turn the knob clockwise. This lessens the effort required to rock back and forth. Rotate the knob until desired resistance is reached.

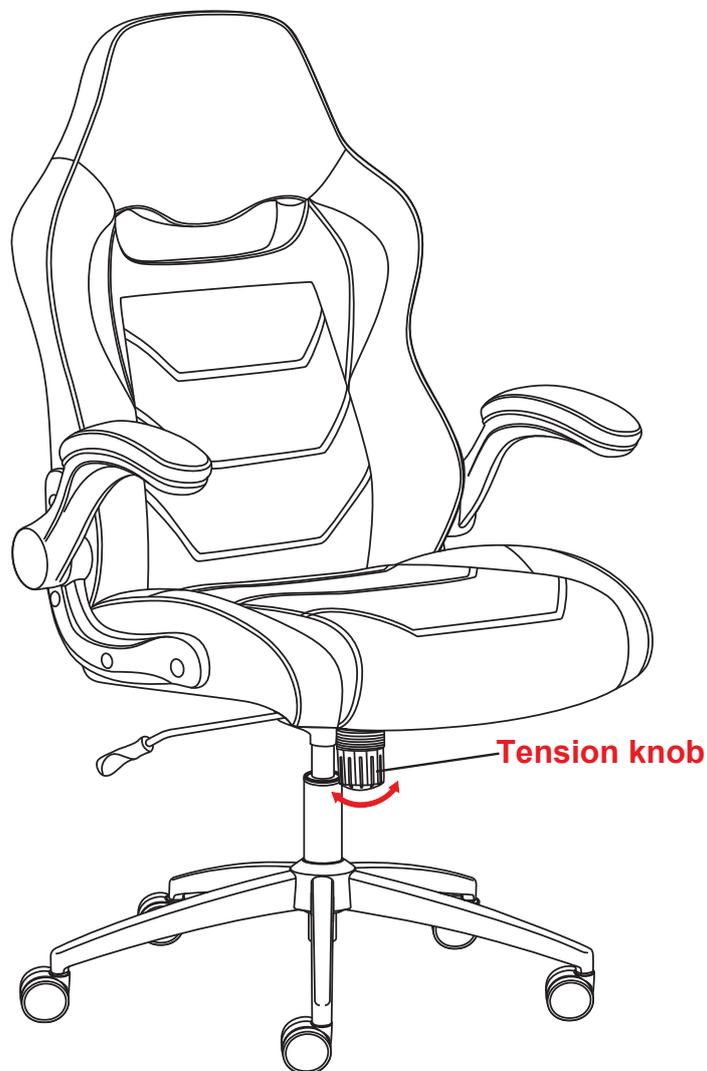

DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST



The product is manufactured by LISI for ROOMS TO GO® | KIDS

Operating Instructions

Function Instruction - 4

To Adjust Arms:

This chair has an adjustable arm function that allows the arms to be pushed up or pulled down. When arms are pushed up next to the back cushion, the chair can easily roll under a desk.

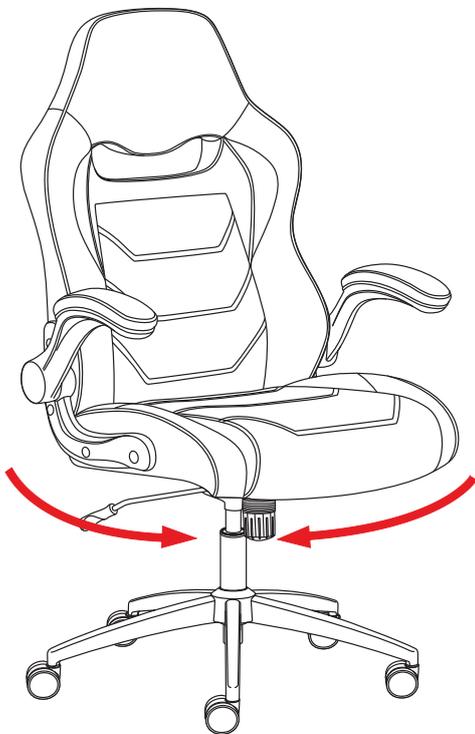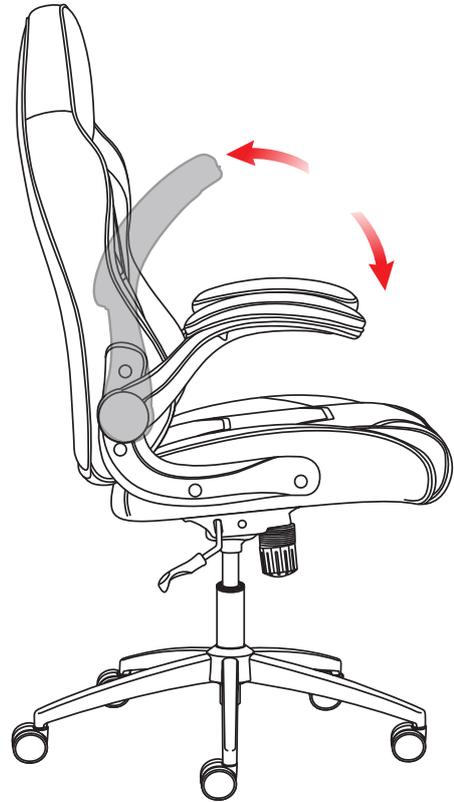

Function Instruction - 5

360° Swivel:

360° seat swivel.

DO NOT USE SUBSTITUTE PARTS, PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

The product is manufactured by LISI for ROOMS TO GO® | KIDS