



JO JO CREATIVITY TABLE

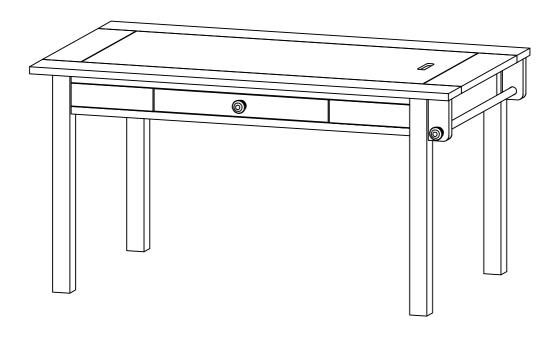

NO.	SKU	STYLE NO.	FINISH	ITEM DESCRIPTION
A.	39691111	9697-2G	GRAY	9697-2G GRAY CREATIVITY TABLE
B.	39791113	9697-2W	WHITE	9697-2W WHITE CREATIVITY TABLE
C.	39891115	9697-2C	CHOCOLATE	9697-2C CHOCOLATE CREATIVITY TABLE

PARTS LIST			
NO.	ITEM DESCRIPTION	IMAGE	QTY
A	Top panel		1PC
В	Leg		4PCS
С	Wooden block	<u> </u>	2PCS
D	Round stretcher		1PC
Е	Knob	o	2PCS

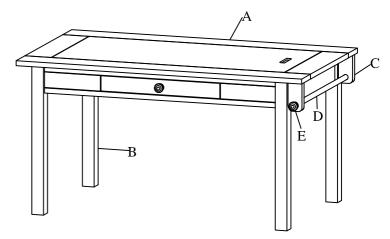




CR	CREATIVITY TABLE HARDWARE LIST			
NO.	ITEM DESCRIPTION	IMAGE	QTY	
1	Allen Bolt Ø1/4"*20*15mm		8pcs	
2	Allen Bolt Ø5/16"*18*60mm		8pcs	
3	Lock Washer Ø5/16"	©	8pcs	
4	Flat Washer Ø5/16*19mm	0	8pcs	
5	Allen Wrench 4mm		1pc	
6	Bracket	T	2pcs	

** SCREWDRIVER(NOT PROVIDED)) ()	>
------------------------------	------	-------------

Hardware Pack Locations:


NO.	SKU	STYLE NO.	FINISH	ITEM DESCRIPTION
A.	39691111	9697-2G	GRAY	9697-2G GRAY CREATIVITY TABLE
В.	39791113	9697-2W	WHITE	9697-2W WHITE CREATIVITY TABLE
C.	39891115	9697-2C	CHOCOLATE	9697-2C CHOCOLATE CREATIVITY TABLE

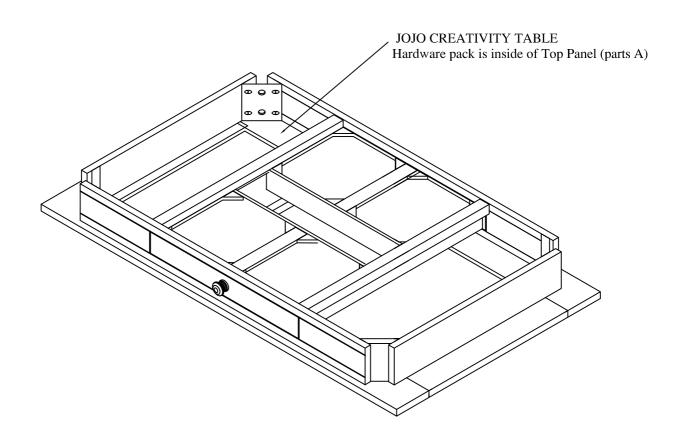



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list. Read all instructions before assembling furniture and keep these instructions for future reference.

Assembly Instructions:

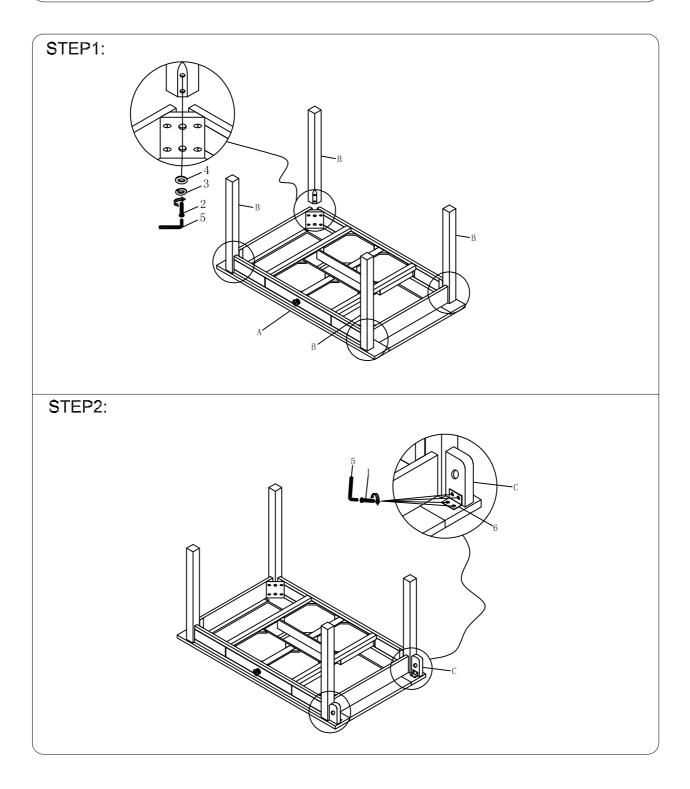

Assembly Instructions:

