
 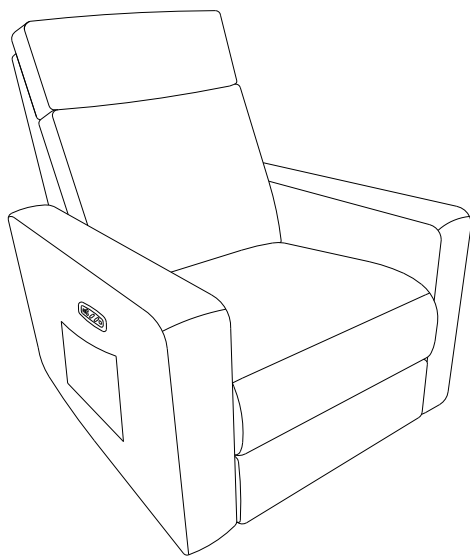


# RELAXATION ROCKER

## AUTO GLIDER RECLINER



| VENDOR STYLE NUMBER | SKU      | PRODUCT DESCRIPTION  | COLOR |
|---------------------|----------|----------------------|-------|
| K2625W              | 39926259 | Auto Glider Recliner | White |

| PART LIST |                             |                                                                                      |     |
|-----------|-----------------------------|--------------------------------------------------------------------------------------|-----|
| NO.       | Description                 | Item                                                                                 | QTY |
| A         | Swivel Glider Recliner Back |  | 1   |
| B         | Swivel Glider Recliner Base |  | 1   |
| C         | Transformer                 |  | 1   |


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR [WWW.ROOMSTOGO.COM](http://WWW.ROOMSTOGO.COM) WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (SYNE) for **ROOMS TO GO®** | **baby**


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Read all instructions before assembling recliner and keep these instructions for future reference.

## Assembly Instructions:


Step 1: Remove the transformer and the back from the recliner base.

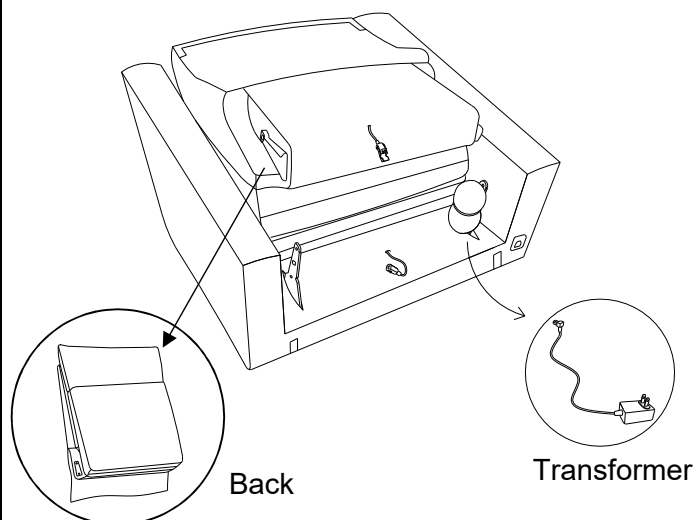


Step 2: After remove the transformer and the back from the recliner base.

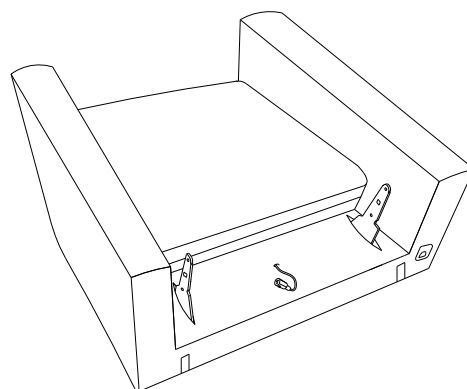

Step 3: Slide the metal sleeves(A) over the metal brackets(B). Press both sides of back firmly downward until locked in place.

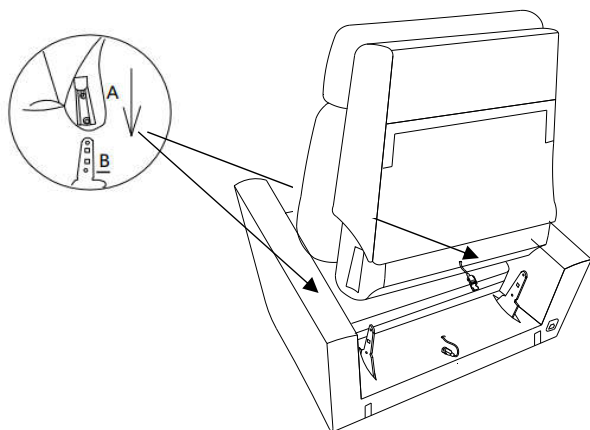

Step 4: Locate the power cord attached to the bottom back and connect to plug located at the rear of seat.

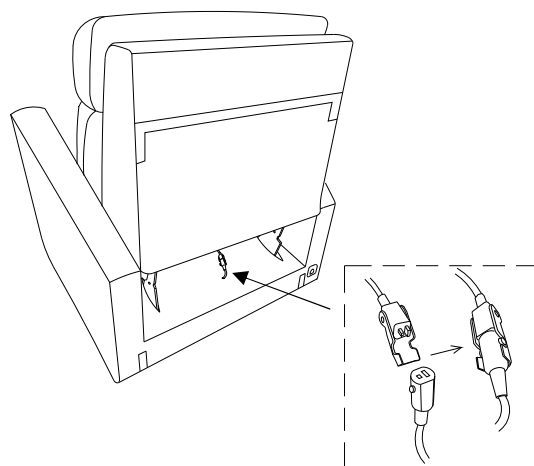


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR [WWW.ROOMSTOGO.COM](http://WWW.ROOMSTOGO.COM) WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (SYNE) for **ROOMS TO GO®** | **baby**


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Read all instructions before assembling recliner and keep these instructions for future reference.

## Assembly Instructions:


Step 5: Make sure the female Velcro on the back flap is attached to male Velcro on both side and underneath the seat base.

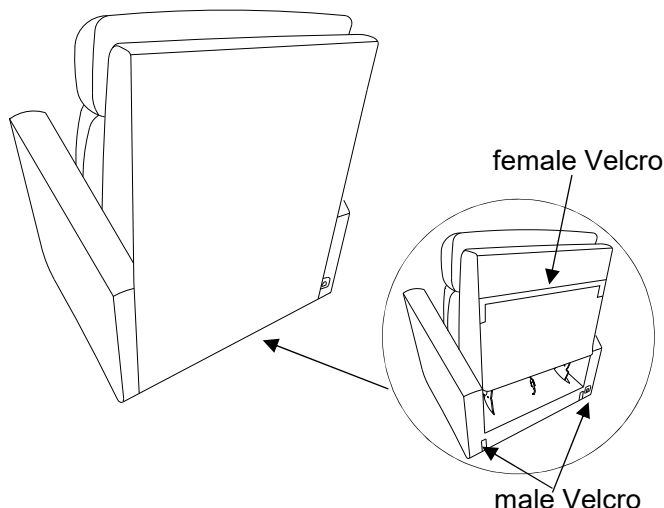

Step 6: Now that the recliner assembly is complete, the next step is to connect the electrical components at the base of the recliner.

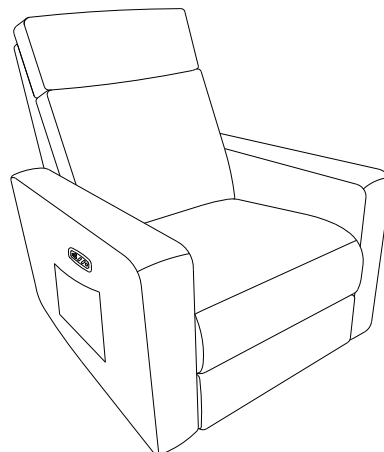

Step 7: The left end and right end of headrest can be folded.

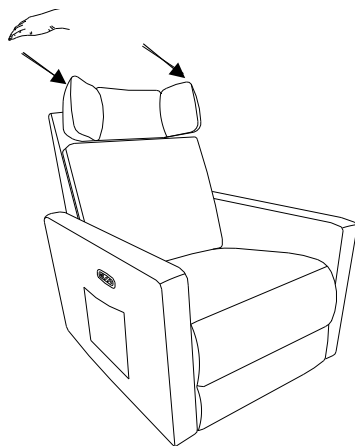


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR [WWW.ROOMSTOGO.COM](http://WWW.ROOMSTOGO.COM) WITH SERVICE OR PARTS REPLACEMENT REQUEST


This product is manufactured by (SYNE) for **ROOMS TO GO®** | **baby**

## POWER CONNECTIONS:



Step 8: Connect power cord to transformer.

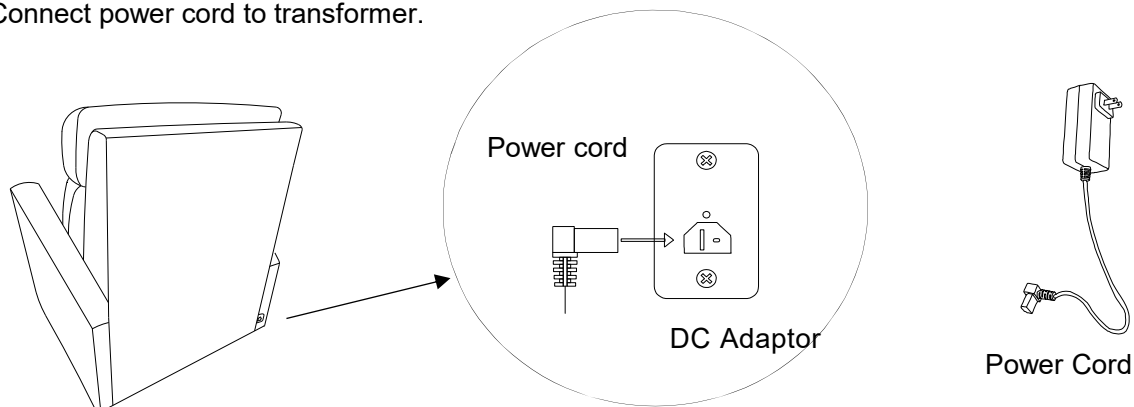

Step 9: Connect wall Plug Transformer to outlet.

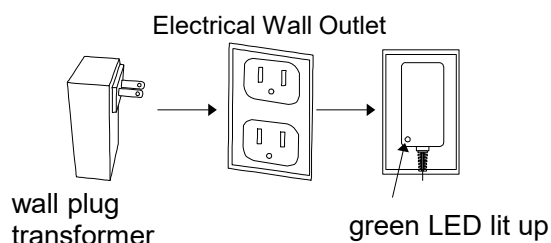

Step 10: After all connections are made, the green LED on DC adaptor will be lit up.

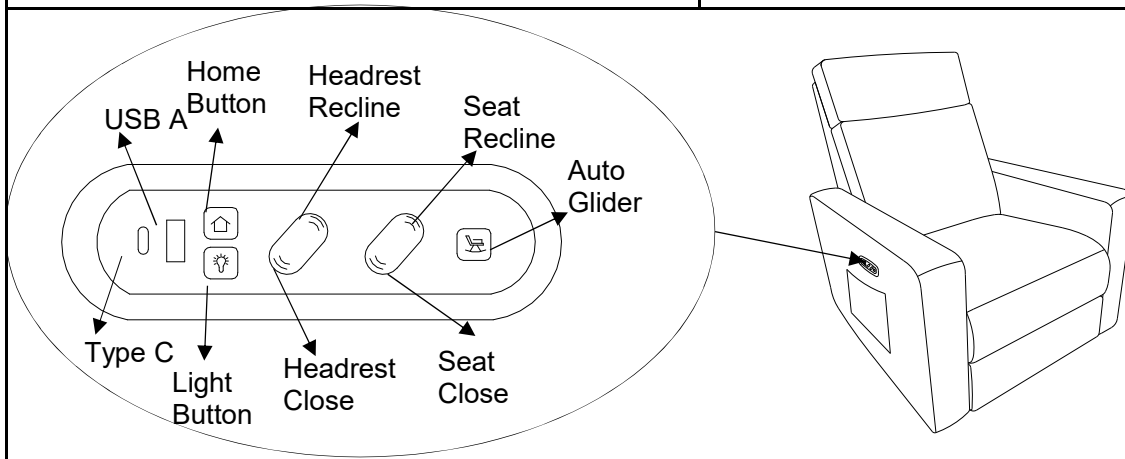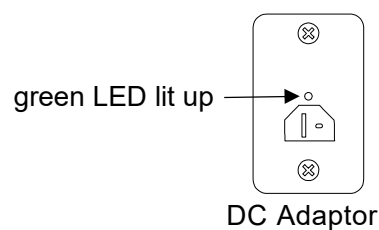

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR [WWW.ROOMSTOGO.COM](http://WWW.ROOMSTOGO.COM) WITH SERVICE OR PARTS REPLACEMENT REQUEST

## POWER CONNECTIONS:



### WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

29VDC/3A  
JIANGSU MULIN INTELLIGENCE ELECTRIC CO., LTD.  
ML-H290030A-C-03(02)

Read all instructions before using this furnishing.

**DANGER – To reduce the risk of electric shock**

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

**WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:**

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
4. To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children. This is not a toy.
9. Plug directly into a compatible electrical socket.
10. Do not modify the plug or use any adapters.



### WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

29VDC/3A  
JIANGSU MULIN INTELLIGENCE ELECTRIC CO., LTD.  
ML-H290030A-C-03(02)

Leer todas las instrucciones antes de usar este mobiliario.

**PELIGRO – Para reducir el riesgo de descarga eléctrica:**

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

**ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:**

1. Desenchufe del tomacorriente antes de colocar o quitar partes.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilice cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete.
9. Enchúfelo directamente a una toma de corriente compatible.
10. No modifique el enchufe ni utilice adaptadores.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR [WWW.ROOMSTOGO.COM](http://WWW.ROOMSTOGO.COM) WITH SERVICE OR PARTS REPLACEMENT REQUEST

## WARNINGS:


\*Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.

\*Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Rooms To Go's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.

\*Keep recliner at least 24" from all heat sources.

\*Avoid placing recliner in areas where recliner can be exposed to direct sunlight and other powerful light sources, as fading or discoloration may occur.


\*Maintain minimum of 8" space between the furniture backs and wall.

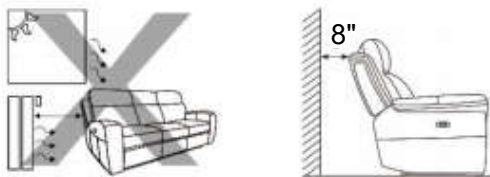

\*Do not leave the recliner until it is fully closed.

\*Do not reach under seat when mechanism is operating or serious injury may occur.

\*Reclining mechanism should only be operated while seated properly.

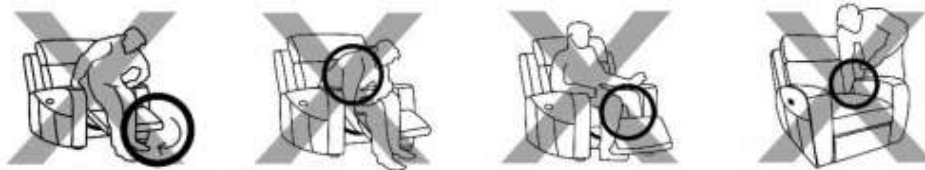


\*Do not sit on arms or backrests.

\*Do not jump or roughhouse on furniture.

\*Do not sit on the footrest when mechanism is open.



\*If unit must be moved, do not drag. Unit must be lifted in order to be moved.

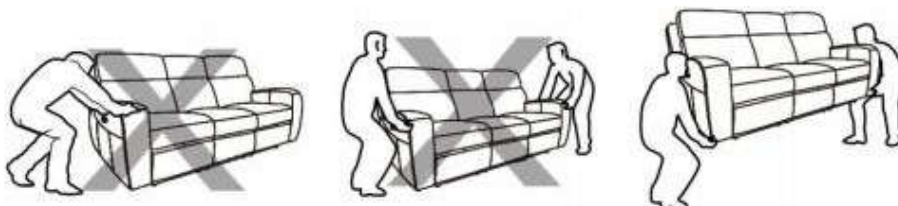

\*Do not continuously operate mechanism for more than one minute or unit may go into protection mode by shutting down to prevent overheating.

\*Unplug unit from power source prior to cleaning mechanism.

\*Do not allow electrical components to come into contact with any liquids.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR [WWW.ROOMSTOGO.COM](http://WWW.ROOMSTOGO.COM)  
WITH SERVICE OR PARTS REPLACEMENT REQUEST

## WARNINGS:

### Power Adapter Safety Instructions:

1. Use the original power adapter to ensure stable voltage and current output (29.0V, 3.0A). Using non-original power supplies may cause malfunction or damage to the system.
2. Operate in dry, indoor environments only. Exposure to moisture may result in electric shock or short circuit.
3. Do not disassemble, modify, or attempt to repair the adapter. The internal components carry high voltage and may pose safety risks if mishandled.
4. Do not cover the adapter during operation. Ensure proper ventilation to prevent overheating.
5. Avoid using the adapter near heat sources or flammable materials. Keep the adapter away from direct sunlight and enclosed spaces.
6. Keep the adapter and cables out of reach of children and pets. Improper handling may result in injury or damage to the device.
7. Use only with compatible AC power sources (100-240V, 50/60 Hz). Operating the adapter in unsupported regions may cause severe damage.
8. Immediately stop using the adapter if it emits an unusual smell, becomes excessively hot, or shows signs of abnormal operation. Contact customer service for inspection or replacement.
9. Do not use this adapter for any device other than the intended reclining furniture system. Improper use may lead to system failure or safety hazards.

### Actuator Safety Instructions:

1. Do not manually push or force the recliner structure while the actuator is powered on. Doing so may cause structural damage or motor burnout.
2. Do not clean the actuator with water or expose it to wet or humid environments.
3. If abnormal noise, jamming, or failure to operate occurs, disconnect power immediately and contact qualified service personnel.
4. Keep children away from moving parts during operation. Do not insert fingers or any extremities into any mechanical gaps to avoid injury.
5. Always disconnect power before connecting or replacing the actuator to ensure safe handling.

### Light Switch Safety Instructions:

1. Strictly avoid contact with liquids and do not operate with wet hands.
2. Do not press the switch repeatedly in quick succession.
3. Do not attempt to disassemble or repair it yourself.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR [WWW.ROOMSTOGO.COM](http://WWW.ROOMSTOGO.COM) WITH SERVICE OR PARTS REPLACEMENT REQUEST

## CARE AND CLEANING:

\*Upholstered furniture is packaged tightly to protect it during transit. This packaging can sometimes cause creases or misshaped cushions when the furniture comes out of the packaging. These issues will correct themselves over time as the fibers of the cushions are exposed to air. However, shaping the cushions with your hands can alleviate the creases and compressed fibers more quickly.



Before shaping



After shaping



\*Dust often and use a vacuum cleaner to remove debris from seams and crevasses.

\*Use a soft damp cloth to gently clean soiled areas and wipe clean. Do not rub.

\*Do not use household cleaners or solvents. Such cleaners may cause damage and/or discoloration.

\*Do regularly use dedicated leather care product onto the leather furniture to prevent built up of body oils.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR [WWW.ROOMSTOGO.COM](http://WWW.ROOMSTOGO.COM)  
WITH SERVICE OR PARTS REPLACEMENT REQUEST



# TROUBLE SHOOTING:

## Auto Glider assembly system troubleshooting

| No | Fault                                                                            | Cause Analysis                                                                                            | Troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----|----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1  | Auto glider assembly malfunctions and does not work                              | The power supply is not connected to the power                                                            | Check whether the switch power supply is plugged into the socket and whether the socket is powered.                                                                                                                                                                                                                                                                                                                                                                                                         |
|    |                                                                                  | The auto glider assembly is disconnected from the control system                                          | Check whether the connection between the motor and the control box is disconnected according to the electrical connection.                                                                                                                                                                                                                                                                                                                                                                                  |
|    |                                                                                  | The power supply is damaged                                                                               | Check whether the power indicator light on the switch is on normally.<br>1. The indicator light is on normally without flickering, and the switch power supply is normal.<br>2. If the indicator light is flashing, the switch power supply or the system is short-circuited, please contact the seller for repair or replacement of the faulty parts.<br>3. If the indicator light is off and the switch power supply is damaged, please contact the seller for repair or replacement of the faulty parts. |
|    |                                                                                  | The DC socket is damaged                                                                                  | Check if the DC socket cable is squeezed, torn or broken.                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|    |                                                                                  | The control system is damaged                                                                             | 1. Check whether the control system cables are pinched, torn or broken.<br>2. Check whether the buttons on the switch can be pressed and released normally.                                                                                                                                                                                                                                                                                                                                                 |
|    |                                                                                  | The auto glider assembly motor is damaged                                                                 | Please contact the seller to repair or replace the auto glider assembly motor.                                                                                                                                                                                                                                                                                                                                                                                                                              |
|    |                                                                                  | The gearbox of the auto glider assembly is damaged internally (the motor runs but the crank arm does not) | Please contact the seller to repair or replace the auto glider assembly motor.                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 2  | The auto glider assembly motor makes an abnormal or very loud sound when running | The auto glider assembly motor is damaged                                                                 | Please contact the seller to repair or replace the auto glider assembly motor.                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 3  | The auto glider assembly motor cannot adjust the speed                           | The Hall sensor system inside the motor is damaged                                                        | Please contact the seller to repair or replace the auto glider assembly motor.                                                                                                                                                                                                                                                                                                                                                                                                                              |
|    |                                                                                  | The device receiving the Hall signal inside the control system is damaged                                 | Please contact the seller to repair or replace the control box.                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 4  | The auto glider assembly cannot return to its original position                  | The external Hall sensor is damaged                                                                       | Please contact the seller to repair or replace the external Hall sensor.                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|    |                                                                                  | The device receiving the Hall signal inside the control system is damaged                                 | Please contact the seller to repair or replace the control box.                                                                                                                                                                                                                                                                                                                                                                                                                                             |

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR [WWW.ROOMSTOGO.COM](http://WWW.ROOMSTOGO.COM) WITH SERVICE OR PARTS REPLACEMENT REQUEST

# TROUBLE SHOOTING:

## Seat Motor Troubleshooting

| No | Fault                                               | Cause Analysis                                     | Troubleshooting                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----|-----------------------------------------------------|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1  | The seat motor is faulty and not working            | Not connected to the power supply                  | Check whether the switch power supply is plugged into the socket and whether the socket is powered.                                                                                                                                                                                                                                                                                                                                                                                                      |
|    |                                                     | The seat motor and control system are disconnected | Check whether the connection between the motor and the control box is disconnected according to the electrical connection.                                                                                                                                                                                                                                                                                                                                                                               |
|    |                                                     | The power supply is damaged                        | Check whether the power indicator light on the switch is on normally.<br>1、The indicator light is on normally without flickering, and the switch power supply is normal.<br>2、If the indicator light is flashing, the switch power supply or the system is short-circuited, please contact the seller for repair or replacement of the faulty parts.<br>3、If the indicator light is off and the switch power supply is damaged, please contact the seller for repair or replacement of the faulty parts. |
|    |                                                     | The DC socket is damaged                           | Check if the DC socket cable is squeezed, torn or broken.                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|    |                                                     | The control system is damaged                      | 1、Check whether the control system cables are pinched, torn or broken.<br>2、Check whether the buttons on the switch can be pressed and released normally.                                                                                                                                                                                                                                                                                                                                                |
|    |                                                     | The seat motor is damaged                          | Please contact the seller to repair or replace the seat motor.                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 2  | The seat motor makes an abnormal or very loud sound | The seat motor is damaged                          | Please contact the seller to repair or replace the seat motor.                                                                                                                                                                                                                                                                                                                                                                                                                                           |

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR [WWW.ROOMSTOGO.COM](http://WWW.ROOMSTOGO.COM) WITH SERVICE OR PARTS REPLACEMENT REQUEST

## TROUBLE SHOOTING:

### Auto glider mechanism troubleshooting

| No | Fault                                          | Cause Analysis                                                 | Troubleshooting                                                                            |
|----|------------------------------------------------|----------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| 1  | Different arm height of left and right         | There is a fault on the left and right pieces of the mechanism | Please contact the seller to repair or replace the left and right pieces of the mechanism. |
|    |                                                | The mechanism assembly lacks a stabilizing link                | Please contact the seller for repair or installation of a stabilizer link.                 |
| 2  | Sofa footrest is loose                         | The footrest cannot be retracted and the seat motor is faulty  | Please contact the seller to repair or replace the seat motor.                             |
| 3  | The sofa backrest is in the wrong position     | There is a fault on the left and right pieces of the mechanism | Please contact the seller to repair or replace the left and right pieces of the mechanism. |
|    |                                                | Seat motor failure                                             | Please contact the seller to repair or replace the left and right pieces of the mechanism. |
| 4  | There is a strange noise when the sofa gliding | The auto glider assembly motor is damaged                      | Please contact the seller to repair or replace the auto glider assembly.                   |
| 5  | The sofa does not glide smoothly               | The internal gear of the auto glider assembly motor is damaged | Please contact the seller to repair or replace the auto glider assembly.                   |

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR [WWW.ROOMSTOGO.COM](http://WWW.ROOMSTOGO.COM) WITH SERVICE OR PARTS REPLACEMENT REQUEST