
 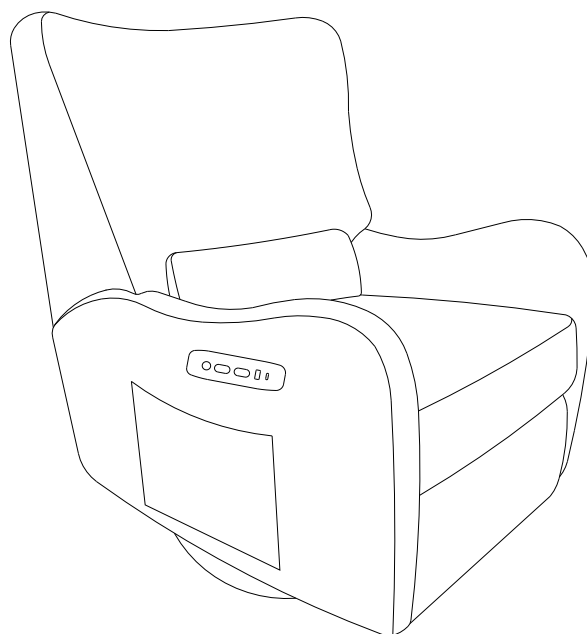
 


COZY BEAR

POWER SWIVEL GLIDER RECLINER



VENDOR STYLE NUMBER	SKU	PRODUCT DESCRIPTION	COLOR
K2626CW	39826269	Power Swivel Glider Recliner	Off White
K2626CB	39926261	Power Swivel Glider Recliner	Brown

PART LIST			
NO.	Description	Item	QTY
A	Swivel Glider Recliner Back		1
B	Swivel Glider Recliner Base		1
C	Lumbar Pillow		1
D	Transformer		1


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

This product is manufactured by (SYNE) for **ROOMS TO GO®** | **baby**


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below. Read all instructions before assembling recliner and keep these instructions for future reference.

Assembly Instructions:


Step 1: Remove the back, the lumbar pillow and the transformer from the recliner base.

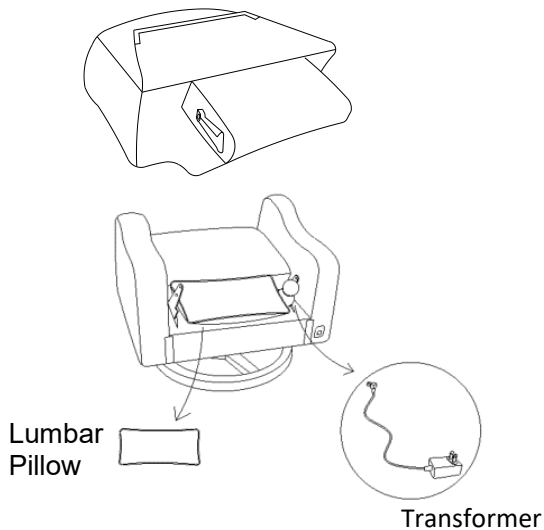


Step 2: After remove the back, the lumbar pillow and the transformer from the recliner base.

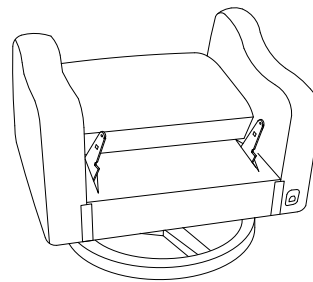

Step 3: Slide the metal sleeves (A) over the metal brackets (B). Press both sides of back firmly downward until locked in place.

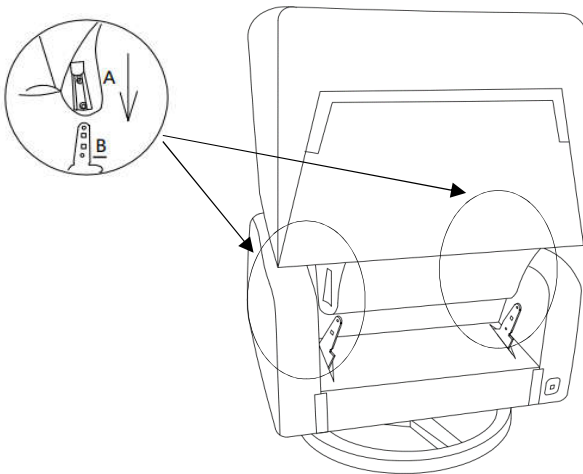

Step 4: Make sure the female Velcro on the back flap is attached to male Velcro on both side and underneath the seat base.

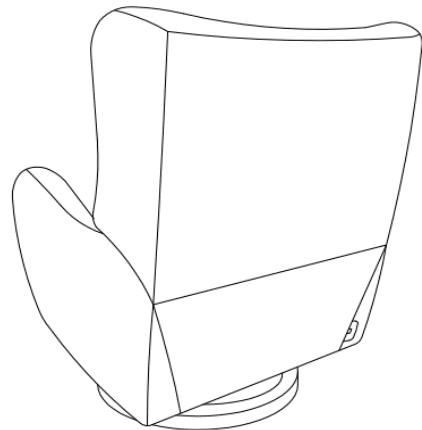


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST


This product is manufactured by (SYNE) for **ROOMS TO GO** | **baby**

POWER CONNECTIONS:



Step 5: Connect power cord to transformer.

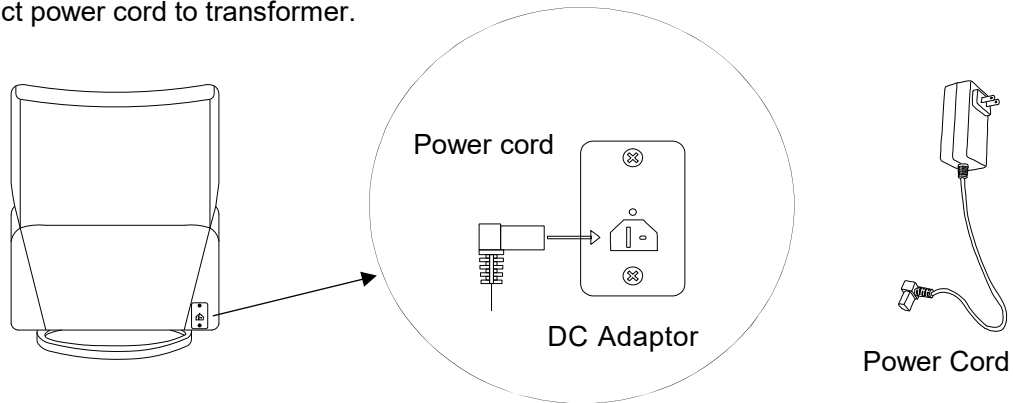

Step 6: Connect wall Plug transformer to outlet.

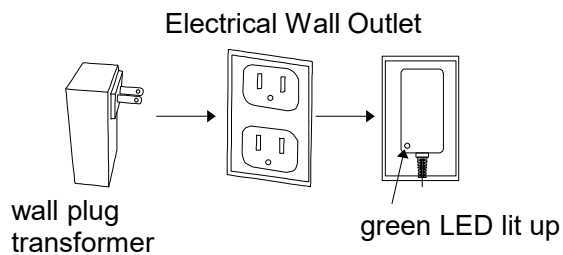

Step 7: After all connections are made, the green LED on DC adaptor will be lit up.

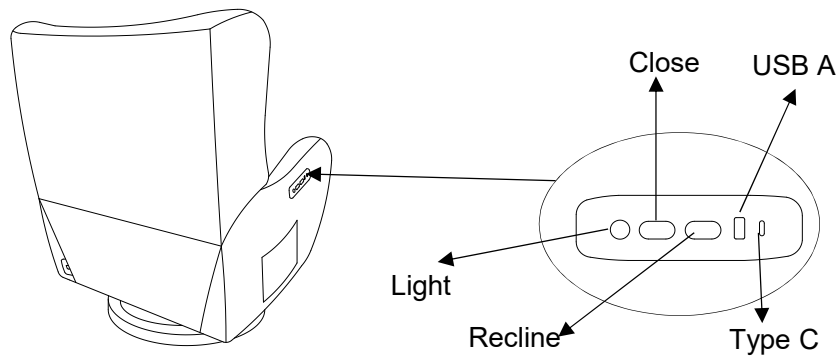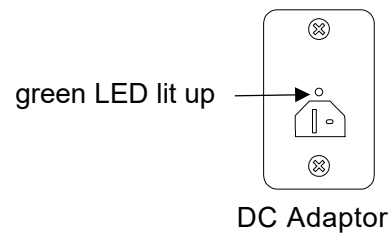

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

POWER CONNECTIONS:



! WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

29VDC/2A
DewertOkin Technology Group Co., Ltd.
JLDP. 10. 115. 222

Read all instructions before using this furnishing.

DANGER – To reduce the risk of electric shock

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
4. To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children. This is not a toy.
9. Plug directly into a compatible electrical socket.
10. Do not modify the plug or use any adapters.

! WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

29VDC/2A
DewertOkin Technology Group Co., Ltd.
JLDP. 10. 115. 222

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO – Para reducir el riesgo de descarga eléctrica:

1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.


ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

1. Desenchufe del tomacorriente antes de colocar o quitar partes.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilizar cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete.
9. Enchúfelo directamente a una toma de corriente compatible.
10. No modifique el enchufe ni utilice adaptadores.


DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

WARNINGS:

- *Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- *Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Rooms To Go's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- *Keep recliner at least 24" from all heat sources.
- *Avoid placing recliner in areas where recliner can be exposed to direct sunlight and other powerful light sources, as fading or discoloration may occur.
- *Maintain minimum of 12" space between the furniture backs and wall.

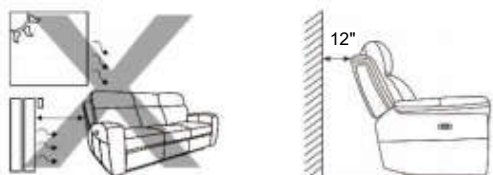


- *Do not leave the recliner until it is fully closed.
- *Do not reach under seat when mechanism is operating or serious injury may occur.
- *Reclining mechanism should only be operated while seated properly.

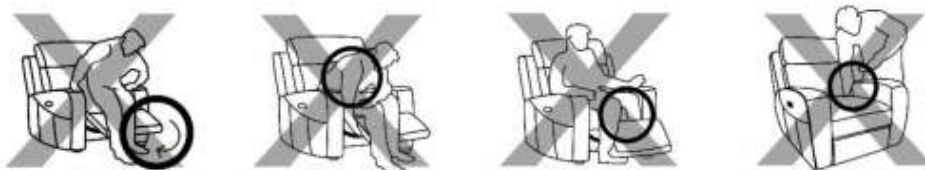

- *Do not sit on arms or backrests.
- *Do not jump or roughhouse on furniture.
- *Do not sit on the footrest when mechanism is open.



- *If unit must be moved, do not drag. Unit must be lifted in order to be moved.

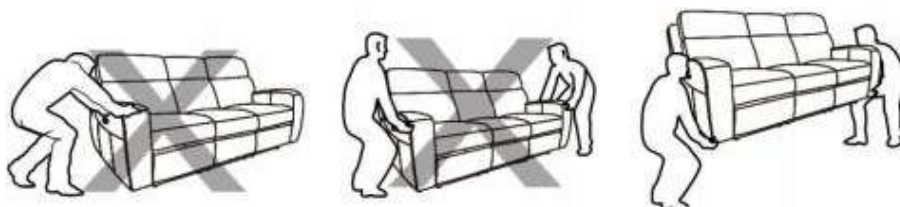

- *Do not continuously operate mechanism for more than one minute or unit may go into protection mode by shutting down to prevent overheating.
- *Unplug unit from power source prior to cleaning mechanism.
- *Do not allow electrical components to come into contact with any liquids.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST

WARNINGS:

Power Adapter Safety Instructions:

1. Use the original power adapter to ensure stable voltage and current output (29.0V, 2.0A). Using non-original power supplies may cause malfunction or damage to the system.
2. Operate in dry, indoor environments only. Exposure to moisture may result in electric shock or short circuit.
3. Do not disassemble, modify, or attempt to repair the adapter. The internal components carry high voltage and may pose safety risks if mishandled.
4. Do not cover the adapter during operation. Ensure proper ventilation to prevent overheating.
5. Avoid using the adapter near heat sources or flammable materials. Keep the adapter away from direct sunlight and enclosed spaces.
6. Keep the adapter and cables out of reach of children and pets. Improper handling may result in injury or damage to the device.
7. Use only with compatible AC power sources (100-240V, 50/60 Hz). Operating the adapter in unsupported regions may cause severe damage.
8. Immediately stop using the adapter if it emits an unusual smell, becomes excessively hot, or shows signs of abnormal operation. Contact customer service for inspection or replacement.
9. Do not use this adapter for any device other than the intended reclining furniture system. Improper use may lead to system failure or safety hazards.

Actuator Safety Instructions:

1. Do not manually push or force the recliner structure while the actuator is powered on. Doing so may cause structural damage or motor burnout.
2. Do not clean the actuator with water or expose it to wet or humid environments.
3. If abnormal noise, jamming, or failure to operate occurs, disconnect power immediately and contact qualified service personnel.
4. Keep children away from moving parts during operation. Do not insert fingers or any extremities into any mechanical gaps to avoid injury.
5. Always disconnect power before connecting or replacing the actuator to ensure safe handling.

Light Switch Safety Instructions:

1. Strictly avoid contact with liquids and do not operate with wet hands.
2. Do not press the switch repeatedly in quick succession.
3. Do not attempt to disassemble or repair it yourself.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

CARE AND CLEANING:

*Upholstered furniture is packaged tightly to protect it during transit. This packaging can sometimes cause creases or misshaped cushions when the furniture comes out of the packaging. These issues will correct themselves over time as the fibers of the cushions are exposed to air. However, shaping the cushions with your hands can alleviate the creases and compressed fibers more quickly.



Before shaping



After shaping



*Dust often and use a vacuum cleaner to remove debris from seams and crevasses.

*Use a soft damp cloth to gently clean soiled areas and wipe clean. Do not rub.

*Do not use household cleaners or solvents. Such cleaners may cause damage and/or discoloration.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST

TROUBLE SHOOTING:

Motor System Troubleshoot

No.	Error	Analysis	Troubleshoot
1	Seat motor is not working	The wall transformer is not plugged	Check that the wall transformer is properly plugged into the socket.
		The motor system connection is disconnected	Check whether the connection between related parts is disconnected according to electrical connection.
		The wall transformer is damaged	Check whether the indicator light of wall transformer is on and lit.
			1. If the light is on, the wall transformer is working properly.
			2. If the light is flashing, the wall transformer has short-circuited. Please contact the seller to repair or replace the defective part.
			3. If the light is off, the wall transformer is damaged. Please contact the seller to repair or replace the defective part.
		The DC socket is damaged	Check whether the cable has been damaged or squeezed.
		The control switch is damaged	1. Check whether the cables of control switch have been damaged or squeezed.
			2. Check whether the switch button is stuck or functioning properly.
		The seat motor is damaged	Please contact the seller to repair or replace the defective part.
2	The seat motor is making abnormal or very loud sounds	The seat motor is damaged	Please contact the seller to repair or replace the defective part.

USB-A+C Charging System Troubleshoot

CAUTION:		1. USB-A+C Output : USB A—18W MAX; USB C—30W MAX; 2. USB ports only charges mobile devices (not compatible with computers). 3. Do not use usb splitter/extendors, do not Charge multiple devices at one time, otherwise damages could occur.	
No.	Error	Analysis	Troubleshoot
1	The USB Port can not charger mobile devices	The input requirements of the mobile device do not match the USB port output	Please confirm the input requirements for mobile devices to ensure compatibility.
		The wall transformer is not plugged	Check that the wall transformer is properly plugged into the socket.
		The motor system connection is disconnected	Check whether the connection between related parts is disconnected according to electrical connection.
		The wall transformer is damaged	Check whether the indicator light of wall transformer is on and lit.
			1. If the light is on, the wall transformer is working properly.
			2. If the light is flashing, the wall transformer has short-circuited. Please contact the seller to repair or replace the defective part.
			3. If the light is off, the wall transformer is damaged. Please contact the seller to repair or replace the defective part.
		The DC socket is damaged	Check whether the cable has been damaged or squeezed.
		The seat motor is damaged	Check whether the cable has been damaged or squeezed.
		The control switch is damaged	Please contact the seller to repair or replace the defective part.
	2	The original charging cable of the product is not being used	Please use the original charging cable provided with your mobile device for charging.
		The mobile device itself does not support fast charging or the protocol is incompatible	Please match the charging according to the charging requirements of the mobile device itself.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM WITH SERVICE OR PARTS REPLACEMENT REQUEST

TROUBLE SHOOTING:

Light System Troubleshoot

CAUTION:

1. The round button on the switch is used to control the light strip.
2. Tap the round button to select between 3 brightness levels: high - medium - low - off.
3. Light system turns off automatically after 60 minutes.

No.	Error	Analysis	Troubleshoot
1	The light strip is not working	The light system connection is loose	Check whether the connection between related parts is loose according to electrical connection.
		The wall transformer is not plugged in	Check that the wall transformer is properly plugged into the socket.
		The motor system connection is disconnected	Check whether the connection between related parts is disconnected according to electrical connection.
		The wall transformer is damaged	Check whether the indicator light of wall transformer is on and lit.
			1. If the light is on, the wall transformer is working properly.
			2. If the light is flashing, the wall transformer has short-circuited. Please contact the seller to repair or replace the defective part.
			3. If the light is off, the wall transformer is damaged. Please contact the seller to repair or replace the defective part.
		The DC socket is damaged	Check whether the cable has been damaged or squeezed.
		The seat motor is damaged	Check whether the cable has been damaged or squeezed.
		The round button on the switch is damaged	Please contact the seller to repair or replace the defective part.
		The light connect cable or Y-cable is damaged	Check whether the cables connecting the light strips or Y-cable have been damaged or squeezed.
		The light strip is damaged	Please contact the seller to repair or replace the defective part.
	Some of the light strip not lighting	The light system connection is loose	Check whether the connection between related parts is loose according to electrical connection.
		The light connect cable or Y-cable is damaged	Check whether the cables connecting the light strips or Y-cable have been damaged or squeezed.
		The light strip is damaged	Please contact the seller to repair or replace the defective part.

DO NOT USE SUBSTITUTE PARTS. PLEASE CONTACT YOUR RETAIL STORE OR WWW.ROOMSTOGO.COM
WITH SERVICE OR PARTS REPLACEMENT REQUEST