

Before beginning

! Unpack all parts and hardware to ensure you have all needed components for assembly.

! Read this guide cover before beginning assembly.


 
! Assemble this item on a soft surface such as carpet to protect finish.

! proper assembly of this item requires 2 people & 20 minutes to assemble.

CARE INSTRUCTIONS

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners, Any liquid spilled on the table should be cleaned up immediately with a damp cloth.

Top (A)

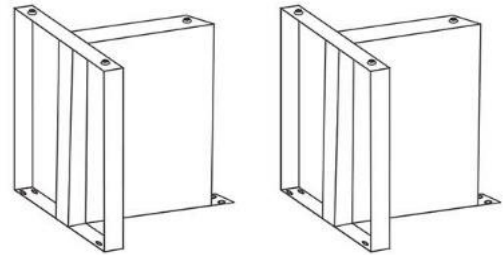

Leg (B)

HOW TO ASSEMBLE





STEP-1 Place the Dining Bench top upside down on rug.

STEP -2 Match Marking A With A.B. with B respectively.


STEP-3 Insert allen bolt (D) with spring washer (E) and flat washer (F) then tighten with Allen Key (G).

STEP-4 Turn the Dining Bench upside down, Dining Bench is ready to use.

Hardware & Tool Required:-

No.	Sketch	Description	Size	Quantity
D		Allen Bolt	0.3X1"	12+1
E		Spring Washer	0.35X0.5"	12+1
F		Washer	0.35 X1"	12+1
G		Allen Key	0.2"	1

Step 1


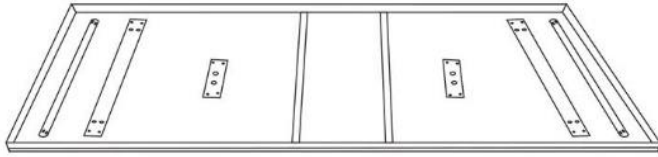


Tip for leveling of product:
When the product rests on an uneven floor surface it will appear to be unbalanced. To aid in leveling, try adjusting the levelers located on the bottom of each foot.


Adjustable Levelers



Step 2

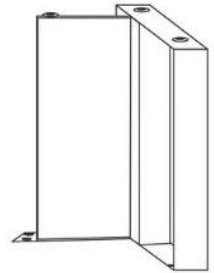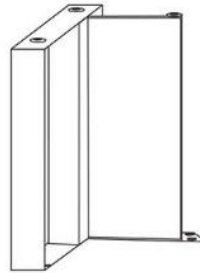


B

 


A

Step 3

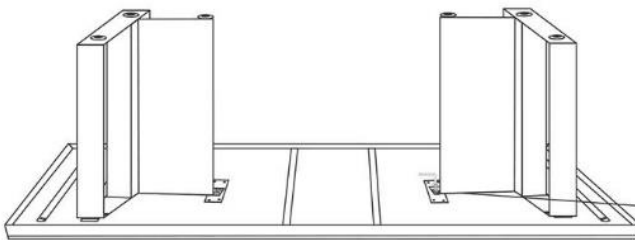

Step 4

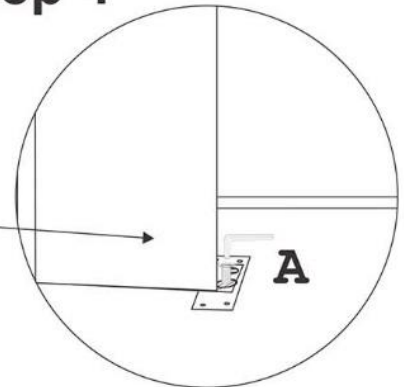

Final Product