 


General Assembly Guidelines

 
- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




VI. A Phillips head screwdriver is required for the assembly of this product.



 
VII. Power tools should not be used to assemble this product.




- VIII. Drill may be needed for securing product to wall.
- IX. Concealed hinges are three-way adjustable.

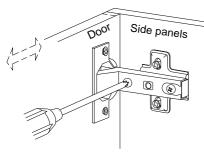


Horizontal by screw adjustment

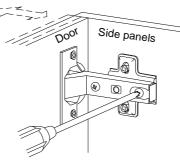


In-and-Out by loosening the hinge-arm mounting screw or via cam adjustment

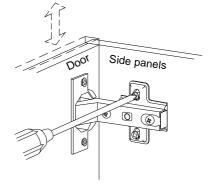


Vertical Via slots in the mounting plate or via cam adjustment

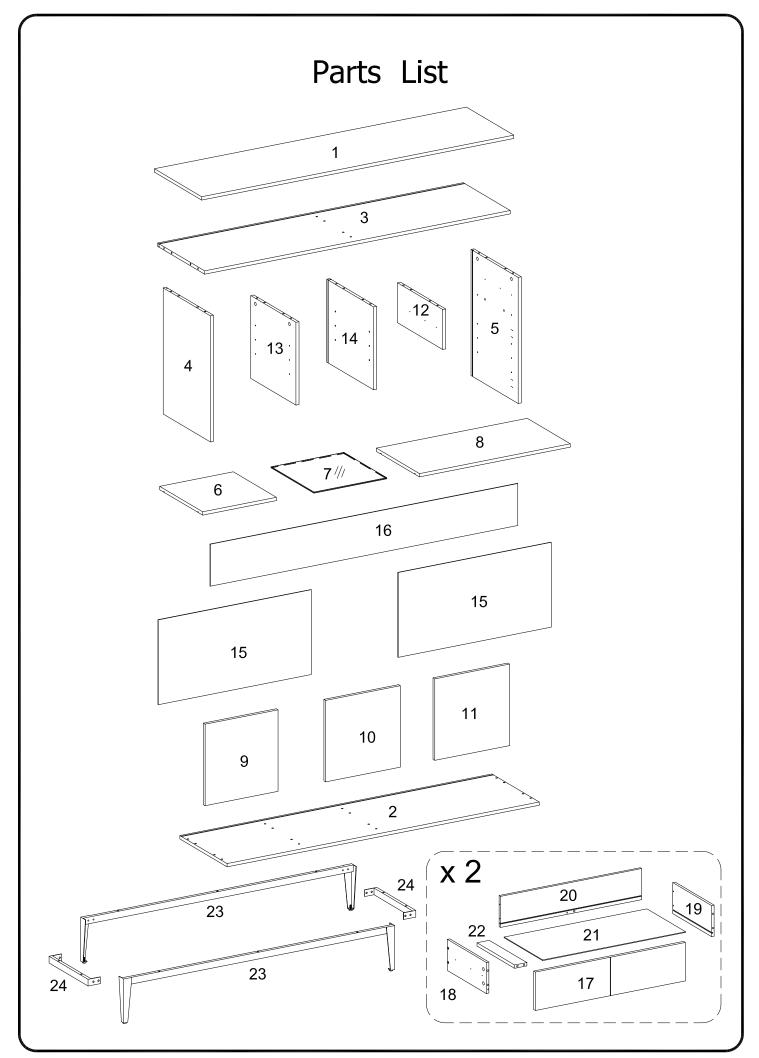


Hardware List					
А		Ø8x30mm	Wooden dowel	28	pcs
В		Ø15x9mm	Cam lock	8	pcs
С		Ø15x11mm	Cam lock	16	pcs
D		Ø6x35mm	Cam bolt	24	pcs
Е	aaaaaa ()	Ø6x50	Bolt	10	pcs
F		M4	Hex Key	1	рс
G		Ø6x12mm	Bolt	8	pcs
Н		Ø6x40mm	Bolt	10	pcs
J	S. C.		Europe hinge	6	pcs
К	<	Ø3.5x14mm	Screw	36	pcs
L	- ann an	Ø3x12mm	Screw	38	pcs
М	<uunin c<="" th=""><th>Ø4x32mm</th><th>Screw</th><th>10</th><th>pcs</th></uunin>	Ø4x32mm	Screw	10	pcs
Ν			Shelf support pin	8	pcs
Ρ			L shape shelf suppo	rt pin 4	pcs
Q	0	Ø30mm	Sticker	24	pcs
R			Plastic wedge	14	pcs
S		Ø3x17mm	Screw	14	pcs
Т			Glue tube	1	рс
U			Handle	7	pcs
V	<	Ø4x12mm	Screw	2	pcs
W		Ø4x25mm	Screw	2	pcs
Х			Plastic strap	2	pcs
Philips head screwdriver required for assembly (not included)					
The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.					

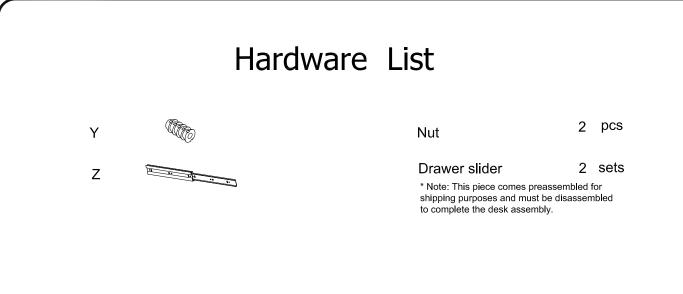


 


Philips head screwdriver required for assembly (not included)


The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

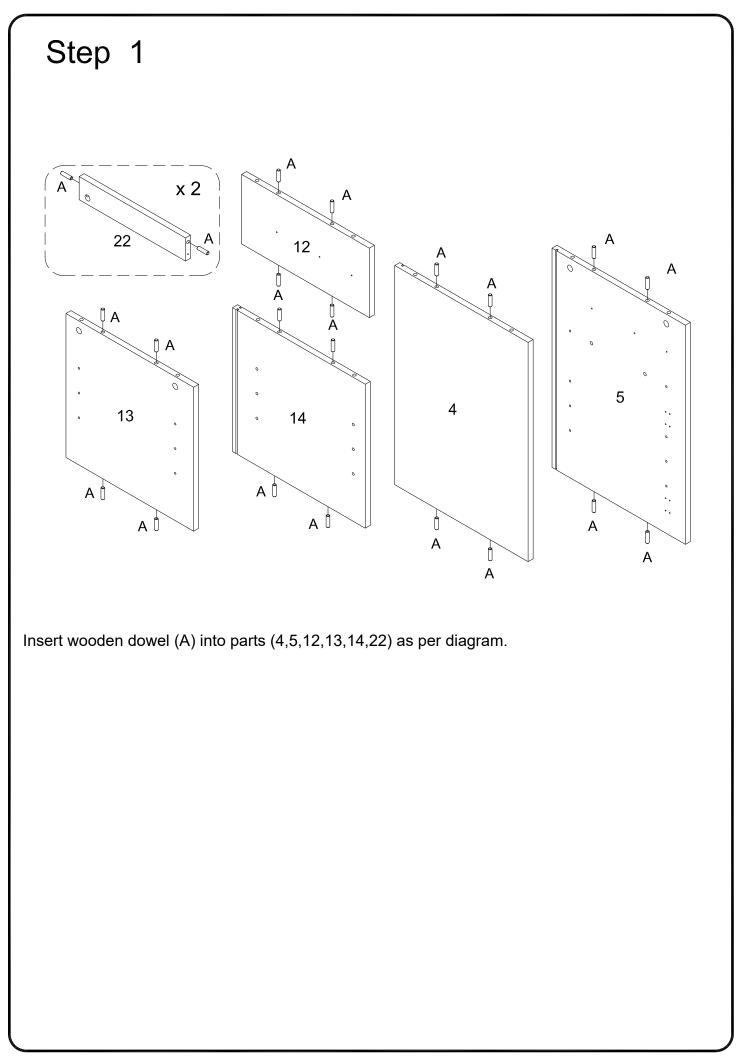


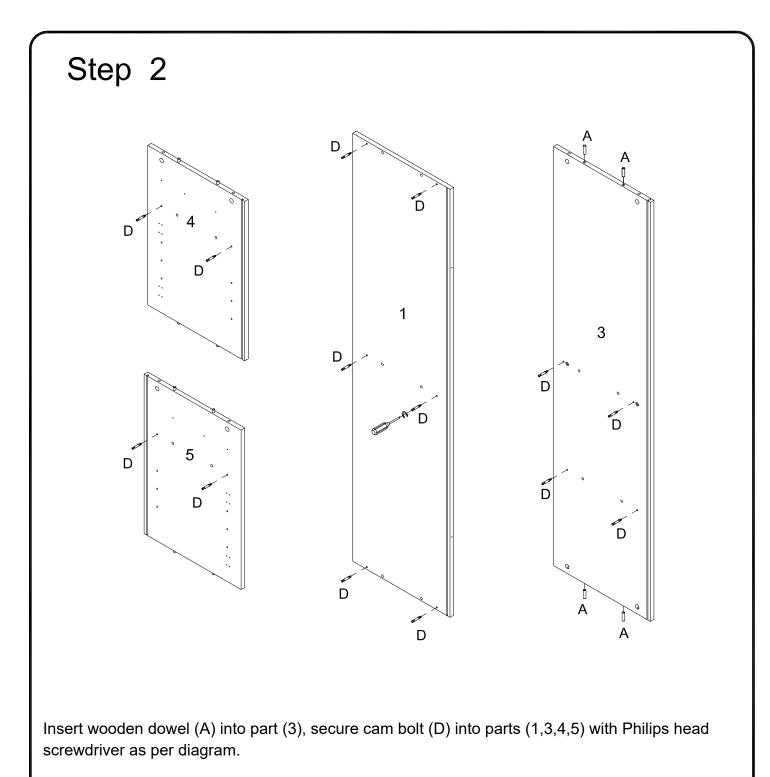


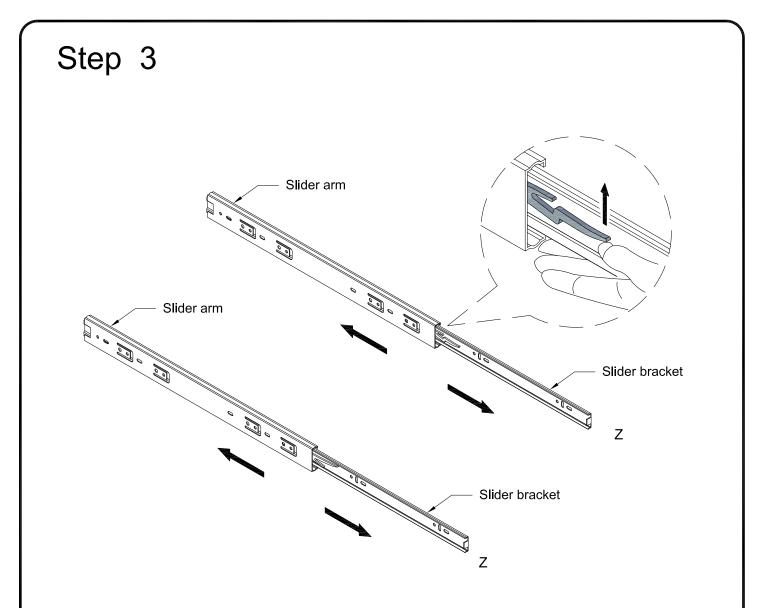



Pick up the slider arm (Z) and separate the slide Runner for the following Steps. Extend the Slide .Runner all the way forward, press the plastic release lever of the alider arm up and pull the Slide Runner Complete out .

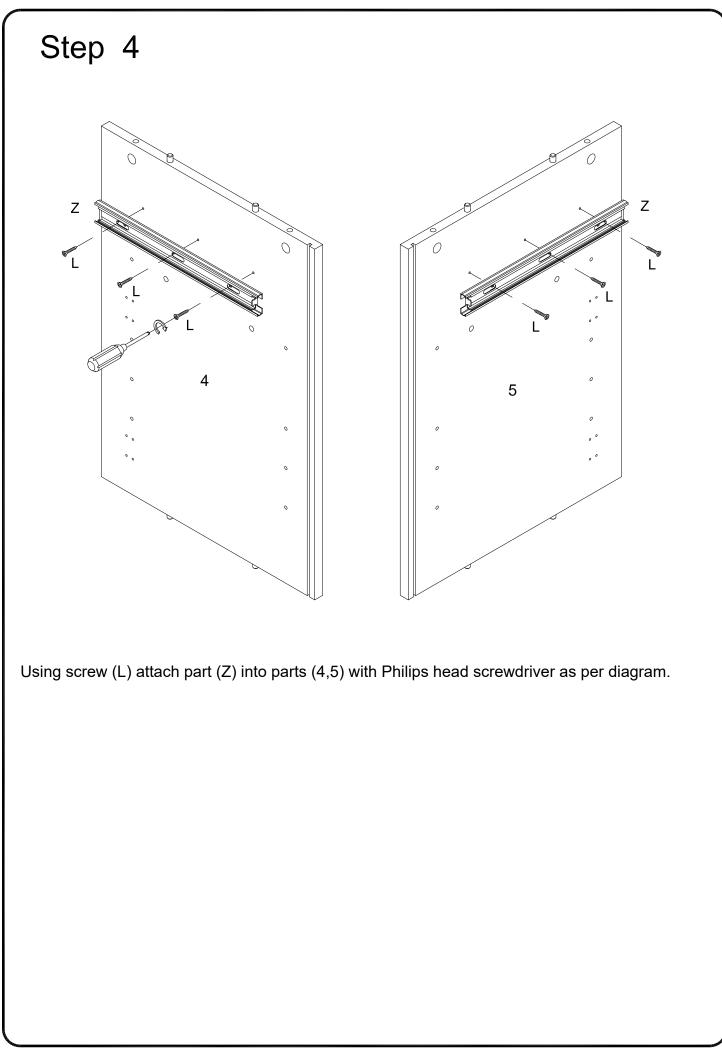


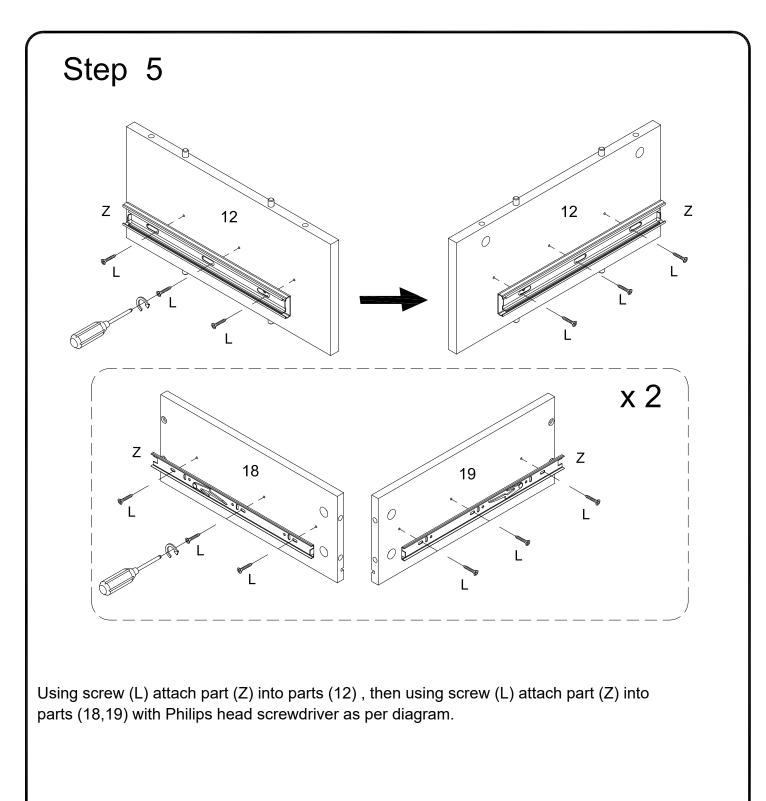


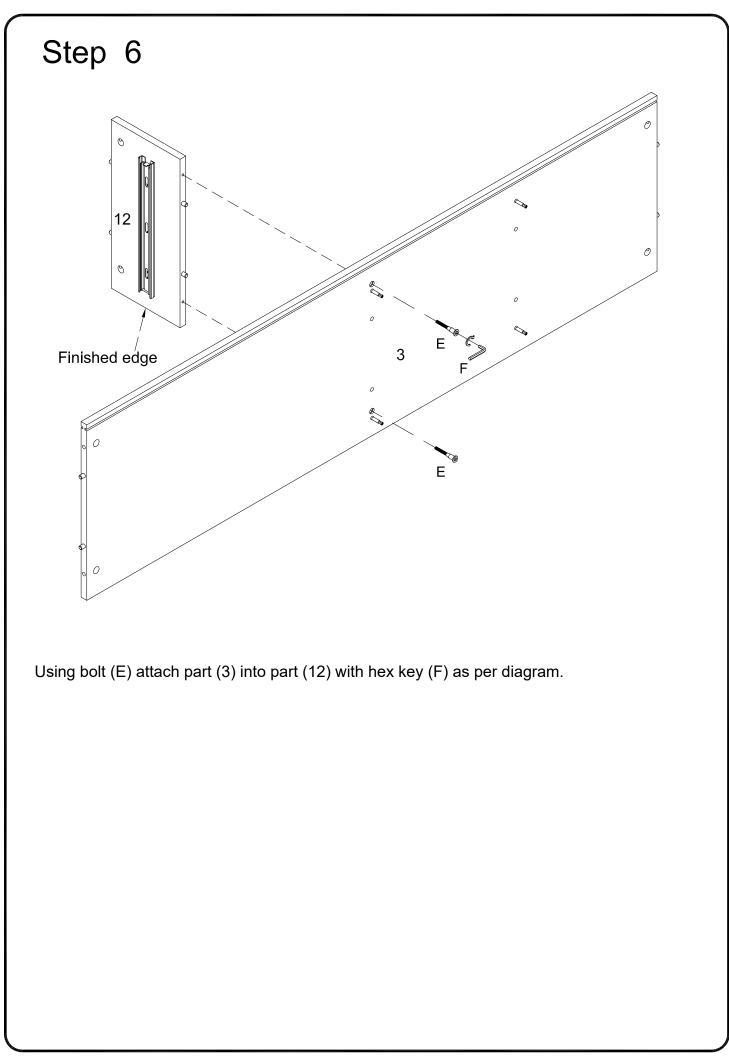


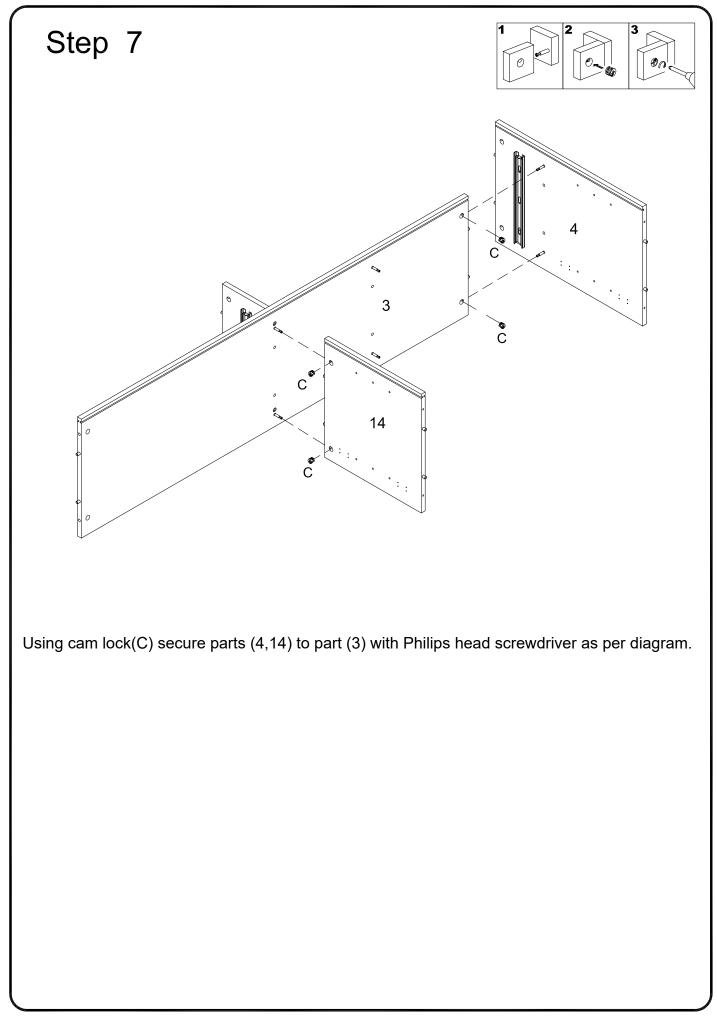


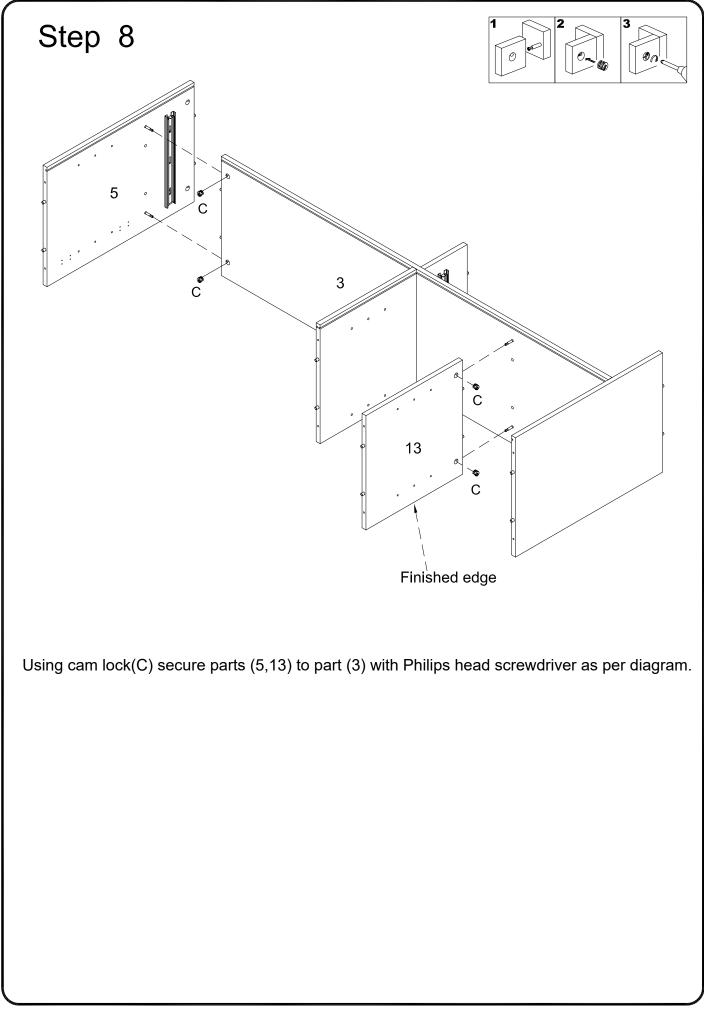


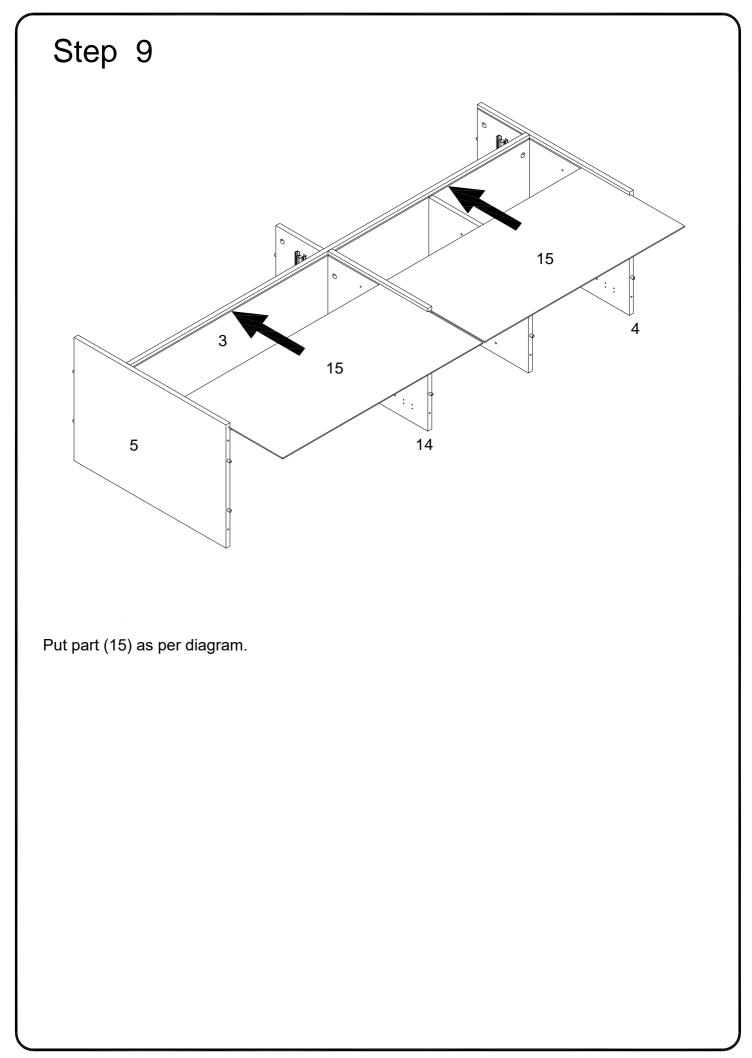


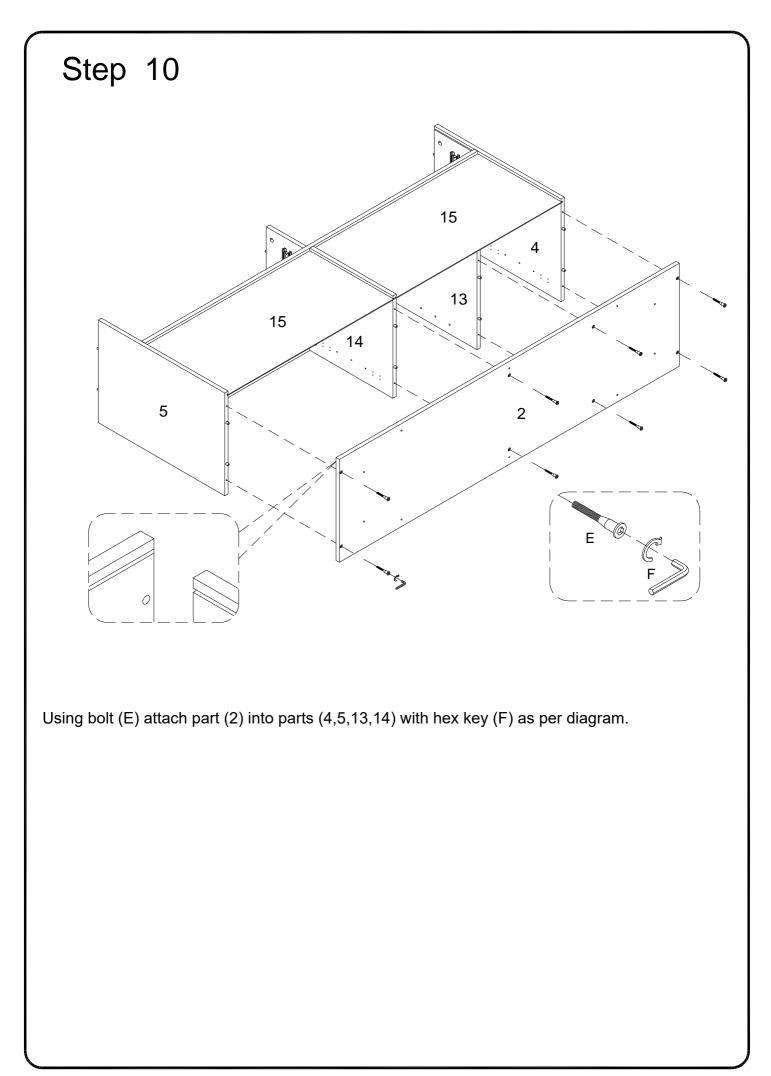


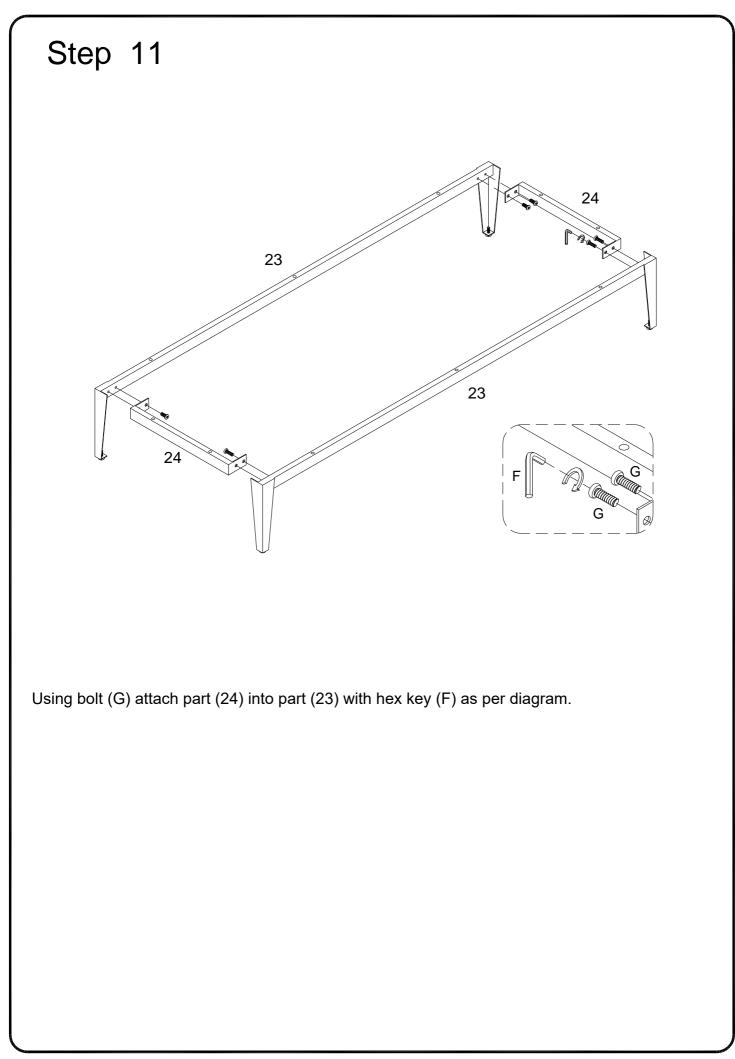


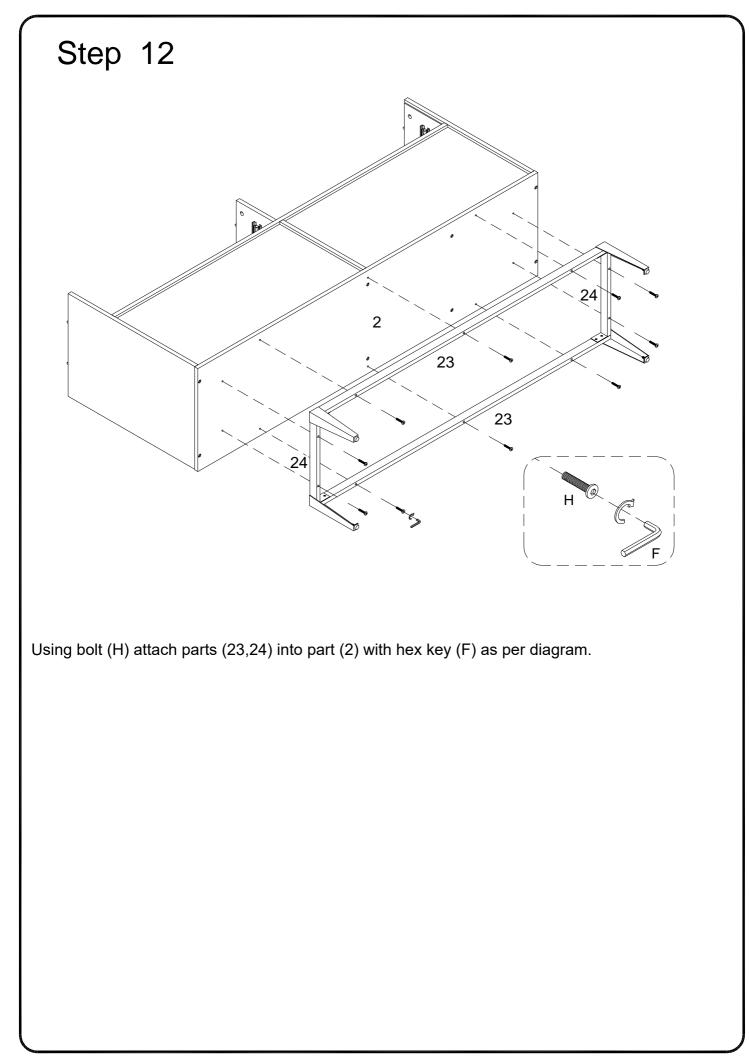


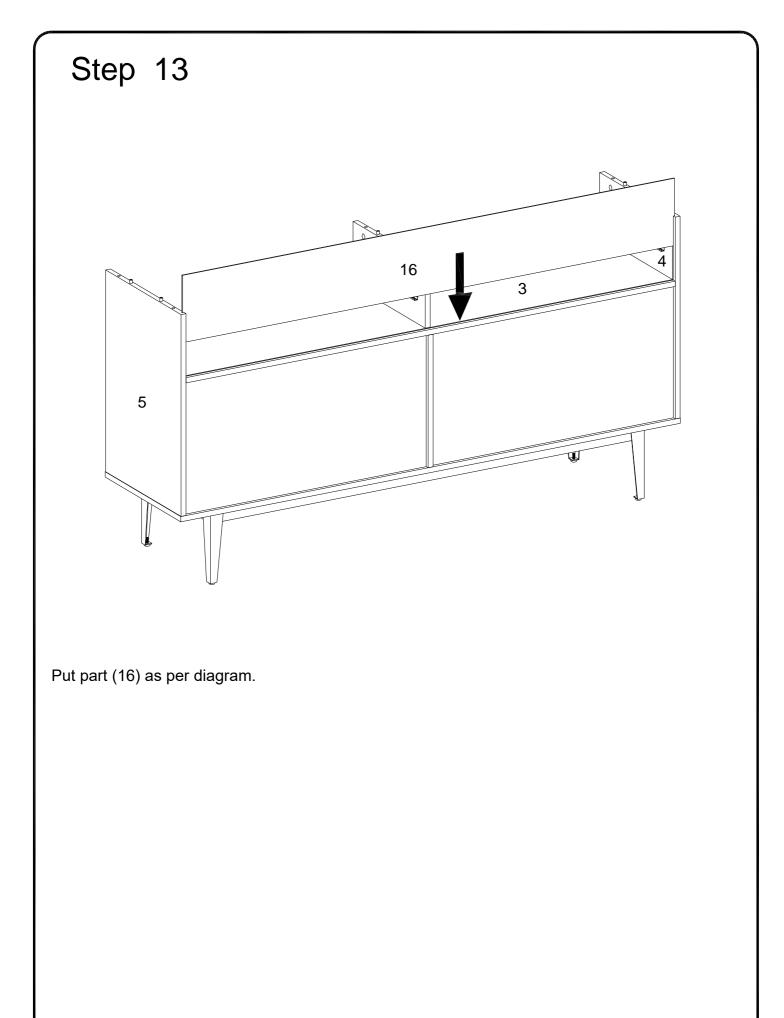


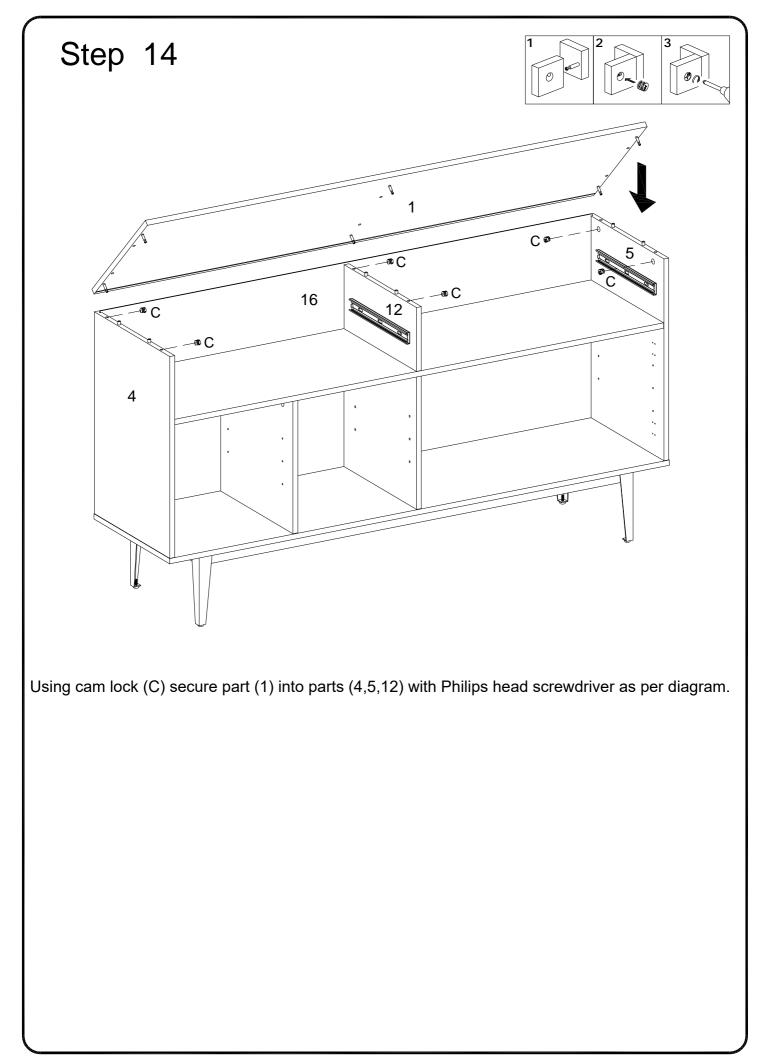


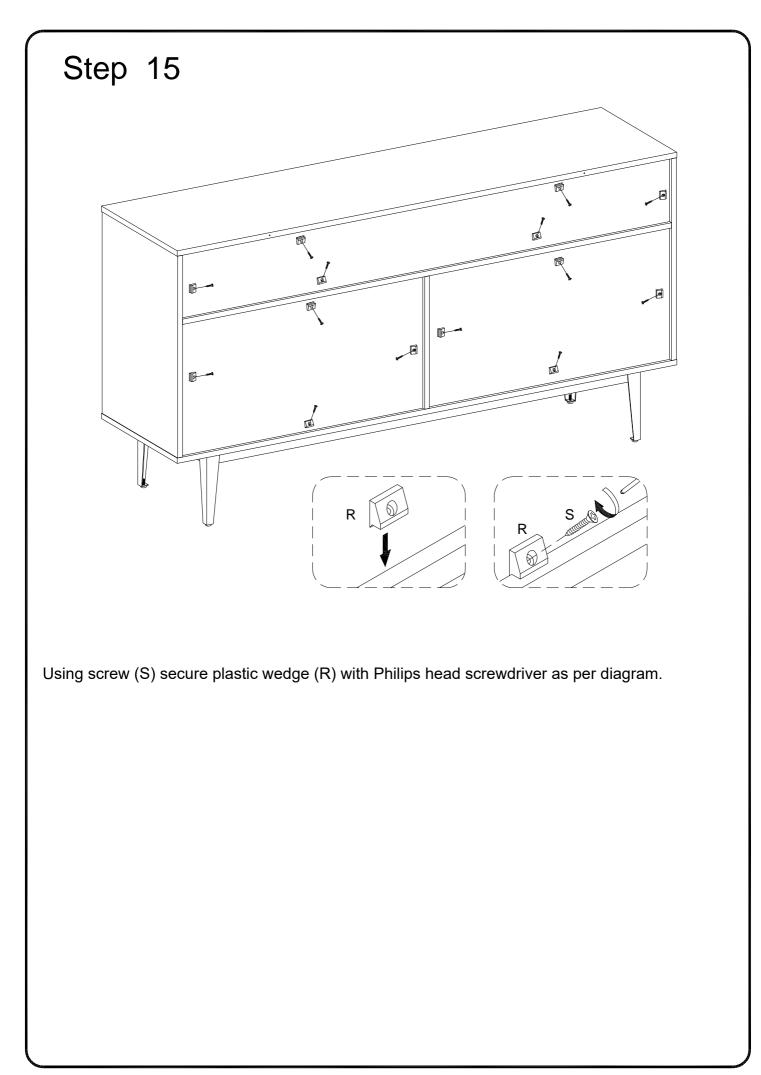


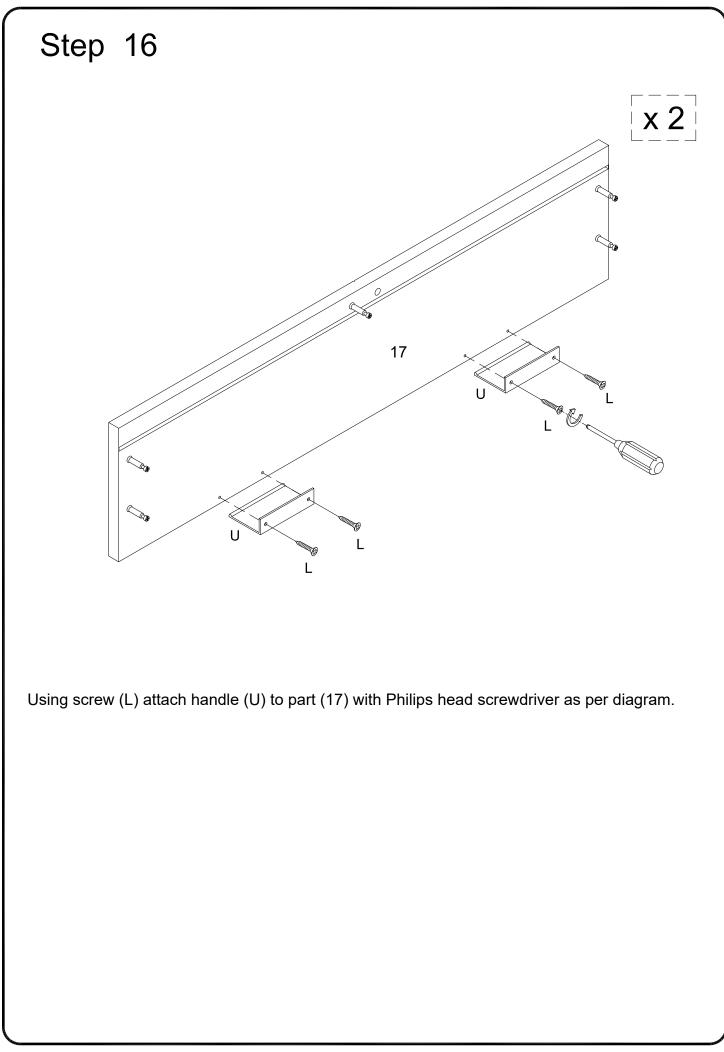


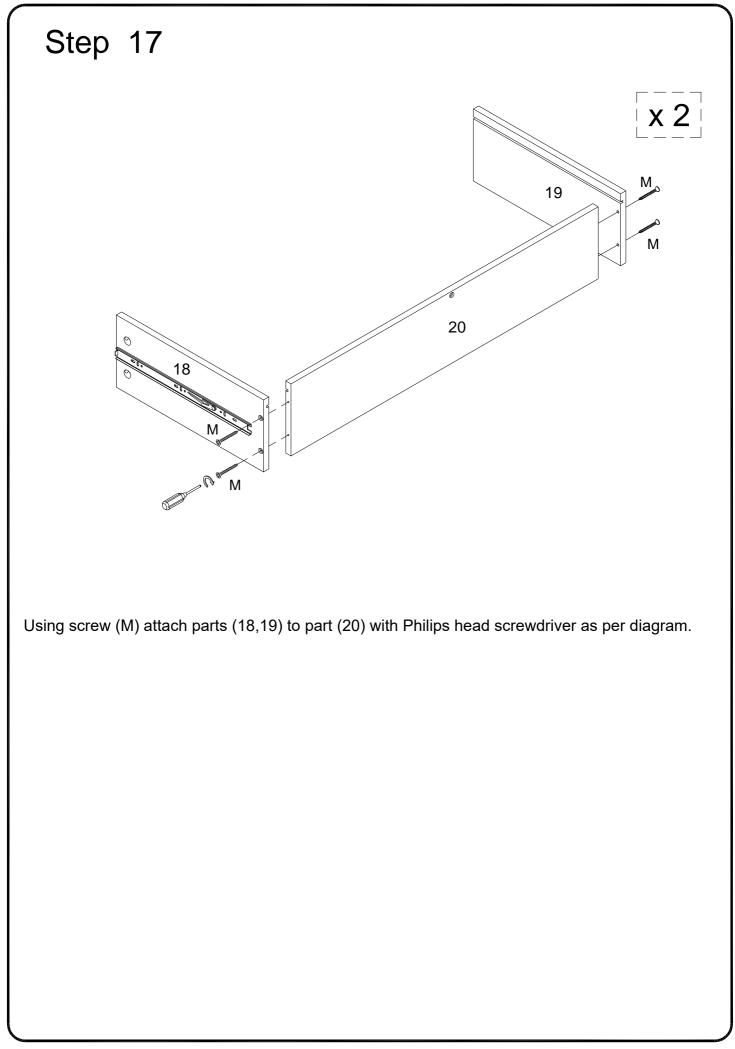


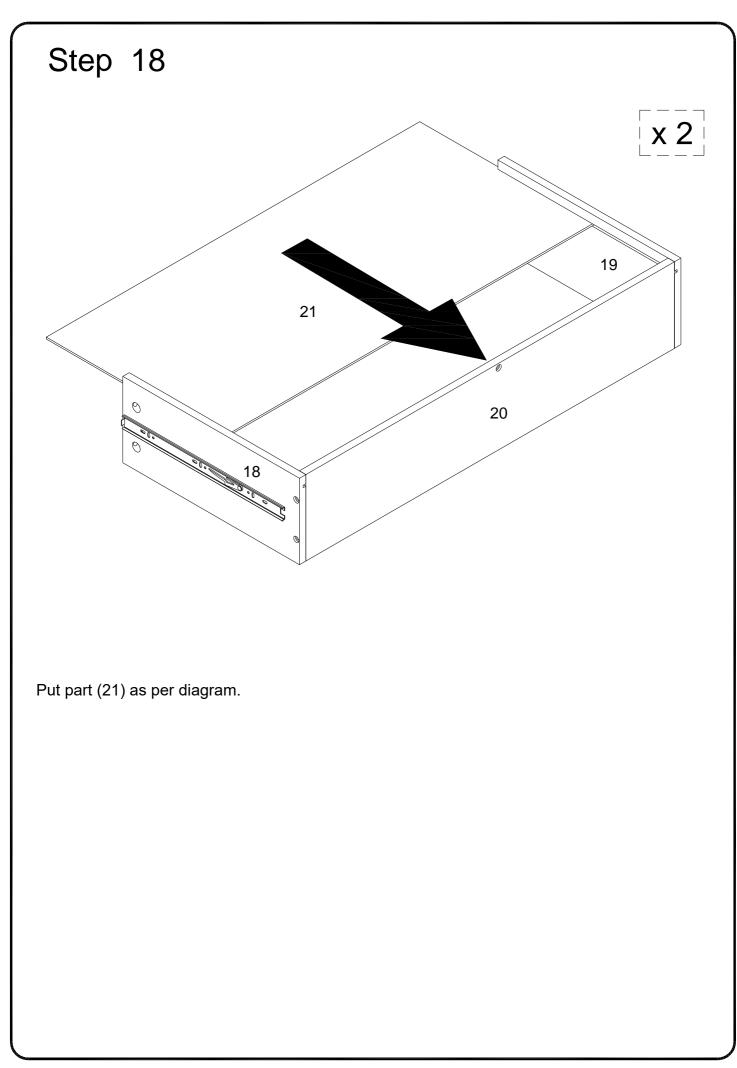

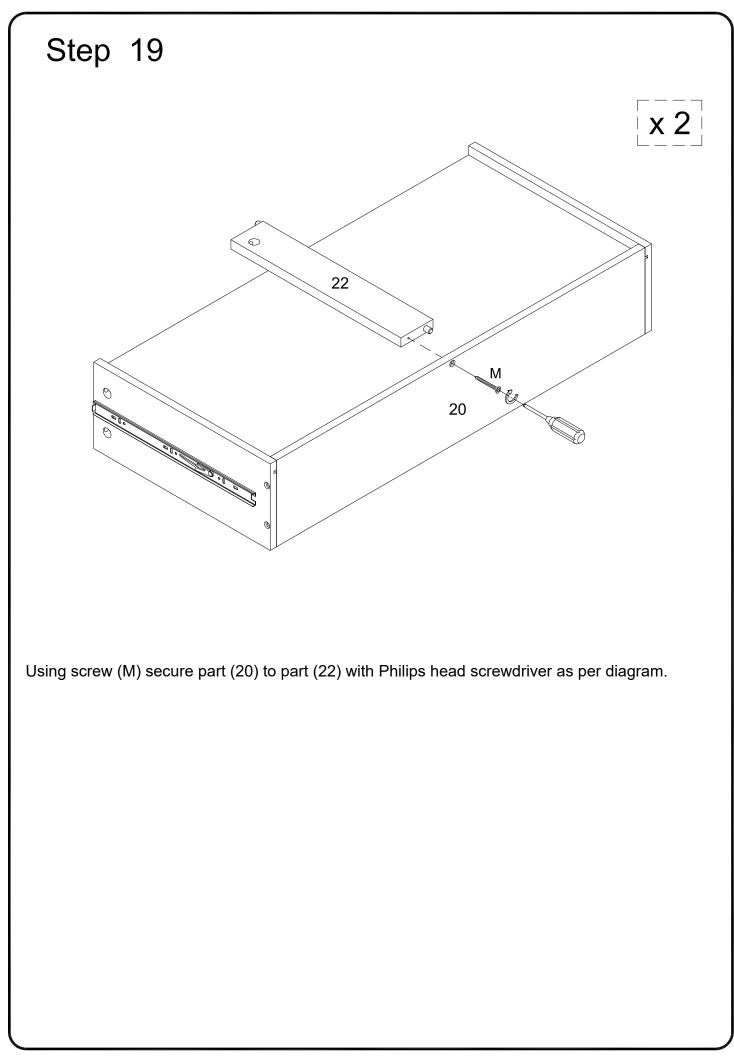

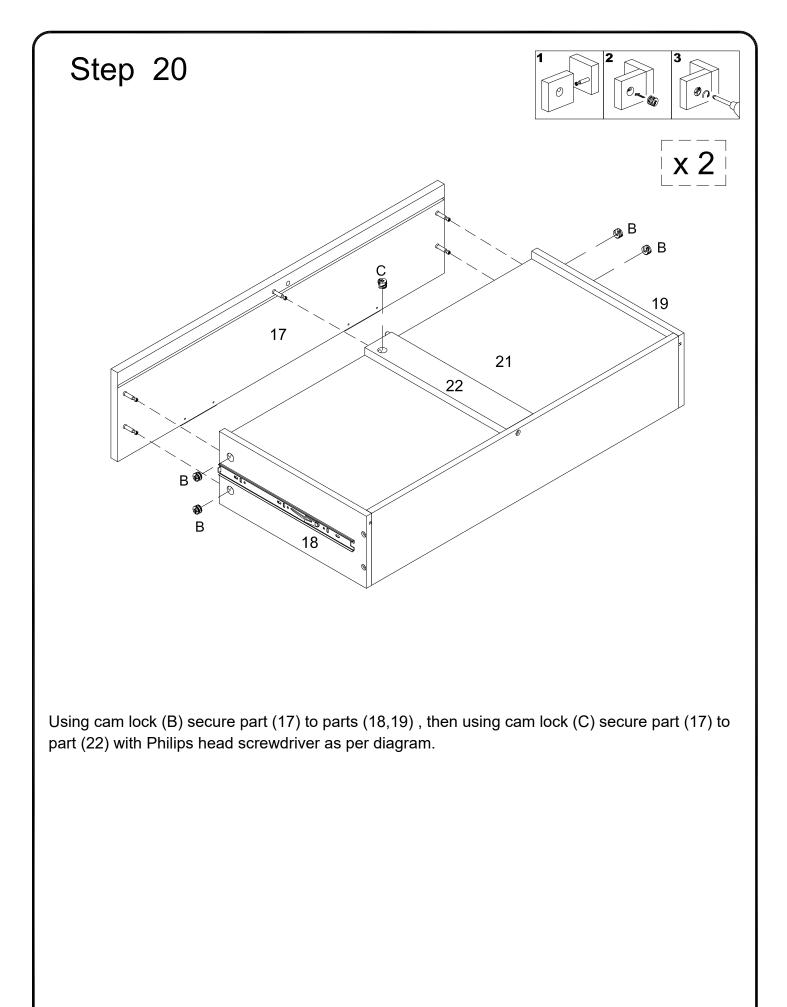


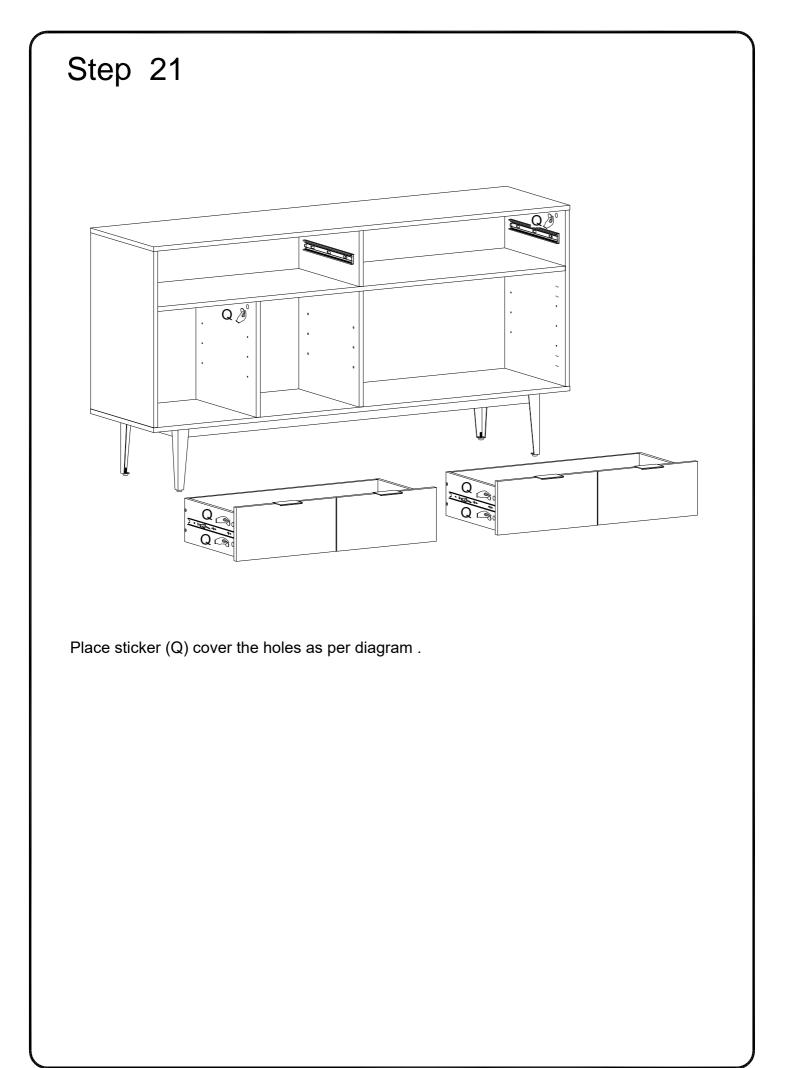


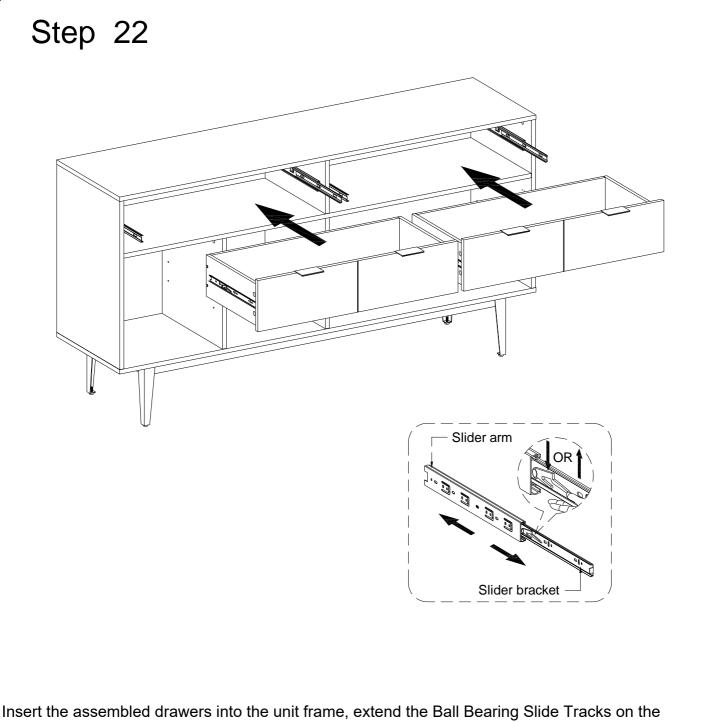



pedestal Side Panel all the way forward .Then align the Slide Runners on the assembled drawers with the Slide Tracks and push the drawer carefully inside until it stops.

Note : if the drawer does not go in smoothly, please take it out and repeat the step. If you need to remove the drawer, please pull the drawer all the way out, then push the plastic release lever of the ball bearing slide up on one side and down on the other side, and then pull it completely out.

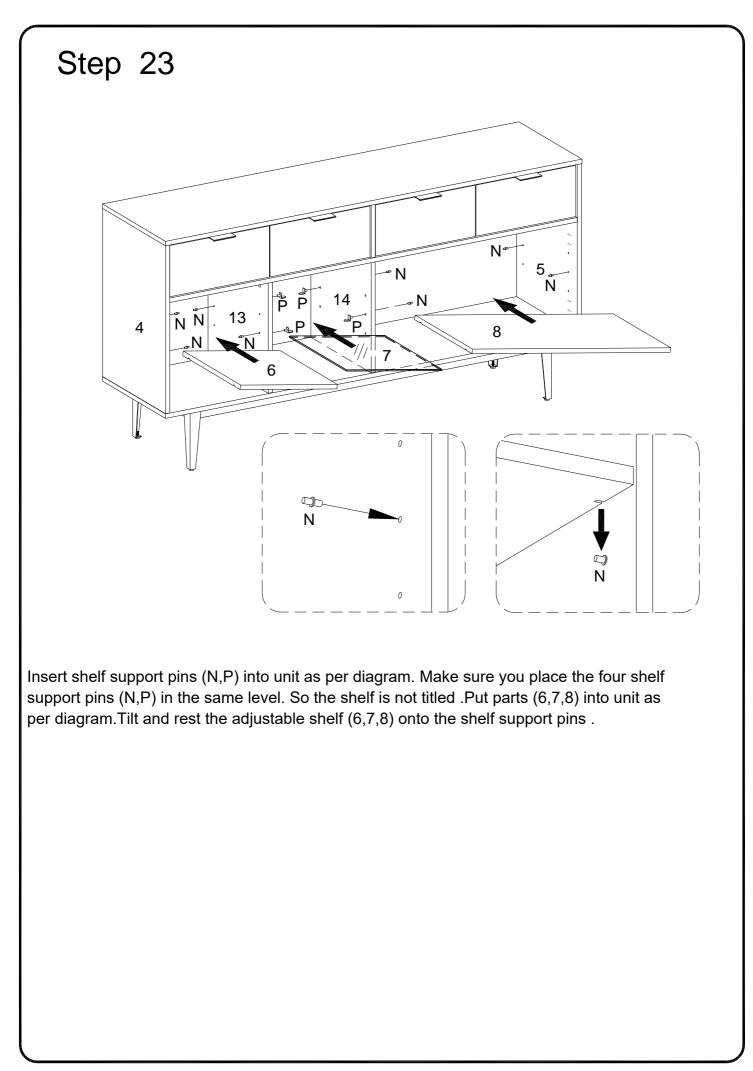

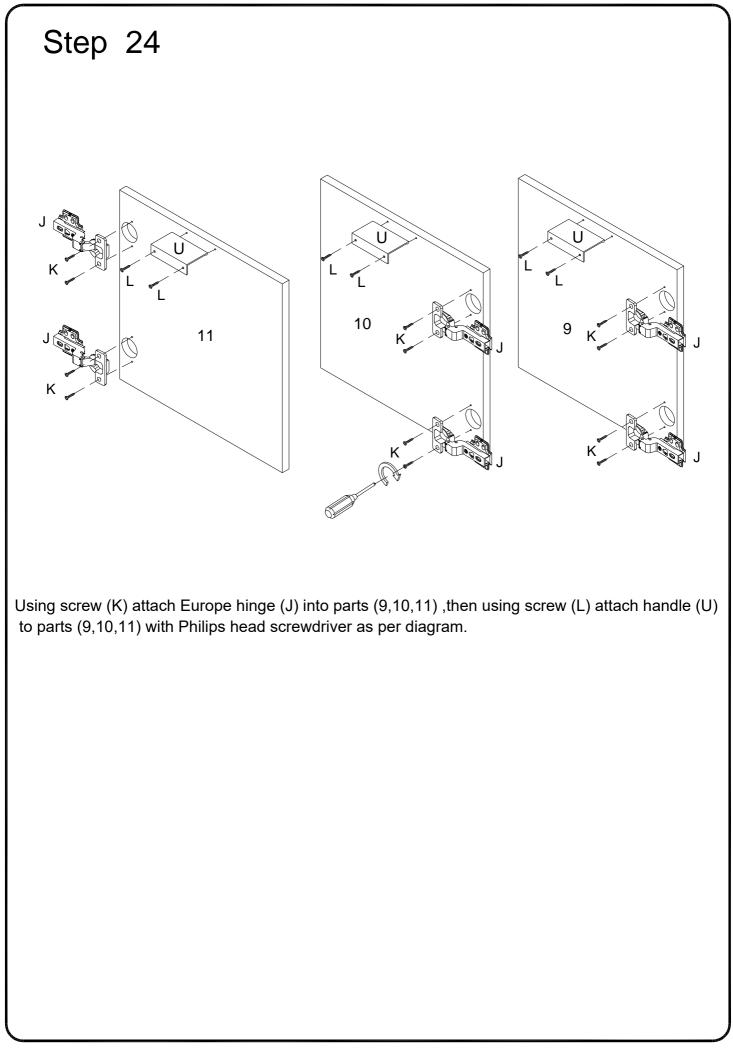

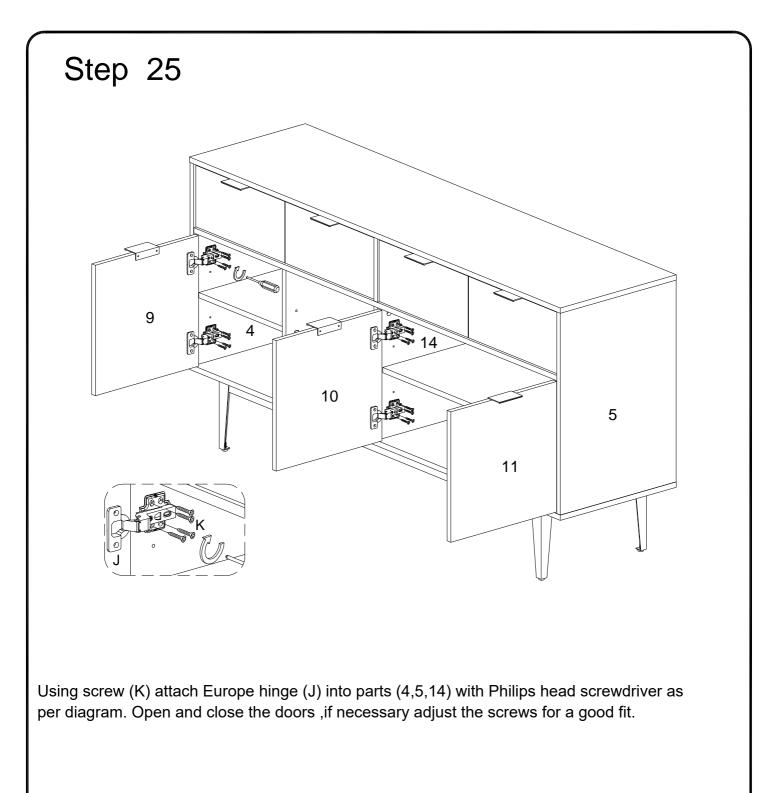

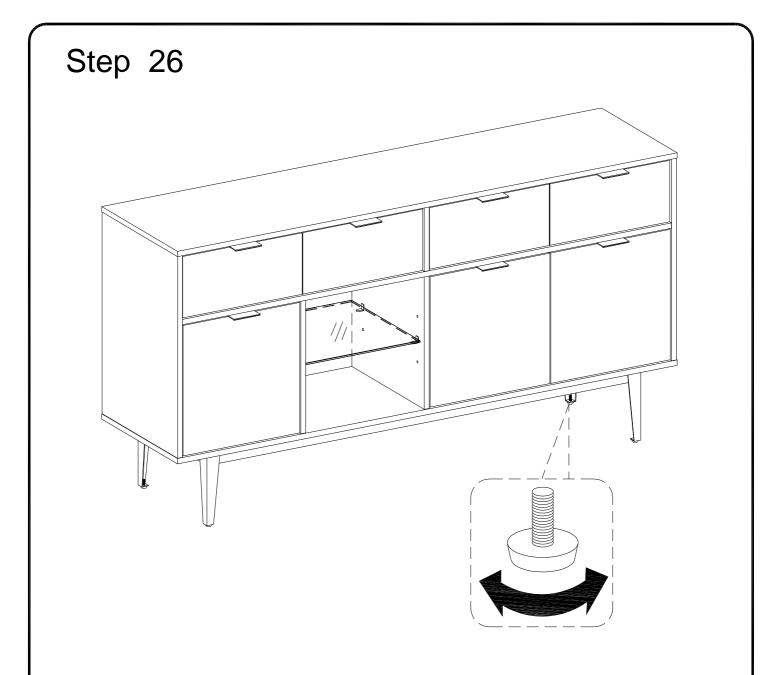

Position the assembled unit at the desired location ,if necessary adjust the floor leveler at the bottom of the legs to level the unit .

