Progressive® ASSEMBLY INSTRUCTION Item No: D841-63 Description: UPH COUNTER DINING CHAIR	
 I M P O R T A N T N O T E : Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched. Check to be sure that you have all parts and hardware. Remove all wrapping materials, including staples & packing straps before you start to assemble. Do not tighten all screws/bolts until all completely assembled. Keep all hardware parts out of reach of children. 	
PARTS FOR EACH CHAIR PARTS LIST	HARDWARE LIST
PARTS LISTNO.COMPONENTQTY.	NO. DESCRIPTION QTY.
1 CHAIR BACK 1 PCS	A ALLEN KEY M4 x 60MM 1 PCS
2 SEAT CUSHION WITH FRAME 1 PCS	BJCBC BOLT M6 x 35MMImage: Descent particular2 PCS
3 LSF STRETCHER - 1 PCS	C JCBC BOLT M6 x 60MM @ 4 PCS
4 RSF STRETCHER - Q 1 PCS	D JCBC BOLT M6 x 80MM @ 4 PCS
5 FRONT STRETCHER 1 PCS	ESPRING WASHER M6 x 13MMImage: 010 PCS
6 LSF FRONT LEG - D	FFLAT WASHER M6 x 19MM(0)10 PCS
7 RSF FRONT LEG - R 1 PCS	G PAN HEAD SCREW M4 x 32MM () 6 PCS
STEP 1 A D E F 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	STEP 2
STEP 3	STEP 4