

Assembly Instruction


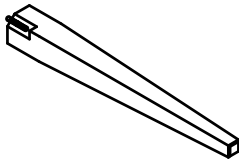
Instructions d'assemblage

HOUS 1173-3660 FIX TOP DINING TABLE, DARK
 1183-3660 FIX TOP DINING TABLE, LIGHT OAK


SKU # 42111738
 SKU # 42111839

WARNING: To avoid alignment issue, please don't tighten the screws unless all legs are adjusted at the same level.

Step	Code	Hardware	QTY
1	A	Flat washer Ø5/16"x 3/4" Rondelle plate Ø5/16"x 3/4"	8 PCS 8 Pièces
1	B	Spring washer Ø5/16"x 1/2" Rondelle de ressort Ø5/16"x 1/2"	8 PCS 8 Pièces
1	C	Hex- Nut Ø5/16" Ecrou hexagonal Ø5/16"	8 PCS 8 Pièces
2	D	Wrench 3-1/2"x 1/2" Clé 3-1/2"x 1/2"	1 PCS 1 Pièce

Step	Code	Part List:	QTY
3	E	Table Top Dessus de table 	1pc 1pièce
4	F	Table Leg Pied 	4pcs 4pièce

ASSEMBLY COMPLETED

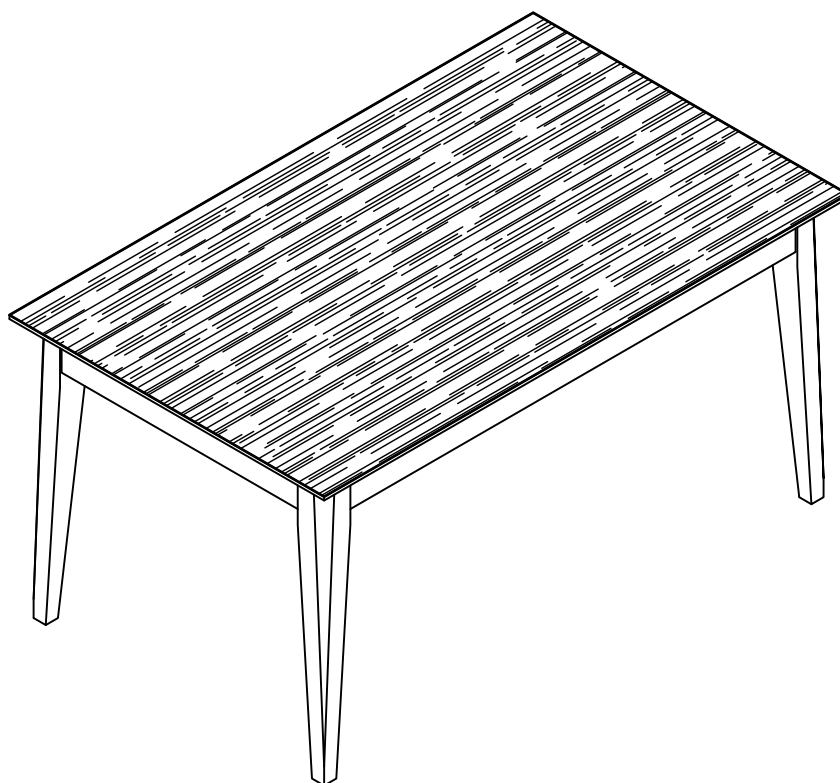

Hardware Pack Location (s):

HOUS 1173-3660 FIX TOP DINING TABLE, DARK
 1183-3660 FIX TOP DINING TABLE, LIGHT OAK

SKU # 42111738
 SKU # 42111839

Assembly Instruction

Instructions d'assemblage

HOUS 1173-3660 FIX TOP DINING TABLE, DARK
1183-3660 FIX TOP DINING TABLE, LIGHT OAK

SKU # 42111738
SKU # 42111839

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

***Avertissement: veuillez lire toutes les instructions attentivement avant de commencer l'assemblage. Ces pièces sont encombrantes et lourdes. Il est recommandé d'être deux personnes pour l'assemblage afin de prévenir des blessures et/ou risquer d'endommager les pièces.

STEP 1

ÉTAPE 1

