





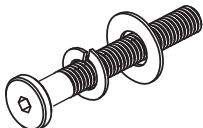
 
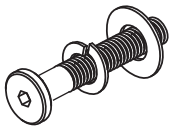
ASSEMBLY INSTRUCTION

UQFN 36822320, 36822330
Dining Chair

SKU# 42423880
SKU# 42424882

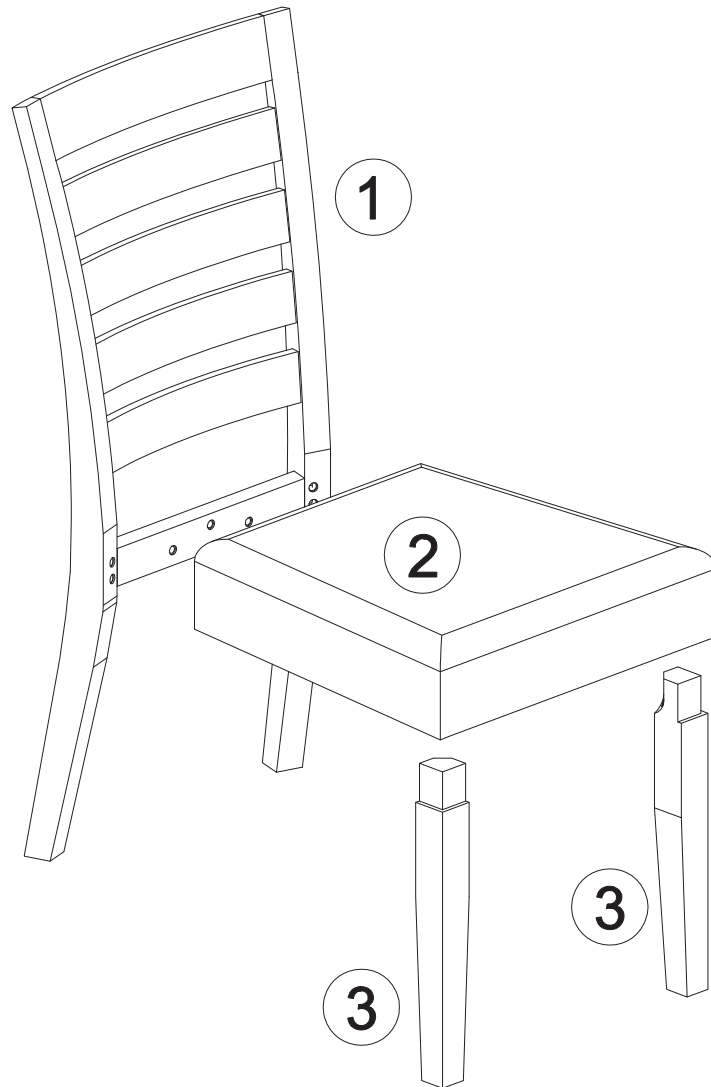

Step	Code	Part Name	Q'TY
1	1	Backrest Assembly	1 Pc
1	2	Seat	1 Pc
2	3	Front Legs	2 Pcs

Step	Code	Hardware		Q'TY
	A	Allen key M4		1 Pc
1	B	Allen bolt M6x90mm		4 Pcs
1	C	Lock washer 1x6x11mm		4 Pcs
1	D	Flat washer 1x6x16mm		4 Pcs
1	E	Allen bolt M6x40mm		3 Pcs
1	C	Lock washer 1x6x11mm		3 Pcs
1	D	Flat washer 1x6x16mm		3 Pcs
2	F	Allen bolt M6x60mm		4 Pcs
2	C	Lock washer 1x6x11mm		4 Pcs
2	D	Flat washer 1x6x16mm		4 Pcs




ASSEMBLY INSTRUCTION

UQFN 36822320, 36822330
Dining Chair

SKU# 42423880
SKU# 42424882


*** Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

Step 1

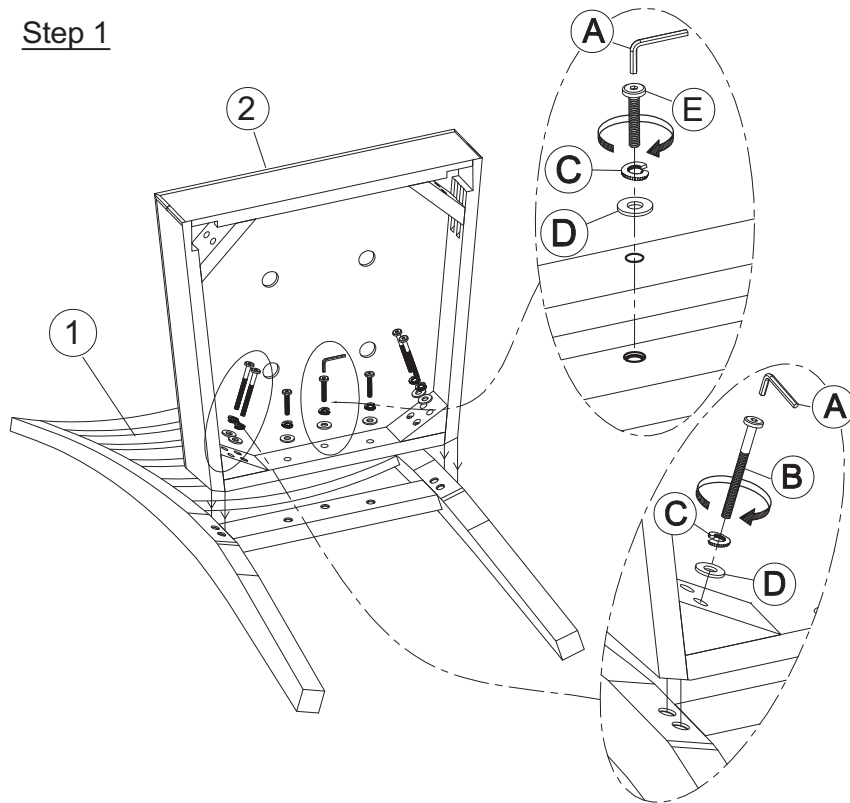


Lay flat the Backrest Assembly (1) to clean surface. Secure the Seat (2) with Allen bolt (B), Allen bolt (E), Lock washer (C) and Flat washer (D) using Allen key (A). Fully tighten all bolts.

Step 2

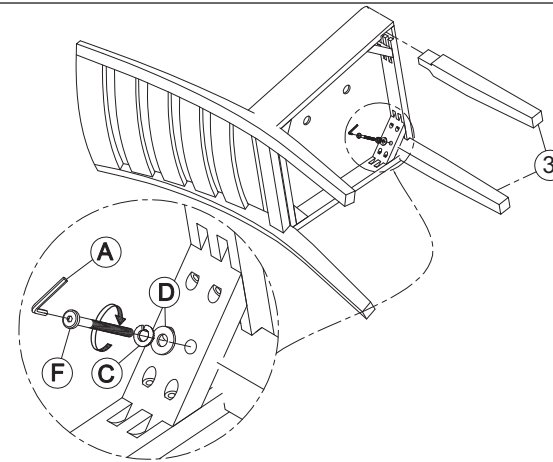

Attach the Front Legs (3) with Allen bolt (F), Lock washer (C) and Flat washer (D) using Allen key (A). Fully tighten all bolts.

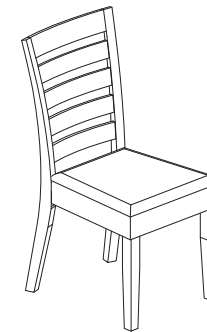

Product is ready to use