

MODEL : SH10010BS/GS/RS/VS/TS






ASSEMBLY INSTRUCTION

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched.


CAUTION:

1. Do not FULLY - TIGHTEN the nut or screw until all is ready to assemble.
2. Do not OVER - TIGHTEN the nut or screw to avoid causing damages to the thread.
3. Keep all hardware part out of reach of children.



NO	PART LIST	QTY
A	BACK REST	1 PC
B	FRONT LEG	2 PCS
C	FRAME BOX WITH CUSHION	1 PC

NO	HARDWARE LIST	QTY
1	M6 X 50MM JCBC SCREW 	6 PC
2	M6 X 80MM JCBC SCREW 	4 PC
3	SPRING WASHER 	10 PC
4	FLAT WASHER 	10 PC
5	M4 ALLEN KEY 	1 PC

STEP 1

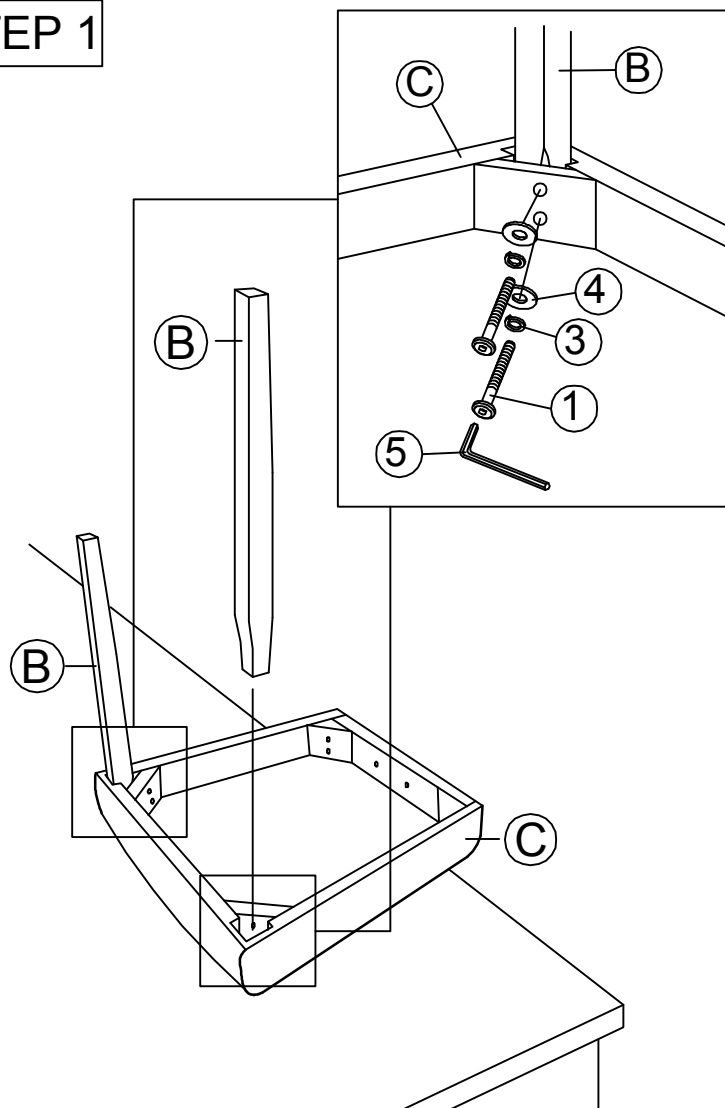

STEP 2

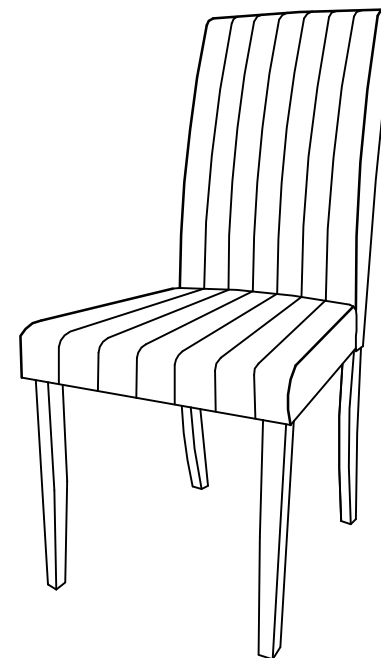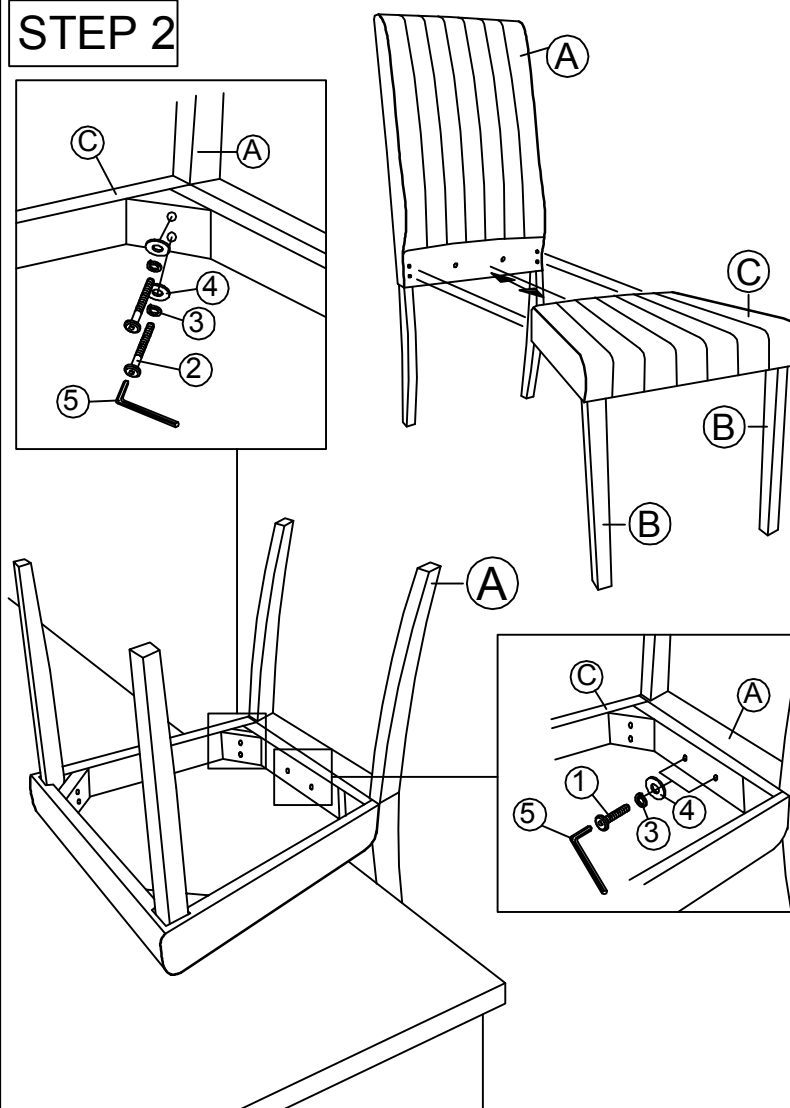

COMPLETED ASSEMBLY