 
 
 
 
 



Thanks for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below.

Part list

(A) Back chair - 1 pc 	(B) Seat frame - 1 pc 	(C) Left leg - 1 pc 	(D) Right leg - 1 pc 	(E) Stretcher - 2 pcs 
① Long bolt - 8 pcs  Ø5/16"x18x85mm	② Short bolt - 2 pcs  Ø1/4"x20x45mm	③ Wood screw - 4 pcs  #8x45mm	④ Allen key - 1 pc  M4	

STEP 1

- 1.1.** Place the back chair (A) on a soft and clean surface. Assemble the seat frame (B) with the back chair (A) by using allen key (4) with hardware (2).
- 1.2.** Assemble the seat frame (B) with the back legs of the back chair (A) by using allen key (4) with hardware (1).
- *Attention: DO NOT TIGHTEN THE BOLTS.

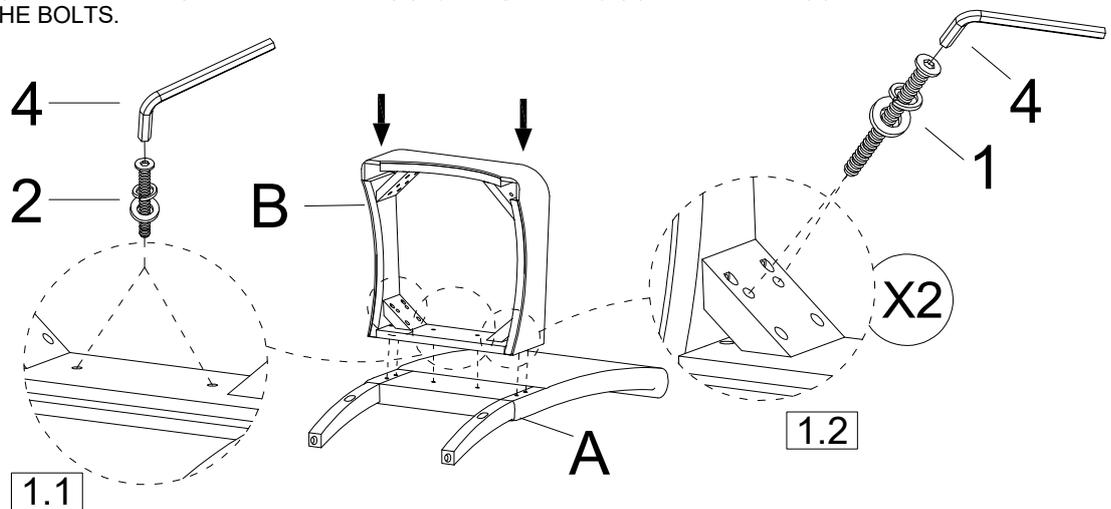


hardware pack locations:

9286-BR DINING CHAIR BURGUNDY	- SKU# 42492861
9286-CH DINING CHAIR CHOCOLATE	- SKU# 42492873
9286-GR DINING CHAIR GRAY	- SKU# 42492885
9286-CP DINING CHAIR CHAMPAGNE	- SKU# 42492897


STEP 2

- 2.1. Assemble the left leg (C) and right leg (D) with the seat frame (B) by using allen key (4) with hardware (1).
 - 2.2. Install the stretcher (E) between the front legs (C & D) and the back legs of the back chair (A). Assemble all the stretchers by using a screwdriver with hardware (3).
- *Attention: DO NOT TIGHTEN THE BOLTS.

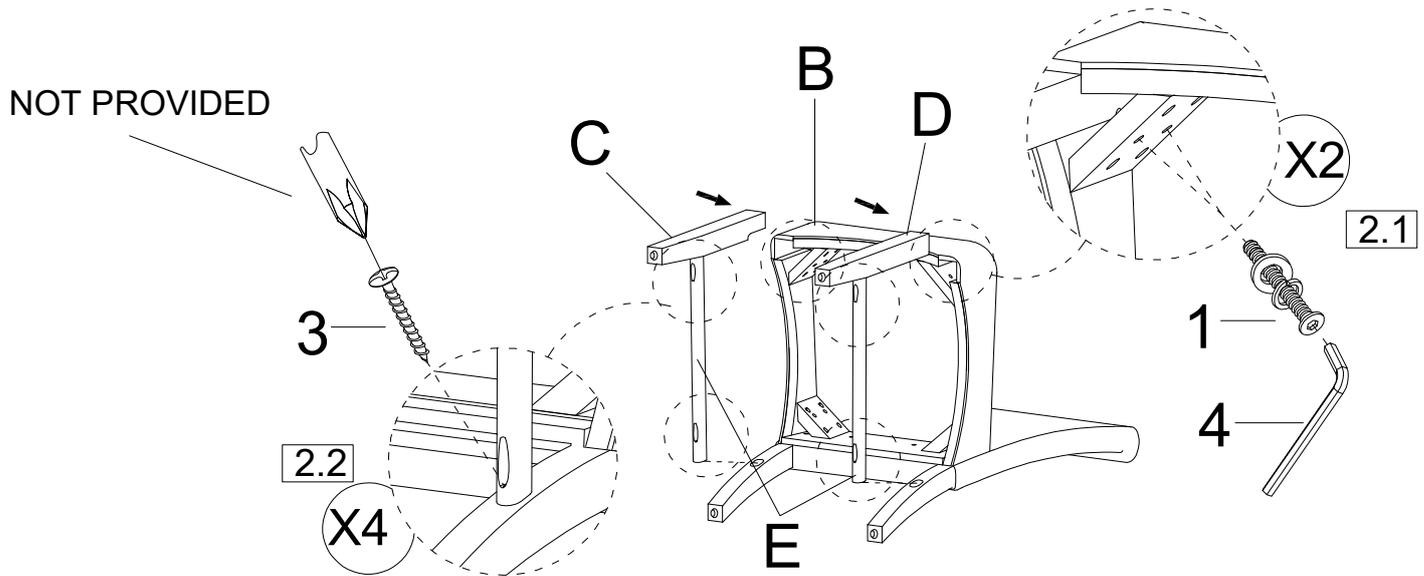

STEP 3

To level the chair, stand the chair up on a flat surface and tighten all the bolts by using allen key (4) and tighten all the screws by using a screwdriver.

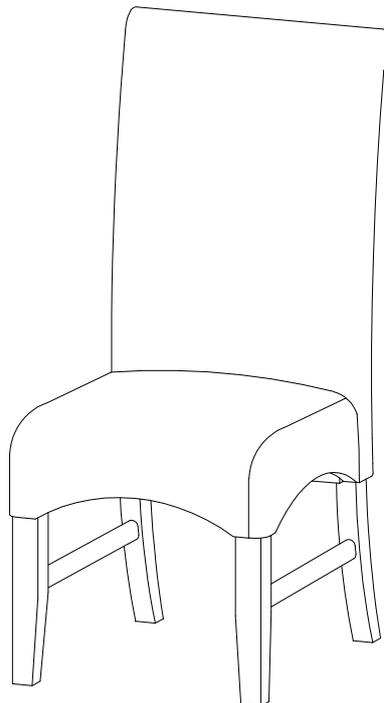

COMPLETE