



ASSEMBLY INSTRUCTIONS


MODEL : 2038

AXEL
2038 DINING CHAIR - SKU # 42420389, 42520381, 42620383, 42720385

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts. Which may have come loose inside the carton during shipment. Identify and count all parts and compare with the hardware list as below :

Hardware List	No.	Picture	Description	Dimension	Qty
	①		JCBC M6 with washer	6 x P1.0 x 50mm	6 Pcs
	②		JCBC M6 with washer	6 x P1.0 x 80mm	4 Pcs
	③		Allen Wrench (M4)	4 x 60mm	1 Pc
	④		Pan Head Screw M4	4 x 38mm	4 Pcs

Parts List	No.	Description	Qty
	A	Back Rest	1 Pc
	B	Front Leg (L & R)	2 Pcs
	C	Cushion Seat	1 Pc
	D	Side Stretcher	2 Pcs

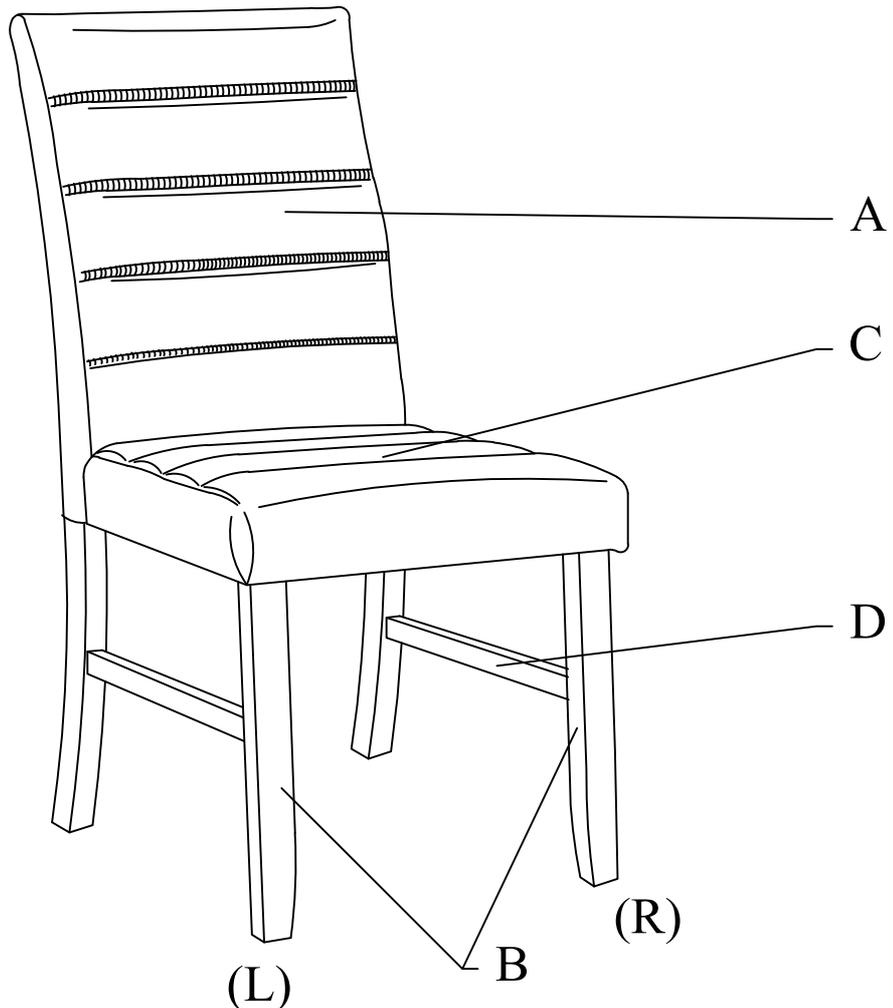


PARTS DETAILS

Assembly step


STEP 1

Assemble SEAT to BACKREST as illustration shown. DO NOT TIGHTEN THE SCREWS UNTIL FULLY SET UP.

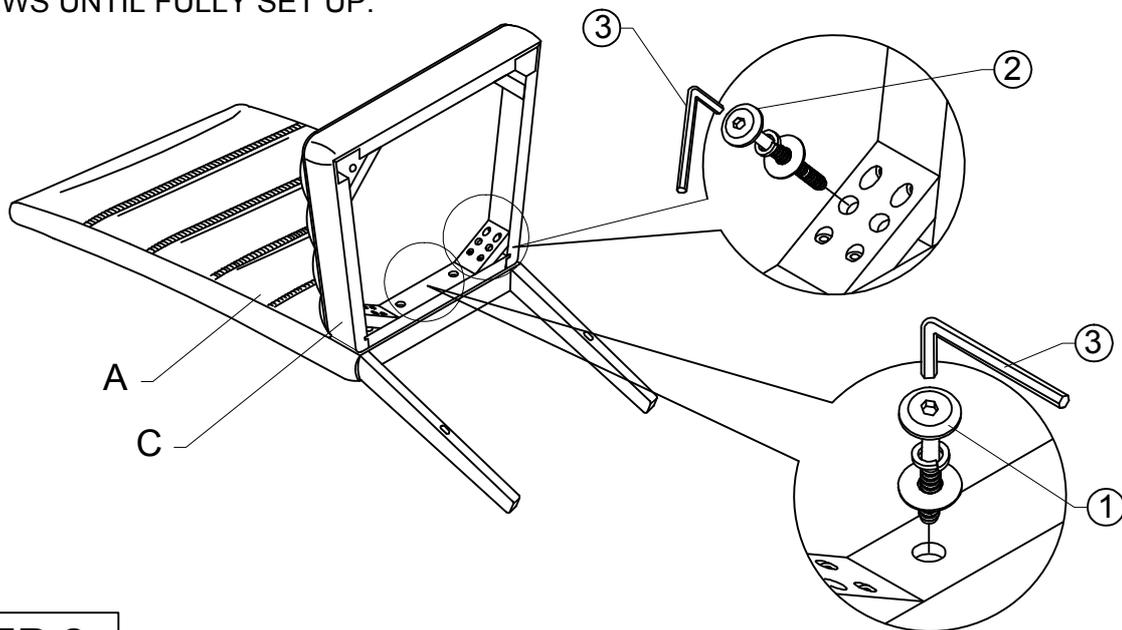

STEP 2

Assemble FRONT LEG to SEAT together with STRETCHER as illustration shown. DO NOT TIGHTEN THE SCREWS UNTIL FULLY SET UP.

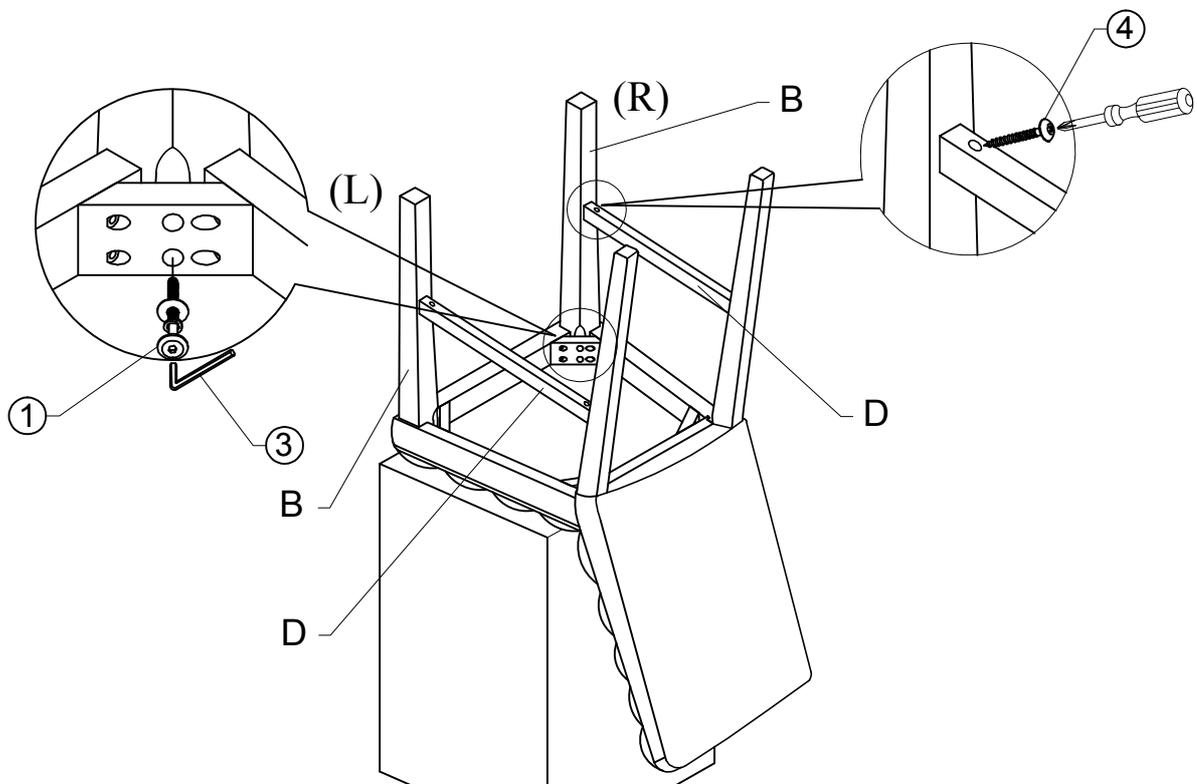

NOTE:

To ensure that chair is level, assemble the chair on flat & soft surface. DO NOT tighten all the screws & bolts until the chair been adjust & level all the legs so that they do not wobble. Once adjusted then only tighten all the screw using Allen Key while making sure that the unit remain level.