














THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIALS CAREFULLY FOR SMALL HARDWARE WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT. IDENTIFY AND COUNT ALL HARDWARE AND COMPARE WITH THE HARDWARE LIST BELOW.


PARTS LIST :

No.	Description	Sketch	Q' TY
A	Chair Back		1 pc
B	Seat Cushion		1 pc
C	Right Leg (C)		1 pc
D	Left Leg (D)		1 pc
E	Side Stretchers		2 pcs


LIST OF HARDWARE

No.	Description			Q'ty
1		Bolt Flat washer Lock washer	Ø5/16"-18 x 3-1/2" Ø5/16" x 12 Ø5/16" x 19	4 pcs
2	  	Hex Nut Flat washer Lock washer	Ø5/16" x 12mm Ø5/16" x 12 Ø5/16 x 19	4 pcs
3		Bolt Flat washer Lock washer	Ø1/4"-20 x 1-1/2" Ø1/4" x 12 Ø1/4 x 19	2 pcs
4		L-Allen Key	4mm	1 pc
5		Wrench	12mm	1 pc
6		Wood Screw	#8 x 1-1/2"	4 pcs


Step 1 : Do not fully tighten all bolts

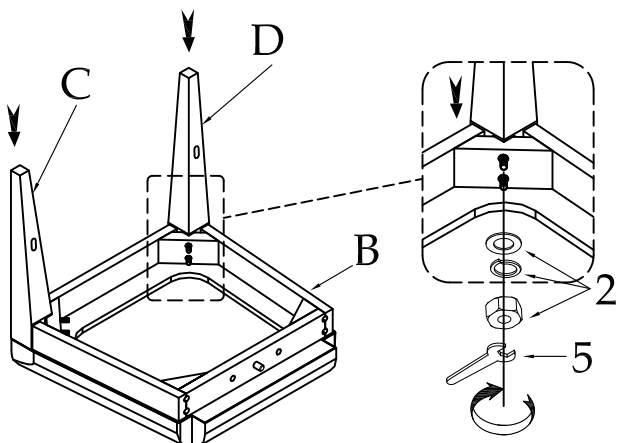


Step 2 : Do not fully tighten all bolts

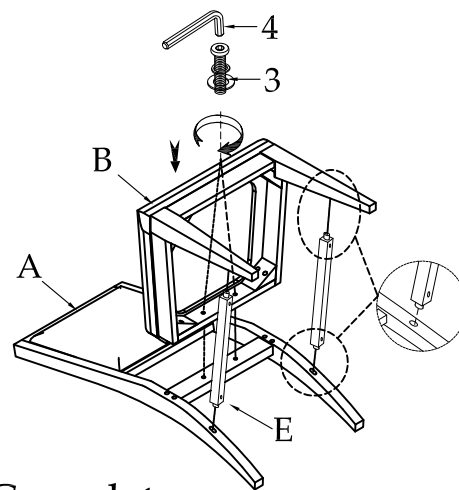

Step 3 : Using the Allen Key
tighten all bolts

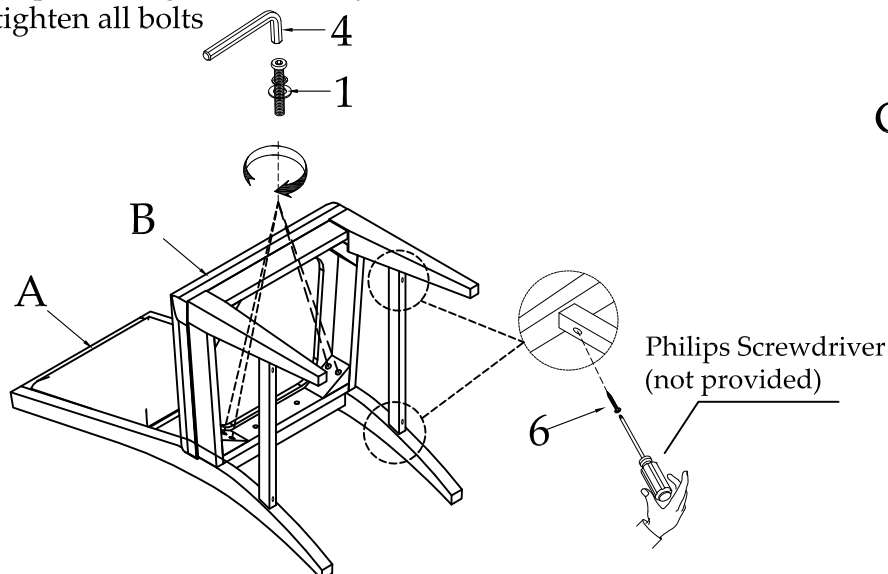

Complete

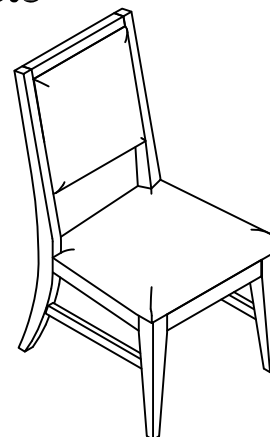

Hardware Pack Location:

WOOD BACK UPHOLSTERED CHAIR SKU: 42768917