 
 
 



THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIALS CAREFULLY FOR SMALL HARDWARE WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT. IDENTIFY AND COUNT ALL HARDWARE AND COMPARE WITH THE HARDWARE LIST BELOW.

PARTS LIST			
NO.	Description	Sketch	Q' TY
A	Accent server		1 pc.
B	Long Shelf Glass Insert (Size :709 x 306 x 5 mm)		1 pc.
C	Short Shelf Glass Insert (Size : 313 x 306 x 5 mm)		1 pc.


HARDWARE LIST			
NO.	Description	Sketch	Q' TY
1	Metal Anti-tipping Kit		1 pc.
			Tool Required (not provided)

Step 1

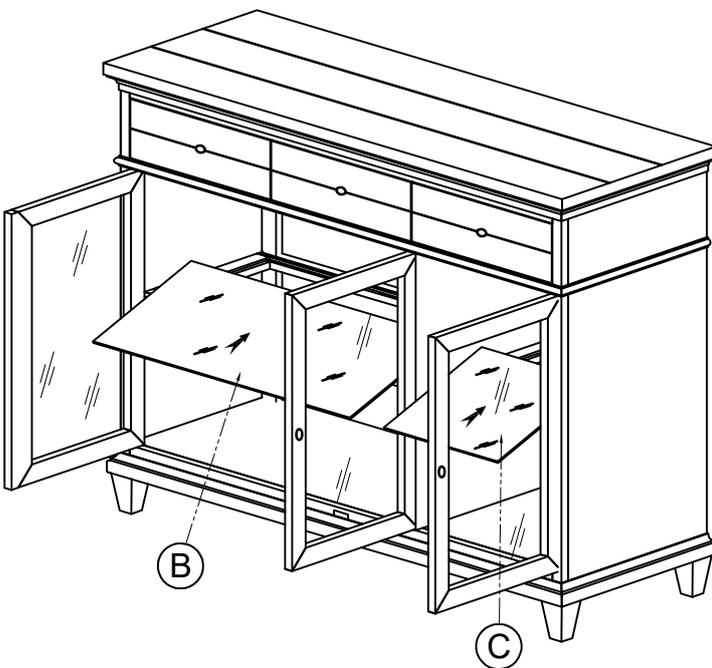

Step 2

- Power Strip:**
1. The blue light will be on as power on.
 2. One USB-A port for phone and ipad or tablet.
 3. One USB-C port more advanced technology Macbook or iphone 11 Promax.
 4. Enjoy your experience with Vantage 110 power strip and fast charging USB port.

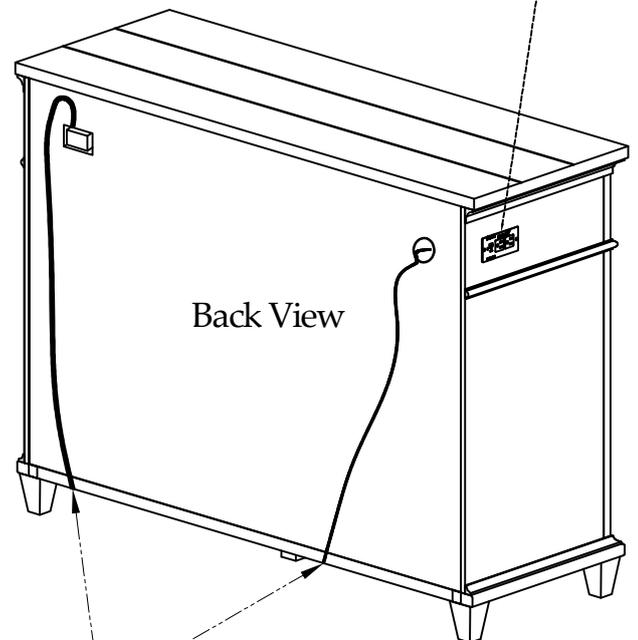

Attention : The LED power adapter and power outlet cord are attached in 2 plastic bags under the bottom of the accent server.


Hardware Pack Location:

Inside Box: RVID 9410-55: ACCENT SERVER


SKU: 42994106

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIALS CAREFULLY FOR SMALL HARDWARE WHICH MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT. IDENTIFY AND COUNT ALL HARDWARE AND COMPARE WITH THE HARDWARE LIST BELOW.

Step 3

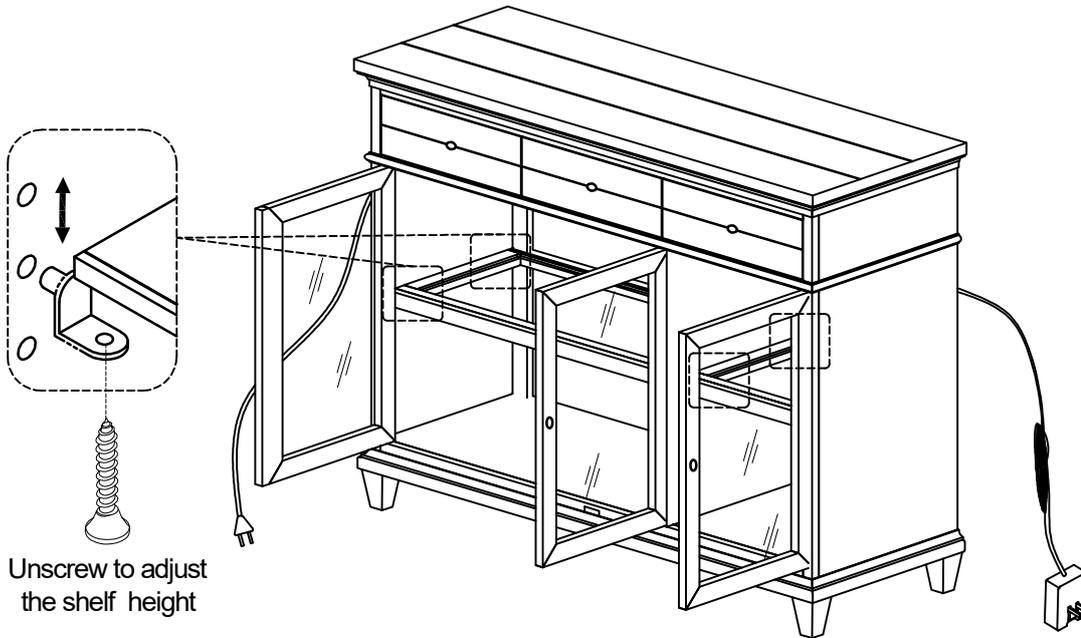

Step 4

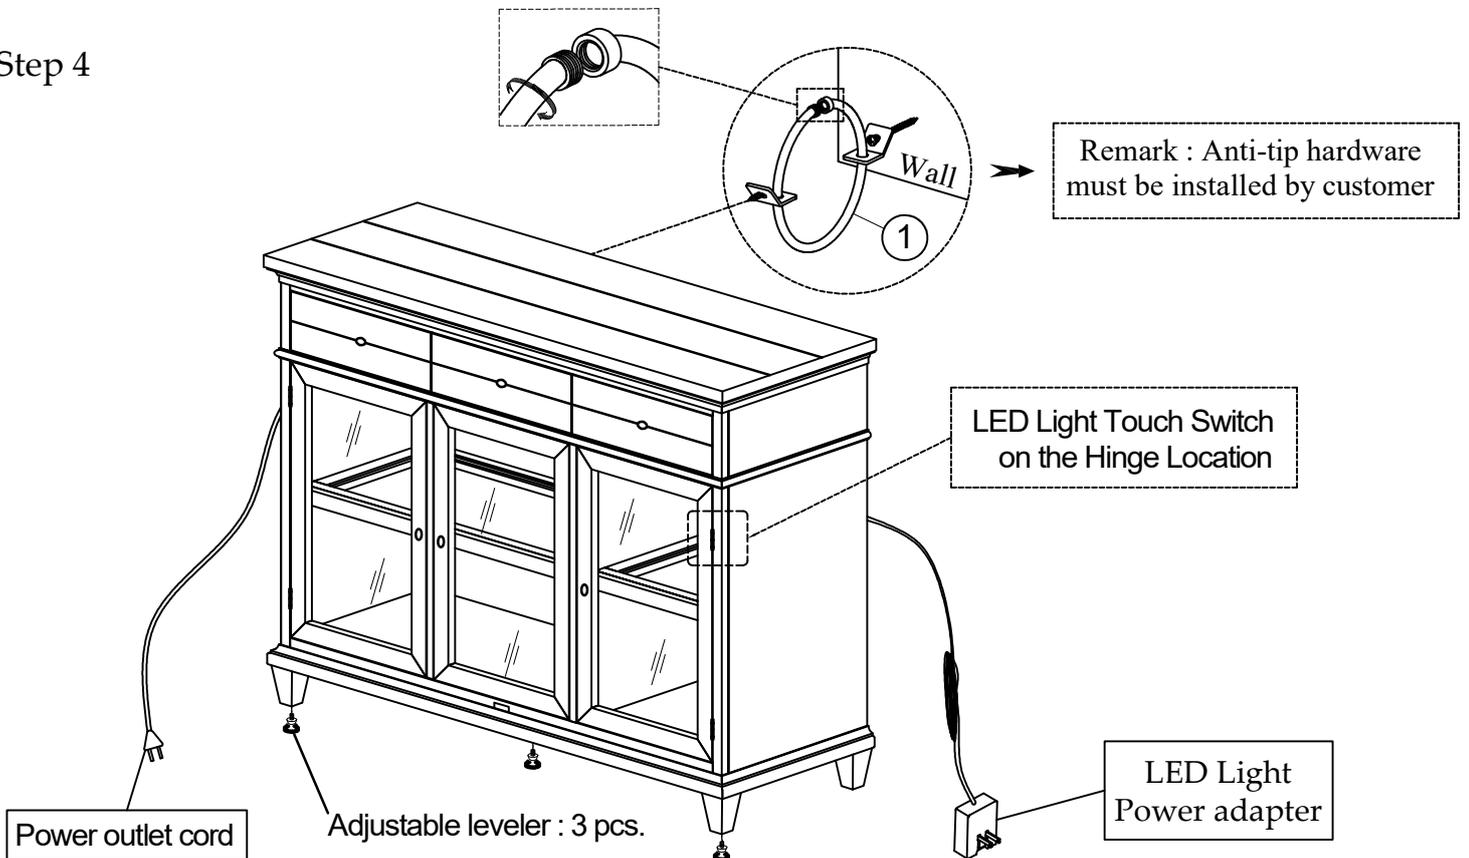


Hardware Pack Location:


Inside Box: RVID 9410-55: ACCENT SERVER

SKU: 42994106

9410 LAINEY : 9410-55 ACCENT SERVER

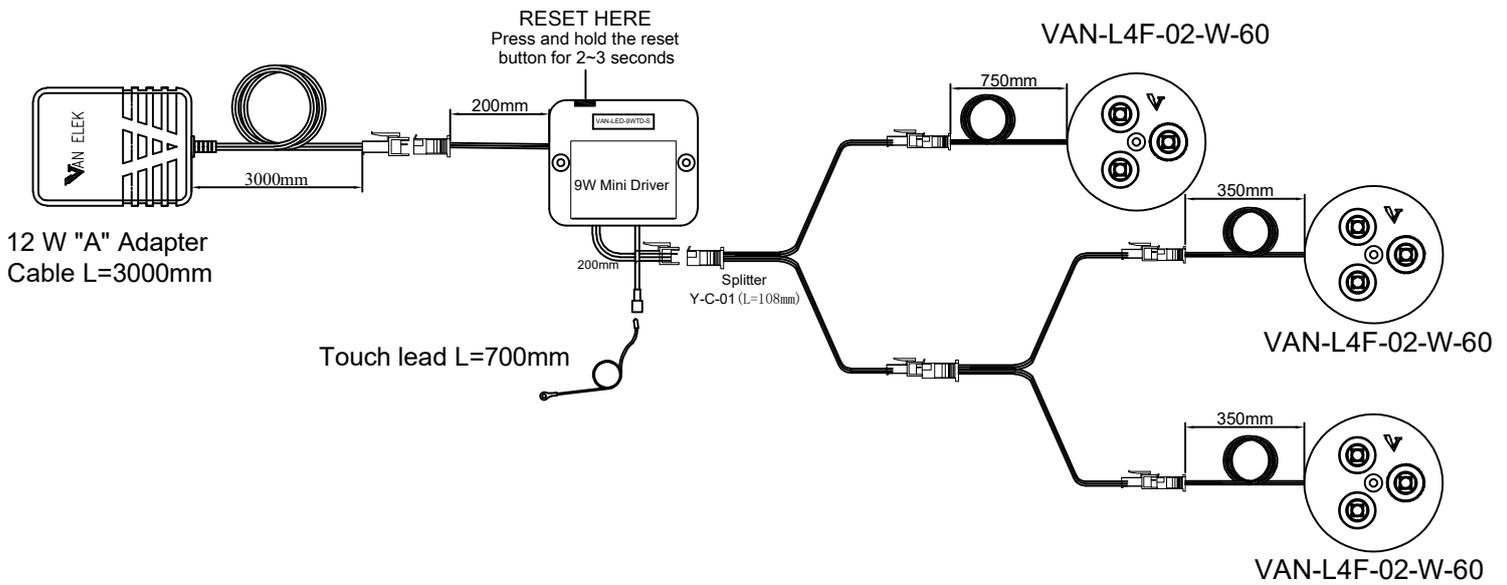

1. Inspect wiring for any signs of cut wires or loose connections.
2. To make sure all connections are securely fastened, disconnect and then reconnect all connections.
3. Press and hold reset button located on the top edge of the Mini Driver for 2-3 seconds.

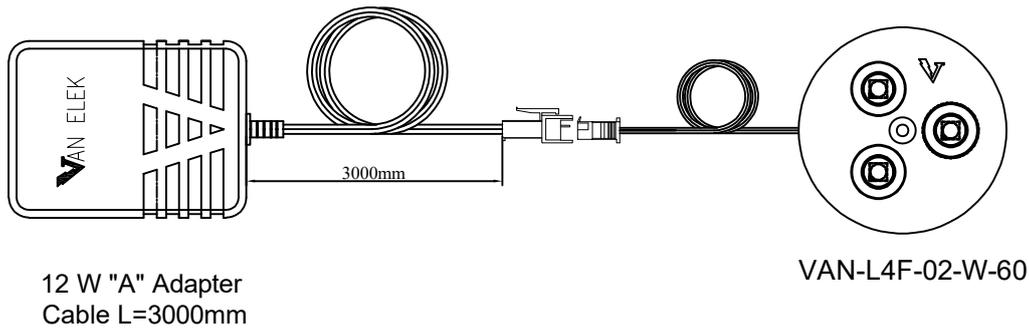

4. If the Puck Light still does not turn on, unplug the Mini Driver from Adapter, unplug the Puck Light from the Mini Driver, then directly connect the Puck Light connection to the Adapter.
5. If the Puck Light turns on, the Mini Driver must be replaced.

PART LIST			
#	DISCRIPTION	ITEM CODE	QTY
1	Puck Light	VAN-L4F-02-W-60, 2700K - Warm Light	3pcs
2	9W Mini Driver	VAN-LED-9WTD-S	1pc
3	Touch Lead	DLC - 700	1pc
4	12 W "A" Adapter	VAN-USAD-1212-F-AJC	1pc
5	Splitter	Y-C-01	2pcs

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

Furniture Power Distribution Unit
Input: 123V-50/60Hz 0.4A Max,
USB output: 5V 3A, 9V 2A, 12V 1.5A
Vantage City Group Limited
VAN-PSTR-AC

Read all instructions before using this furnishing.

DANGER – To reduce the risk of electric shock:

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- Do not strain or stretch electrical cord.
- Do not use extension cords or power strips.
- Keep out of reach of children. This is not a toy.
- Plug directly into a compatible electrical socket.
- Do not modify the plug or use any adapters.

INSTRUCCIONES DE SEGURIDAD IMPORTANTES

⚠ WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

Furniture Power Distribution Unit
Input: 123V-50/60Hz 0.4A Max,
USB output: 5V 3A, 9V 2A, 12V 1.5A
Vantage City Group Limited
VAN-PSTR-AC

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO – Para reducir el riesgo de descarga eléctrica:

- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilice cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete
- Enchúfelo directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.