



Assembly Instructions

Manufactured by AHFC for Rooms To Go

7119-M 7119-IV
AHFC 7119-MID 7119-CH DINING CHAIR
SKU 44471198 44671192
44571190 44771194

Thank you purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below:

Follow instructions listed below in the proper sequence to assure fast, easy and correct assembly.





DO NOT COMPLETELY TIGHTEN UNTIL ALL BOLTS AND PARTS ARE LOOSE ASSEMBLED IN ORDER TO ENSURE PROPER ALIGNMENT




1. Upon opening thoroughly clean all parts surfaces with a clean soft cloth to remove dust and dirt that may have settled onto finish during shipment.


2. Place on soft surface during assembly to prevent furniture from scratching.

Hardware List

Parts List

NO.	DESCRIPTION	QTY
A	 Bolt M6*30mm	16 PCS
B	 Flat washer Φ6*18mm	16 PCS
C	 Allen Key 6mm	1 PC
D	 Spring Shim	16 PCS

NO.	DESCRIPTION	SKETCH	QTY
1	seat		1 PC
2	rear legs		2 PCS
3	front legs		2 PCS

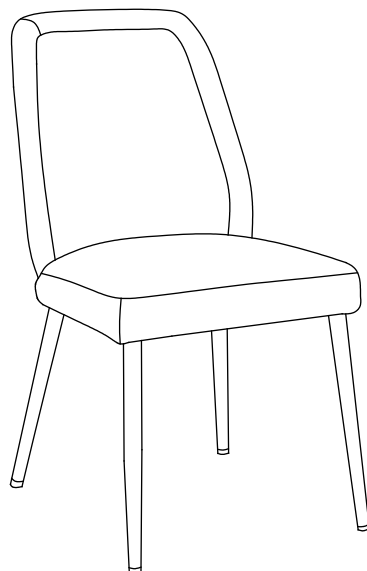



Assembly Instructions


Manufactured by AHFC for Rooms To Go

7119-M 7119-IV
AHFC 7119-MID 7119-CH
SKU 44471198 44671192
44571190 44771194


DINING CHAIR

Step 1: Place the seat (1) on a clean soft surface, such as a blanket or carpet. Assemble seat (1) and front legs (3) & rear legs (2) by bolt+flat washer (A+B) with allen key (C).
Step 2: Turn dining chair into the upright position. Make sure all parts are aligned and fully tighten all bolts.

STEP:1

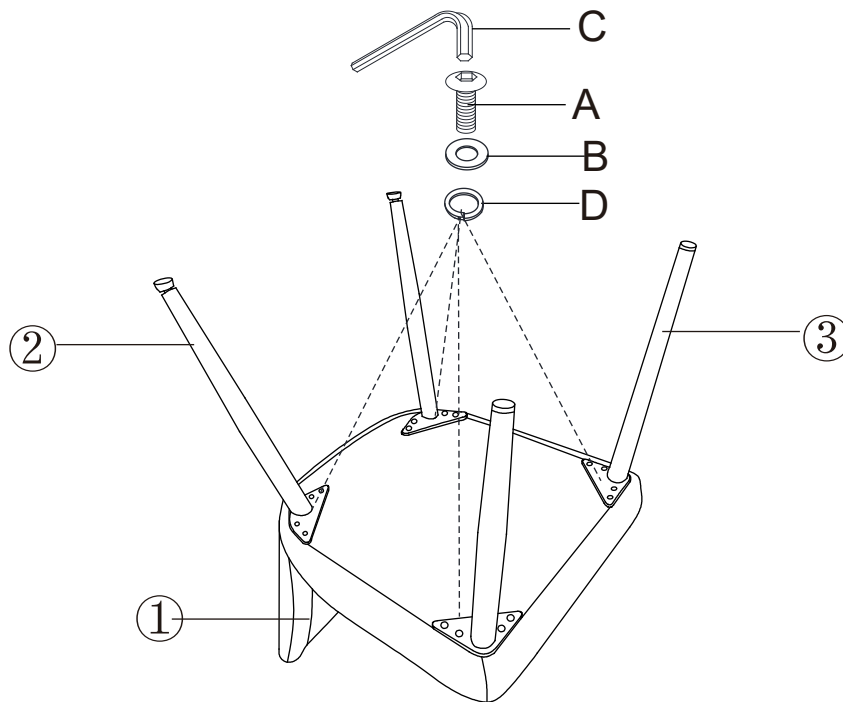

STEP:2

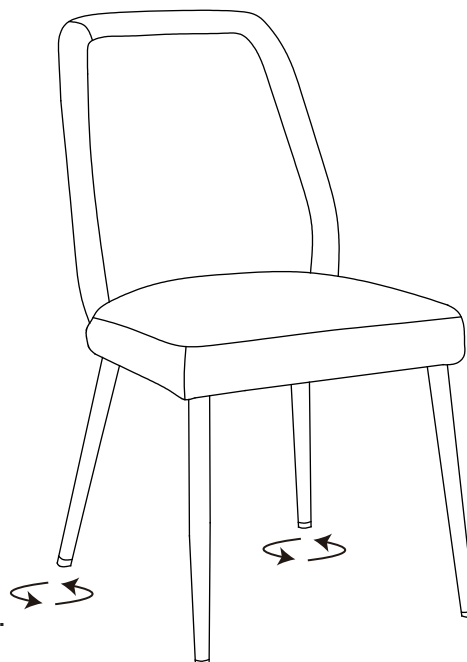

Adjustable feet: Slightly adjust to level the chair when the floor is uneven.