

ASSEMBLY INSTRUCTIONS




 
2222-3 *TESSERE GRAY LOUNGE CHAIR*/

2223-3 *TESSERE BLUE LOUNGE CHAIR*


SKU: 70322222/ 70322234

Thanks for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below


PARTS LIST

NO.:	PIC	DESC	QTY
A		Seat Part	1pc
B		Leg Part	1pc
C		Seat Cushion	1pc
D		Back cushion	1pc


PARTS LIST

NO.:	PIC	DESC	QTY
E		Bolts L20xW6x25.4(TPI)	4pcs
F		Spring washer M8	4pcs
G		Washer M6	4pcs
H		Allen Key 4 mm	1pc

Step 1: Place the Seat part (Part A) on the clean, soft surface as a blanket or carpet. Assemble the Leg part (Part B) to the Seat part by Bolts, Spring washers, Washers M6 (Part E, F,G) and loosely tightening with Allen key (Part H). When inserting the bolts, loosely tighten each about 5-6 full turns and ensure each of the 4 bolts fit well. Once all 4 are inserted and loosely tightened, proceed to fully tighten each bolt.

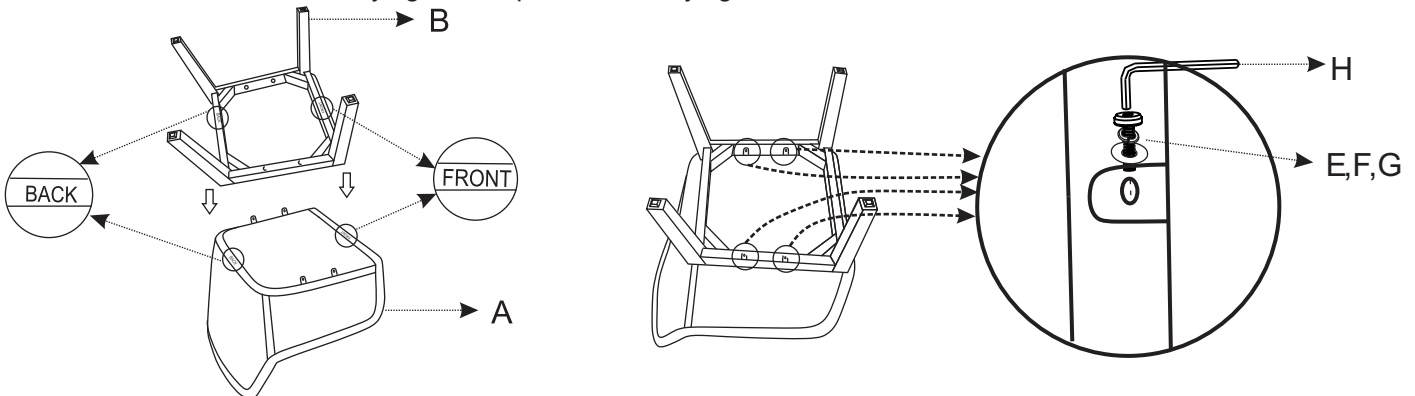

Step 2: After assembly, put the seat cushion (Part C) and back cushion (Part D) on product and your product is ready to use.

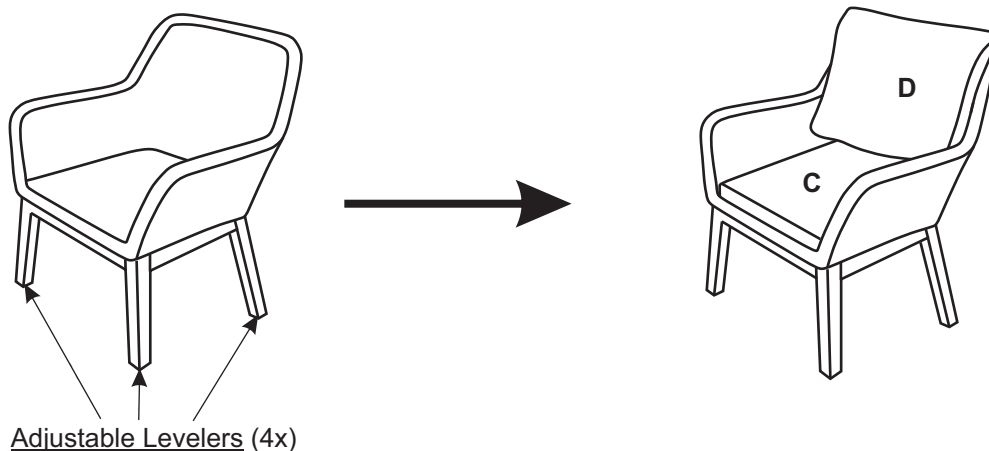

Periodically check and make sure all bolts are fully tightened.

Assembly Completed