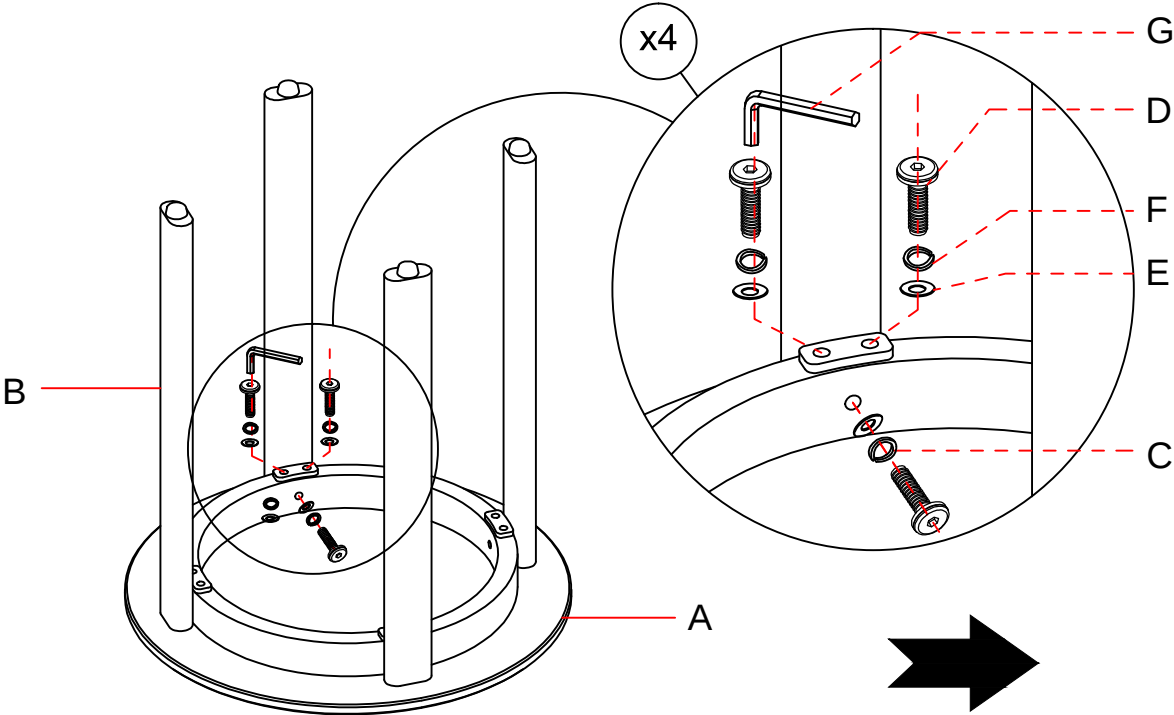
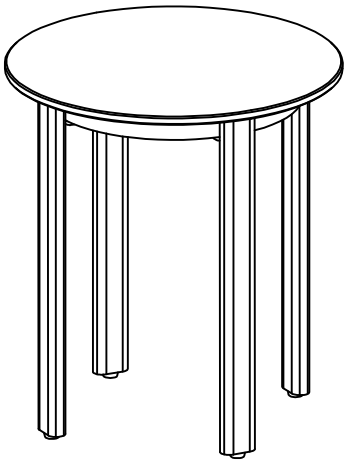


Step 1: Carefully place Table Top(Part A) upside down on a soft surface to prevent scratching.

 
 
 
Warning: Do not fully tighten the screws at the start of assembly, otherwise the screws will be stripped.



Step 2: Gently assemble each Leg(Part B) into the underside of the Table Top with Washers(Part E&F), Screws(Part C&D). After all hardware have been assembled, fully tighten each one with the Allen Key(Part G). After assembly, your product is ready for use.



PARTS LIST

NO.	A	B	C	D	E	F	G
DESC	Table Top	Leg	Screw 1/4" - 1 2/3"	Screw 1/4" - 3/4"	Washer	Lock Washer	Allen Key
PIC							
QTY	1pc	4pcs	4pcs	8pcs	12pcs	12pcs	1pc

Care and Use directions

CARE & MAINTENANCE

The furniture should be washed with a mild solution of soap and water. Rinse with clean water and dry with a soft towel. DO NOT use bleach or strong solvents to clean any of your patio furniture.

STORAGE SUGGESTIONS

Always be sure to drain any water accumulated on the furniture. The best way to maintain your furniture & cushions is store them in dry areas out of the elements. Covering is recommended with commercially available furniture covers, when your furniture is not in use. Using your furniture under cover is recommended.