

Dear Customer!

Congratulations with the purchase of this Solid Teak Dining Table!

To assemble this Dining Table, you will only need a **LARGE** straight screwdriver and a **MEDIUM** philips screwdriver.

Please unpack the carton and check if you have the following components and hardware:



4x Bolts




2x Stainless Steel wood-screws **SHORT**




Umbrella-sleeve cover



4x Stainless Steel wood-screws **LONG**

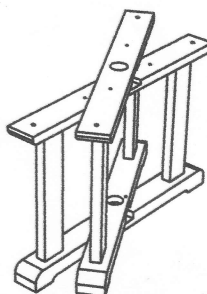


Leg-section

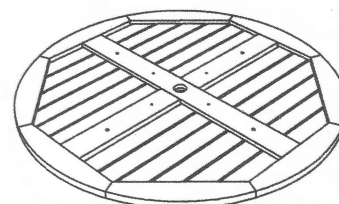

Top

Step 1

Unfold the legs so that the leg-sections lock into position, as shown.

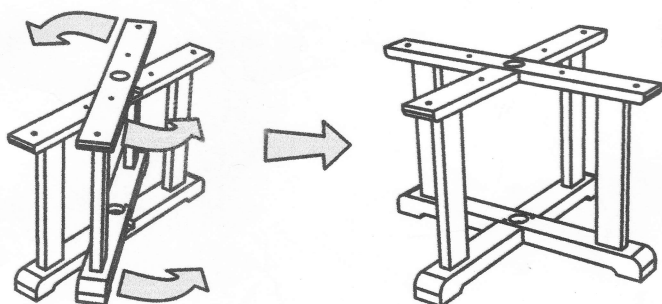


Step 2

Lay the top-section on a flat surface, bottom-side facing upwards.

Invert the assembled leg-section, as shown. **Note the top- and bottom section of the legs!**



Align the umbrella holes of leg and top, as shown.

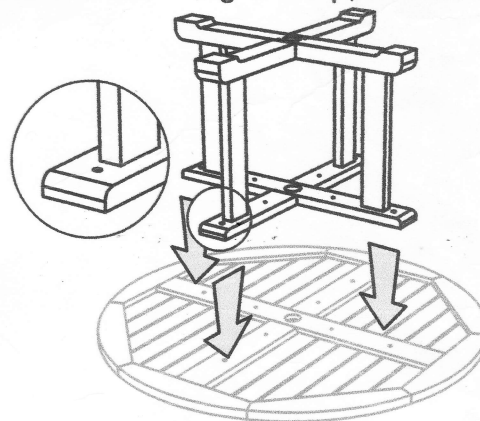

Step 3


Screw 1 bolt into the outer holes of the leg-section, as shown.

Repeat for other 3 bolts.

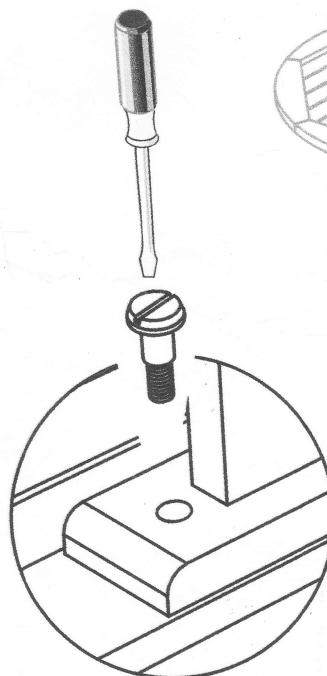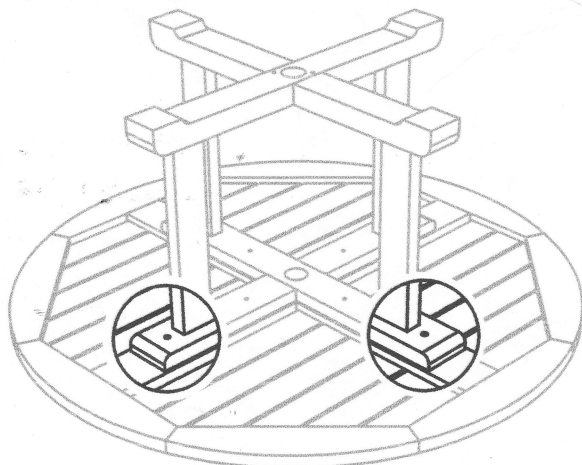



Step 4

Screw the top-section of the legs with 4 **LONG** wood screws into the table top, as shown.

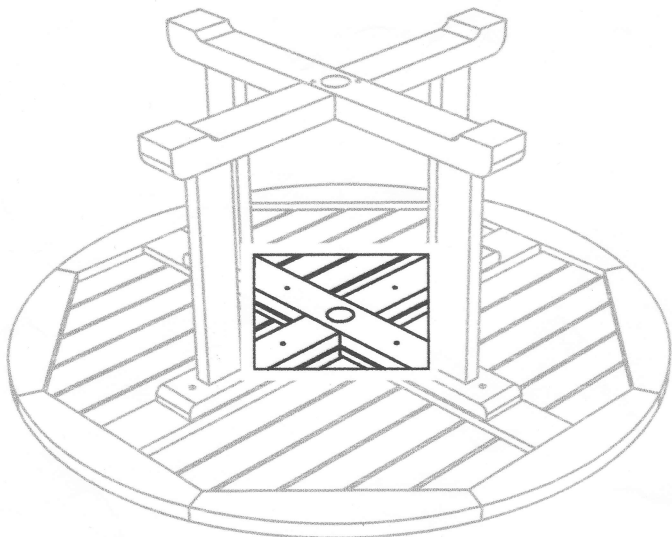


Step 5

Use 2 **SHORT** woodscrews to lock the bottom section of the legs to each other, as shown.

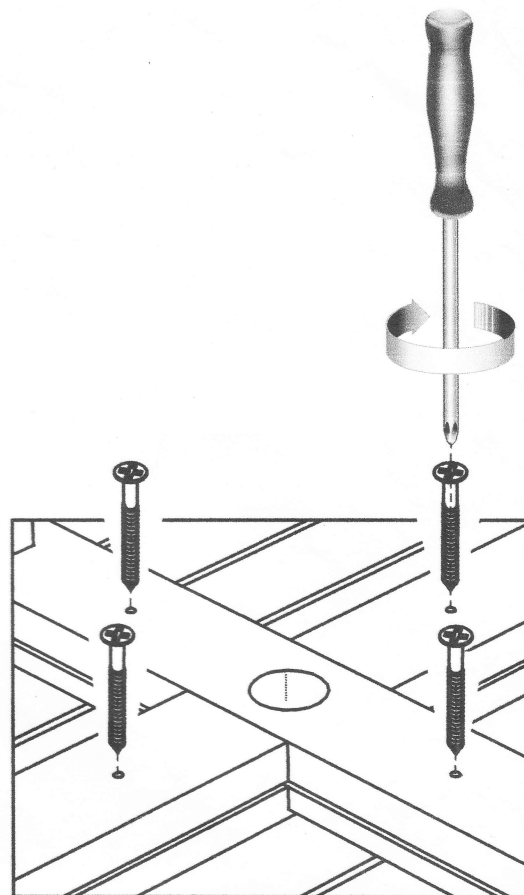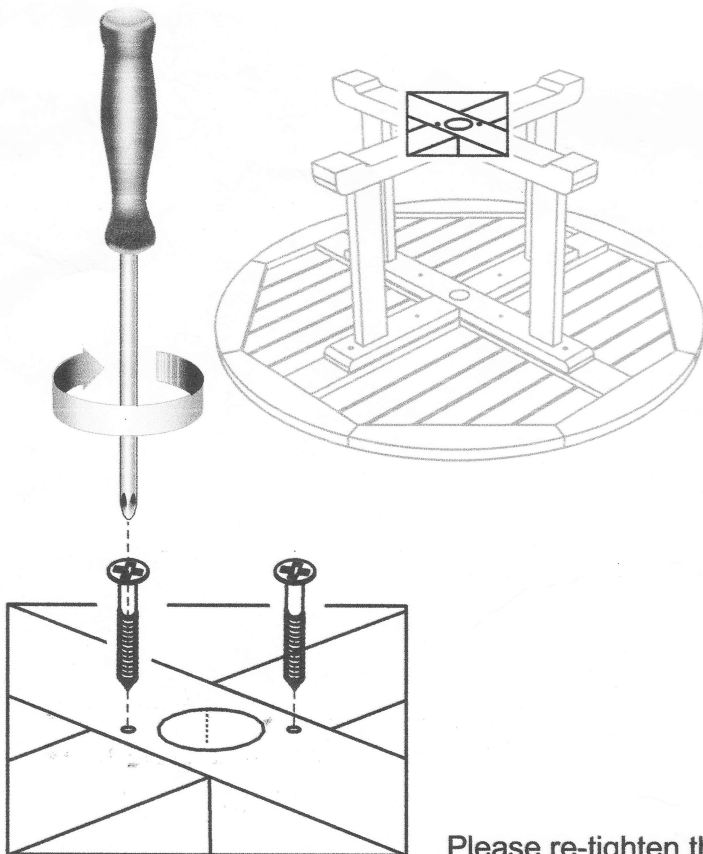

Step 6 (only for TRUSS DiningTable)

Unpack the cover for the umbrella sleeve and insert the cover on the pre-fitted sleeve in the center of the table top, as shown.

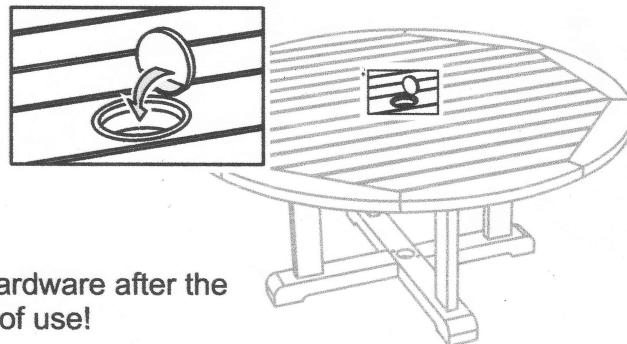

Please re-tighten the hardware after the **FIRST** week of use!

"ANCHOR" Chat DiningTable
"HATCH" Chat DiningTable Ø
"TRUSS" DiningTable Ø