
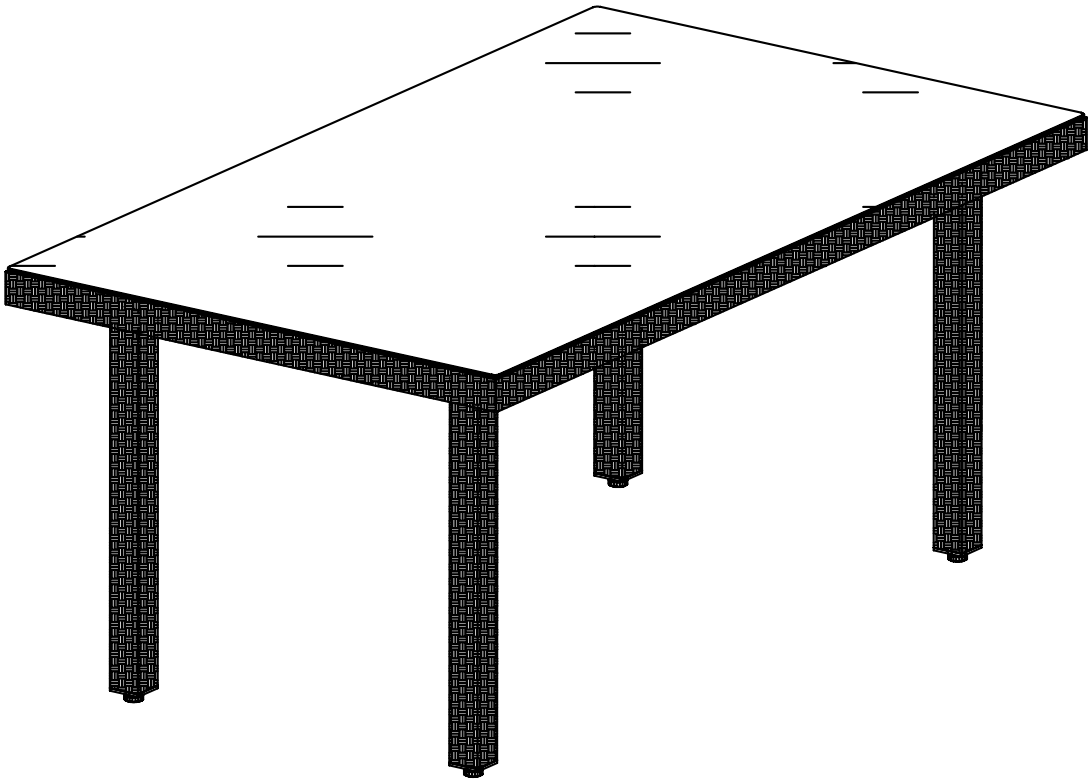
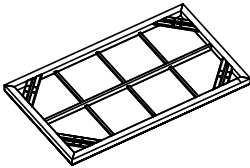
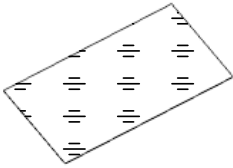
 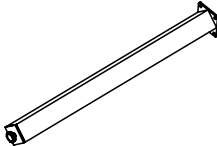
 
 



Assembly Instructions  
FOREST HILLS 42" x 74" DINING TABLE  
WITH GLASS TOP  
Sku # 74045672




Part List			
No	Description	Sketch	Qty
A	Table Top Assembly		1
B	Glass Top (Securely Tied to Table Top Assembly "A")		1
C	Table-Foot		4
D	Washer – M6 X 16		16
E	SPRING WASHER M6		16
F	Bolt– M6 X 20		16
G	Allen Key – 4MM		1




\*\*\*Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

**CAUTION:** Do Not cut the cables securing the Glass Top (B) to the Table Top Assembly (A).

**STEP 1:** Lay table top assembly (A) facing upside down on a soft and smooth surface to prevent damage to the Glass Top (B) that is secured to the table top frame.

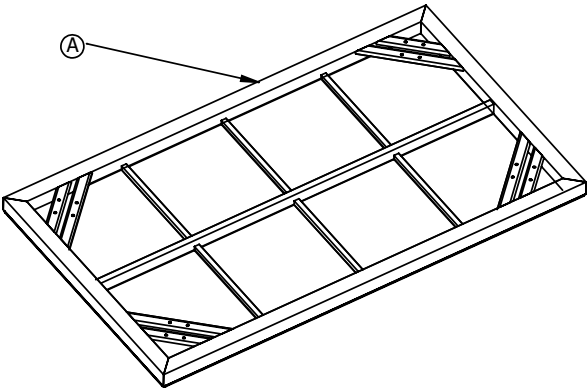

**STEP 2:** Attach Table-Foot (C) to Table Top Assembly (A) using 16x Washer – M6 X 16 (D) and 16x Bolt – M6 X 20 (E) with Allen Key – 4MM (F). Please tighten fully!

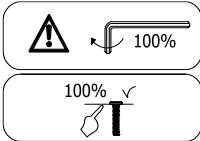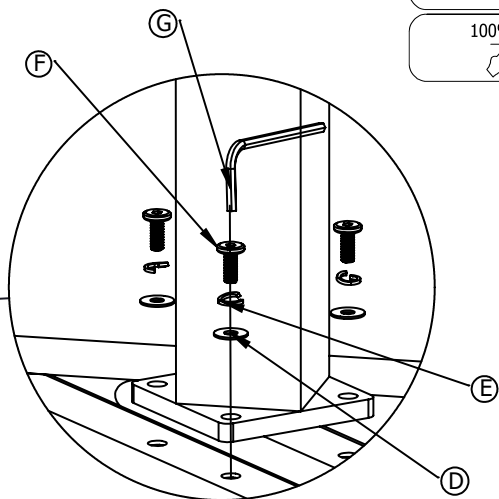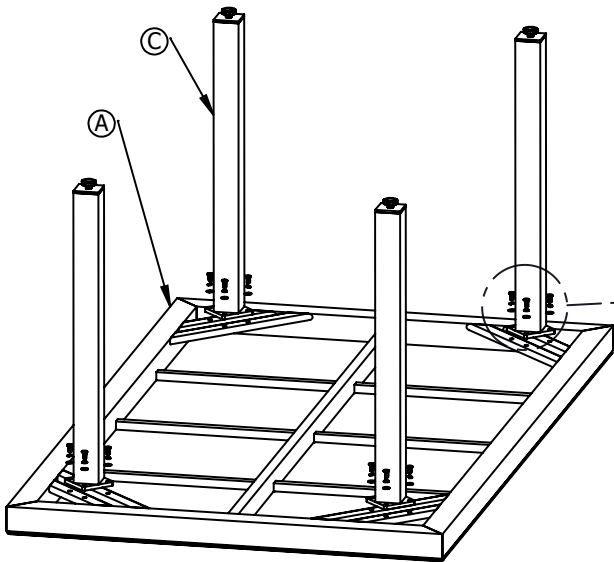

# Assembly Instructions

## FOREST HILLS 42" x 74" DINING TABLE WITH GLASS TOP

Sku # 74045672

Version 1,0 4/2024

\*\*\*Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

**STEP 3:** Carefully turn the product over, then cut off the cables securing the Glass Top (B) and enjoy!

