

ASSEMBLY INSTRUCTIONS


AELV PARK WALK EXTENTION DINING TABLE WHITE

Manufactured for Rooms To Go


SKU: 74210495

Thanks for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Hardware List below


Note: In order to prevent the cable from stretching, the table lock must remain locked until the table is fully constructed and placed on its legs.

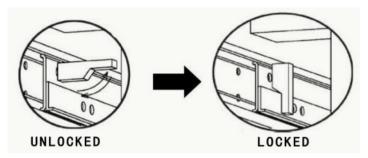

Step 1: Place the Table Top (Part A) on a clean, soft surface as a blanket or carpet. Assemble the Table Leg(Part B) to the Table Top by Bolt (Part C) and Washer (Ø16*Ø8.5*1) (Part D), tighten with Allen key (Part E).

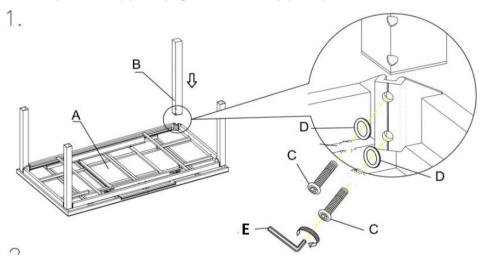

Step 2: After assembly, your product is ready for use.

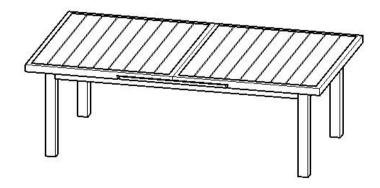

PARTS LIST PARTS LIST

NO.:	PIC	DESC	QTY	NO.:	PIC	DESC	QTY
А		Table Top	1pc	D	0	Washer(Ø16*Ø8.5*1)	8pcs
В		Table Leg	4pcs	E		Allen key	1pc
С	(MSx65)	Bolt	8pcs				

Periodically check and make sure all bolts are fully tightened.

Should there be a problem with your furniture, please contact your store's gardening department manager. Please keep your invoice or your sales receipt in a safe place as this will be requested for any claim.

We thank you for your confidence in our products.



If you apply a care, restoration, cleaning or other product, please follow the application instructions carefully when applying these products to the furniture. If various care products are applied to the same piece of furniture, check that these various care products are mutually compatible.











IN CASE OF EXTENDED NON-USE IT IS RECOMMENDABLE TO RECOVER THE PRODUCT. THE CONTINUOUS EXPOSURE TO WEATHER CONDITIONS COULD DAMAGE IT



