


 
 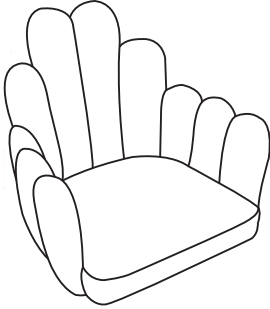



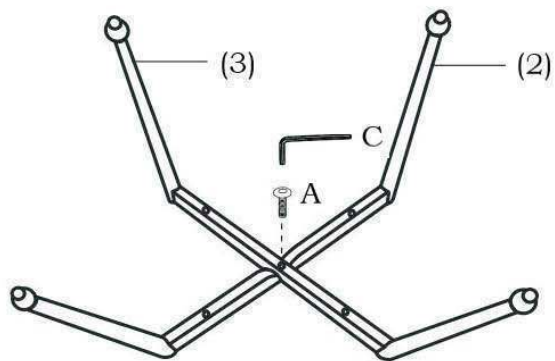
**ITEM NAME/NOM D'ITEM: NOOSA DINING CHAIR**  
**ITEM #/NO. ITEM: 109654/109655/109657**

**PARTS LIST/LISTE DES PIÈCES**


(1)	(2)	(3)	(4)
 <p>x1</p>	 <p>x1</p>	 <p>x1</p>	<p>A.  M6x30mm x1</p> <p>B.  M6x45mm x4</p> <p>C.  M6 x1</p>

**ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE**


I



II

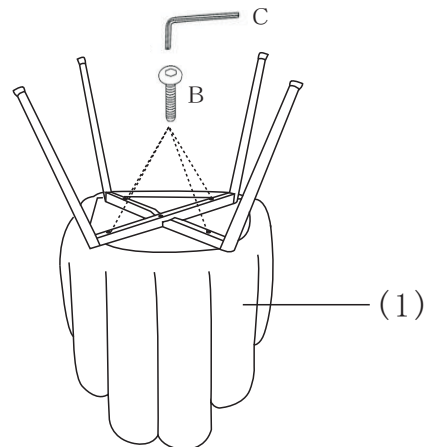

III

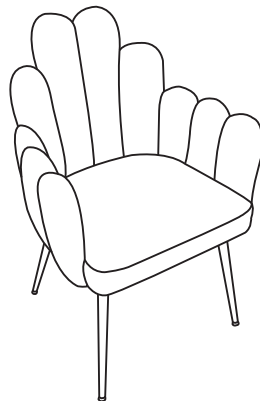

For missing parts or damaged parts, please call /  
 Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico: (866)-798-6663

AI-V1-230223