Thank you for purchasing this quality product. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched. Be sure to check all packing materials carefully for small parts may have come loose inside the carton during shipment, clarify and count all parts and compare with the parts list below. Do not tighten all screws / bolts until all completely assembled.

Parts List			Hardware List				
No.	Description	Q.ty	No.	Description	Sketch	Size	Q.ty
Α	Tray Top	1PC	1	Allen Key		M4	1pc
В	Drawer Frame	1PC	2	Allen Bolt		1/4" x 16mm	14pcs
С	Side Frame	2PCS	3	Spring Washer	0	Ø12 x 1/4" x 1mm	14pcs
D	Upper Crossbar	2PCS	4	Flat Washer	0	Ø16 x 1/4" x 2mm	14pcs
Е	Lower Crossbar	2PCS	5	Screws	(c)uuuun>	#4 x 16mm	6pcs
F	Bottom Panel	1PC	6	Screws	()mma>	#4 x 12mm	6pcs


NOTE : YOU WILL ALSO NEED A SCREWDRIVER (NOT PROVIDED)

These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

<u> Important Notes</u>

*Keep all hardware parts out of reach of children!


*Tighten screws periodically! With the use of this product bolts and screws may become loose over time! *Don't attempt to modify parts!

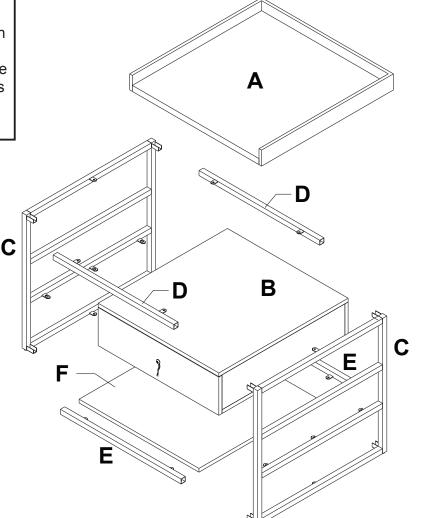


ITEM NO.: T147-04 End Table

STEP 1:


Do not fully tighten the bolts until all parts have been assembled.

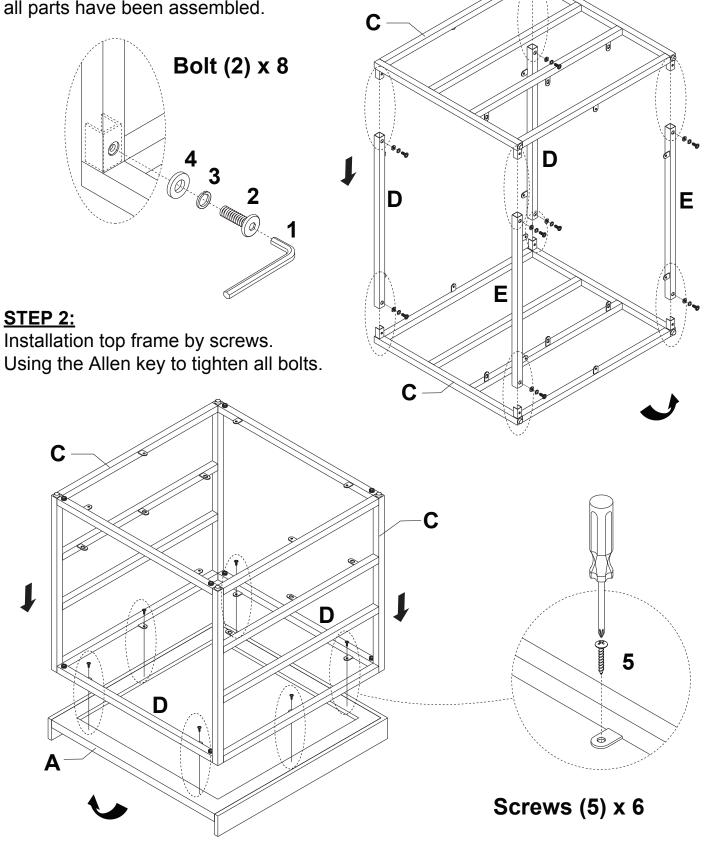

ITEM NO.: T147-04 End Table

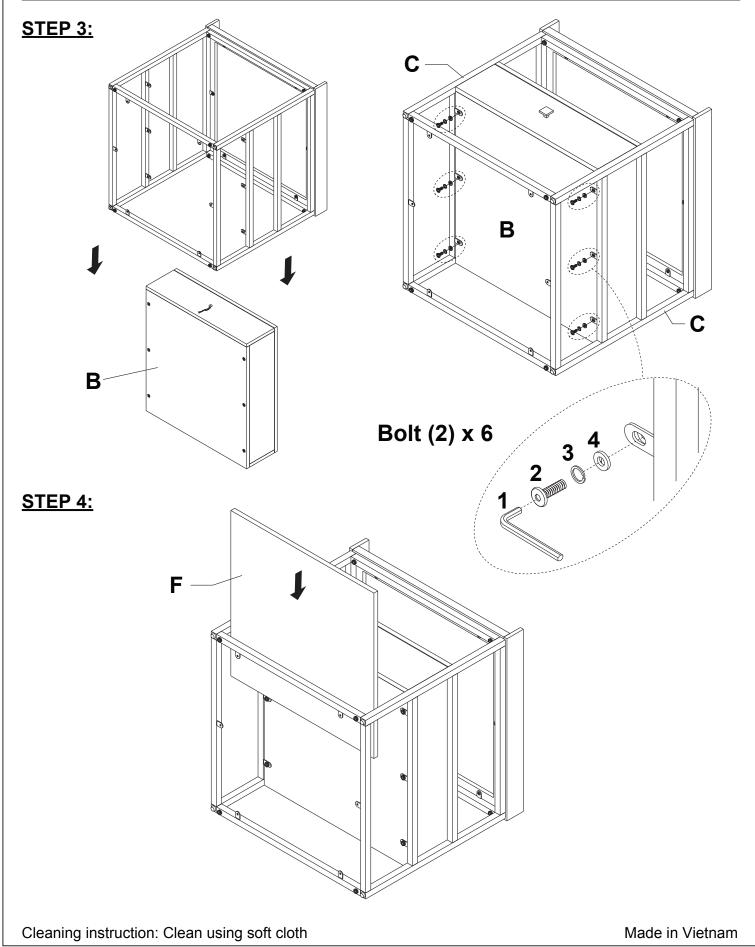

ITEM NO.: T147-04 End Table

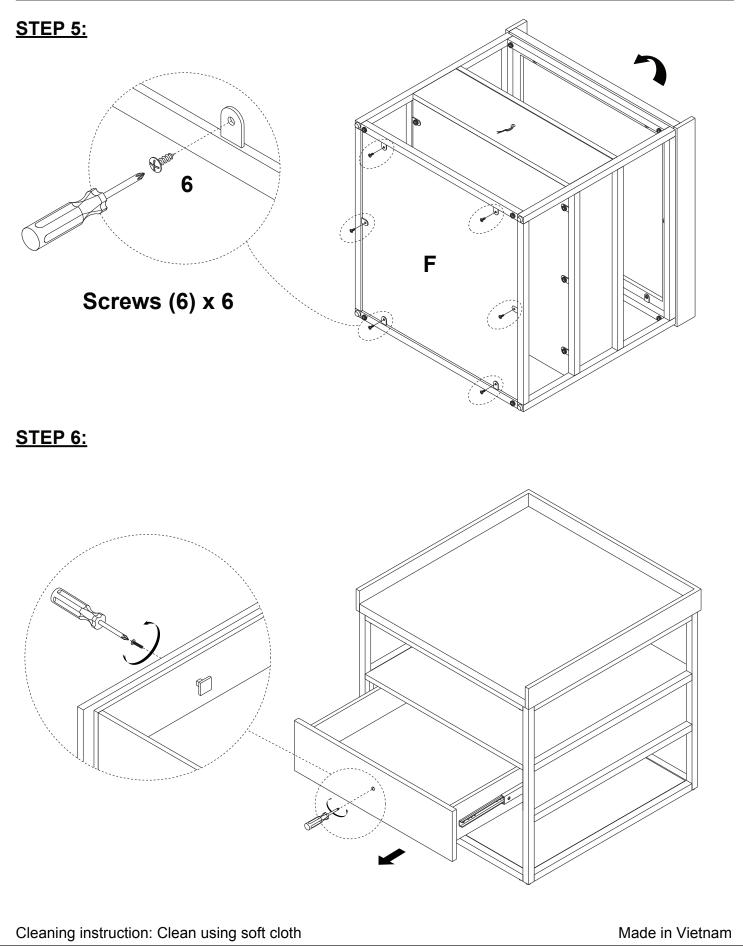

ITEM NO.: T147-04 End Table

