
 
 







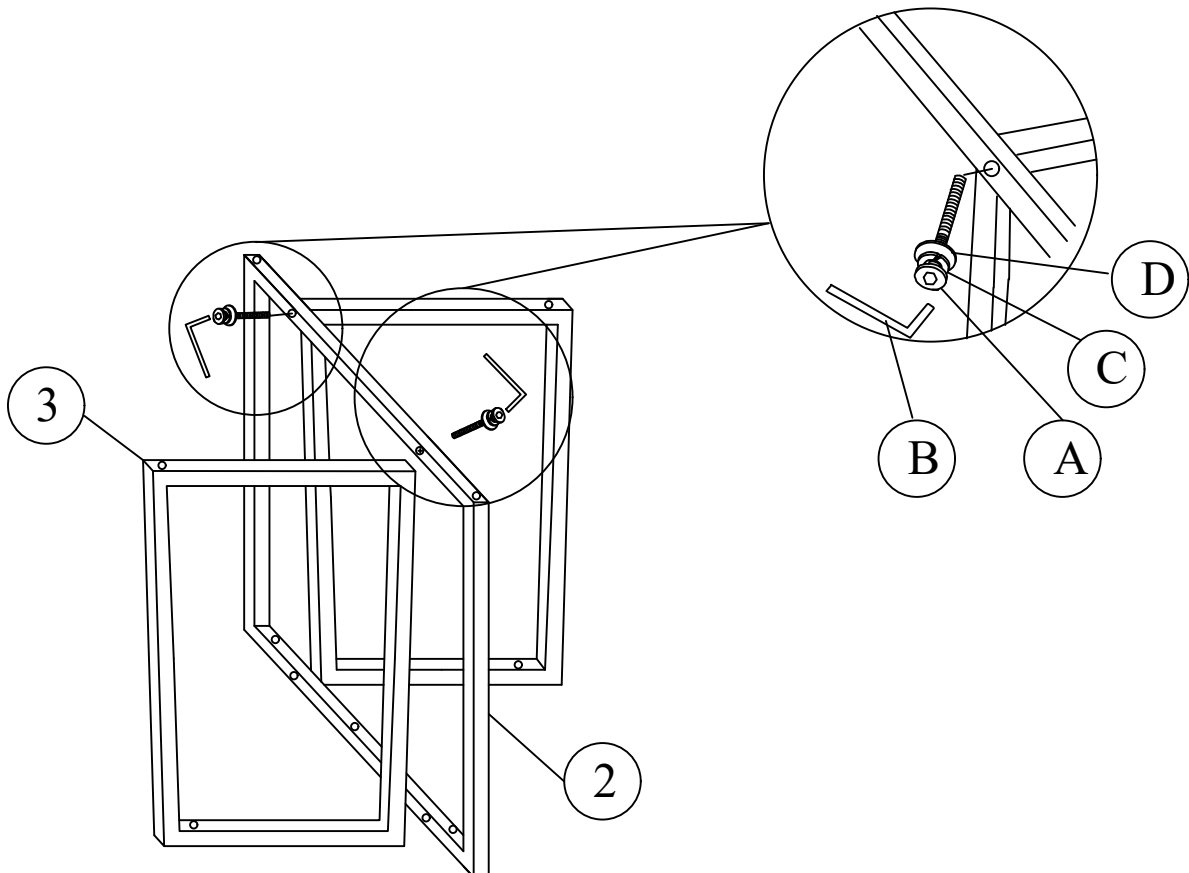
IMPORTANT NOTE :


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws / bolts until all completely assembled.
- Keep all hardware parts out of reach of children!
- Tighten screws periodically! With the use of this product bolts and screws may become loose over time!
- Don't attempt to modify parts!

PART LIST			
NO	DESCRIPTION		QTY/PCS
1		TABLE TOP	1 PC
2		TABLE LEG-1	1 PC
3		TABLE LEG-2	2 PC

PART LIST			
NO	DESCRIPTION		QTY/PCS
A		BOLT M6 x 40MM	9 PC
B		ALLEN KEY M4 x 60MM	1 PC
C		SPRING WASHER M6 x 12MM	9 PC
D		FLAT WASHER M6 x 19MM	9 PC
E		LEVELLER	4 PC

STEP 1



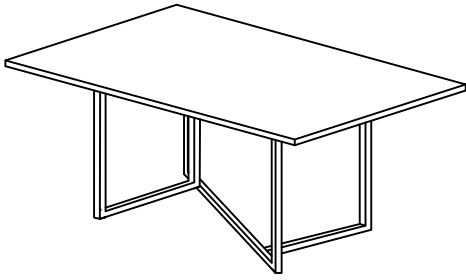

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws / bolts until all completely assembled.
- Keep all hardware parts out of reach of children!
- Tighten screws periodically! With the use of this product bolts and screws may become loose over time!
- Don't attempt to modify parts!

STEP 3

