

**THANK YOU FOR YOUR PURCHASE**

**PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW**

**CAUTION: DO NOT PLUG INTO WALL OUTLET BEFORE ASSEMBLY  
UNPLUG WHEN REPLACING THE LAMP BULB**

### Parts List:

Shade	1x	Set screws	1x
Shade diffuser	1x	Base washer/bolt	1x
Finial	1x	Allen wrench	1x
Socket tube	1x	Wrench	1x
Turning knobs	2x		

### ASSEMBLY INSTRUCTIONS

**STYLE NO: RTG28135-1-CD RTG SKU: 90113514**

1. Carefully unpack carton and place all parts on a soft, smooth surface. Inventory all parts.
2. Place the Base in an upright position on the floor.
3. Position Part B onto the Base, then thread the Flat Washer to tighten bolt by using Wrench enclosed in the parts bag.
4. Thread Part A into Part B, use the Allen Wrench provided to tighten (turn clockwise) all Screws at the top of Part B.
5. Adjust socket assembly to a horizontal position.
6. Loosen knob above socket assembly, then put the lamp shade onto the washer, screw knob to tighten the lamp shade.
7. Place the diffuser onto Tube and tighten finial.
8. Turning Knob can adjust the Rods height to be assembled according to your desired height.

**Two 60 Watt Maximum Type A Household bulb required (not included).**

### IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY INTO THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

