

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 21551

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

Carefully unpack all lamp parts from carton. We suggest a licensed electrician for all fixture installations.

1. Take the lamp carefully out of the Carton, and place on a flat surface.
2. Be sure power to the installation point is OFF. Follow the steps below for assembly.
3. Fasten the **Cross bar** to the outlet box. Secure the **Nipple** onto the **Ceiling Canopy** with **Ceiling Chain Hook**.
4. Adjust the length of wire needed for your installation, remove excess. Adjust chain length as needed. Thread **Quick Link#1** into **Ceiling Chain Hook** on the **Canopy**, then **Quick Link #2** into **Fixture Hook** on the **Fixture Body**. Hand tighten until snug.
5. Pass the supply wires through the **Ceiling Canopy** and the **hole** in the middle of the **Cross Bar**.
6. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.
Connect the wires as shown.
A. Connect the House Ground Wire to the Fixture Ground Wire.
B. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).
C. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.
7. Push the **Ceiling Canopy** upward over the Outlet Box. Thread the Canopy Lock Ring onto the **Ceiling Chain Hook** and tighten until snug to secure the **Ceiling Canopy**.
8. Assembly **Fixture Body** instruction as below. (See Figure 2)
Step 1: Place the **Neck** of the Upper Assembly into the Gap of the **Fabric Shade** as shown.
Step 2: Pass the **Bolts** on the **Upper Assembly** through the holes on the **Fabric Shade** and secure with **Lock Balls**.
Hand tighten until snug
9. Thread the **Part A** onto the **Nipple#2** underside of the **Upper Assembly**.
10. This Lamp has two versions:
Version #1 is no tassel, then please use **Ball Finial** without Hook.
Version #2 is with tassel, then please use **ball finial** with Hook, and place **Tassel** into the Hook of **ball finial**.
11. Install the correct **Bulb** (Bulb Included) into the **Socket** until snug.

Your installation is completed now. Restore electricity.

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 21551

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

 
 
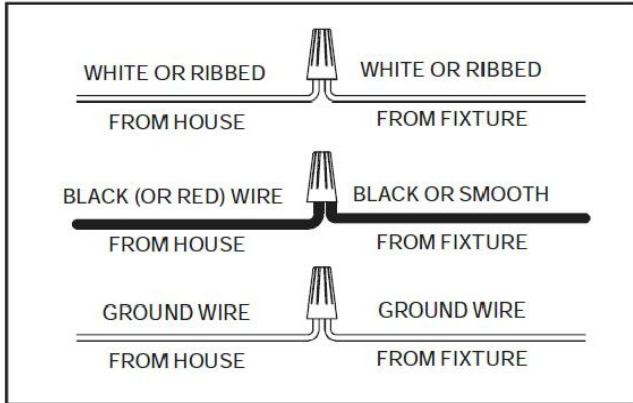 


Figure 1

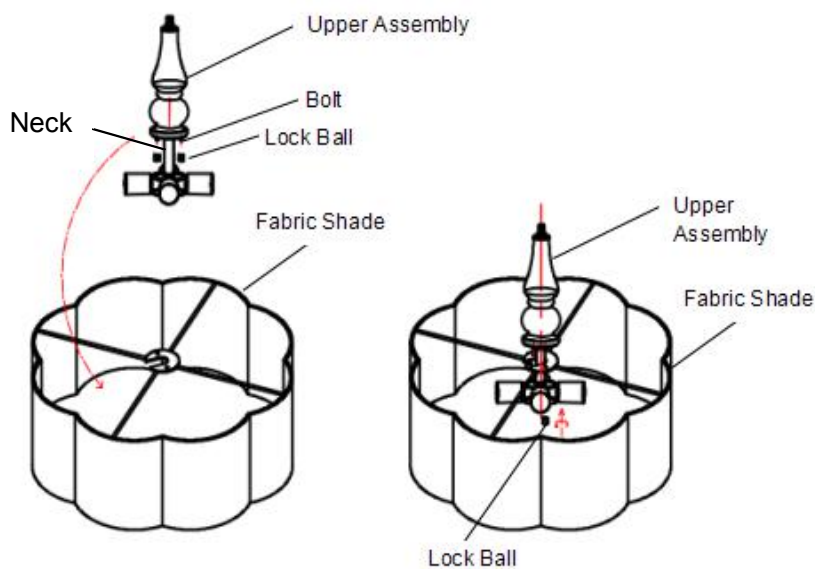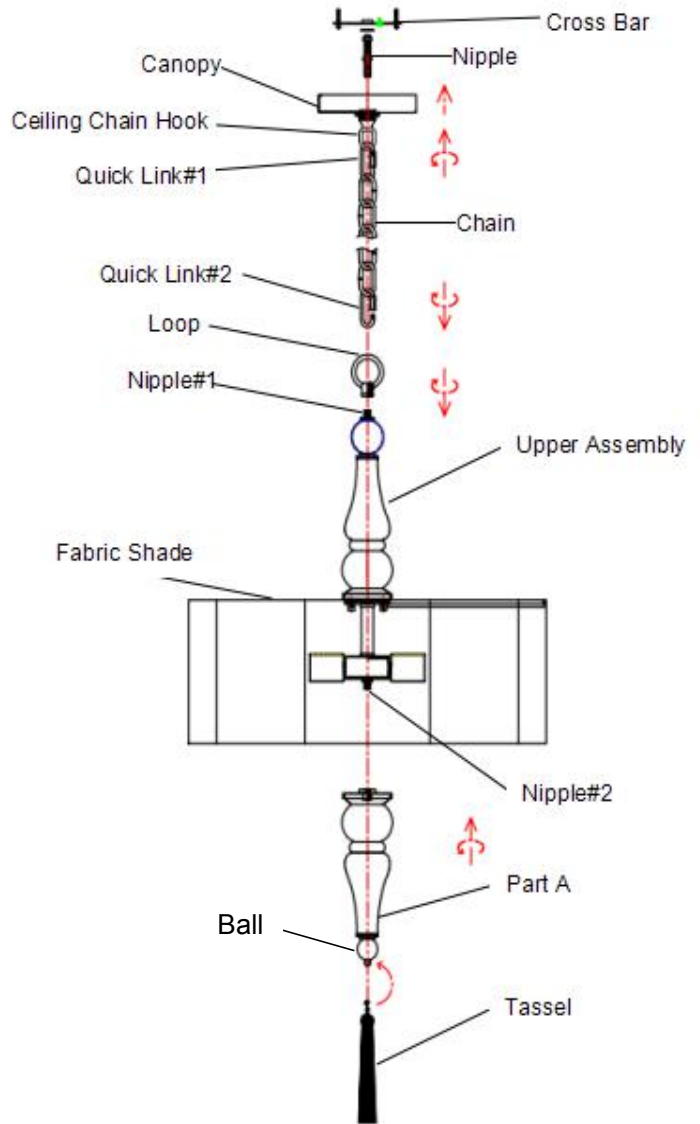

step 1

step 2

Figure 2