

ASSEMBLY INSTRUCTIONS

 
 
STYLE# 21325

WARNING TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off.
3. Fasten the **Crossbar** to the **Canopy**. Thread **Screws** to secure it. Hand tighten until snug.
4. Determine the number of **Rods** to be assembled according to your hanging height. Pass supply wires through the **Rods**. Thread the **Rods** to connect the **Swivel** and **Fixture Body**. Hand tighten until snug.
5. Pass the supply wires through the **Swivel** and **Canopy** and the hole in the middle of the **Cross Bar**.
6. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire. Connect the wires as shown.
 - A. Connect the House Ground Wire to the Fixture Ground Wire.
 - B. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).
 - C. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
 - D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.
7. Place the **Glass Shade** carefully. Thread the **Metal Sleeve** and **Part A** onto the **Socket**. Then use **Plastic Wrench** to lock the **Socket Collar** to secure the **Glass Shade**. Hand tighten until snug.
8. Install the correct **Edison Bulb** (Included) onto the **Socket** referring to fixture markings and/or labels for maximum wattage.

Your installation is completed now. Restore electricity.

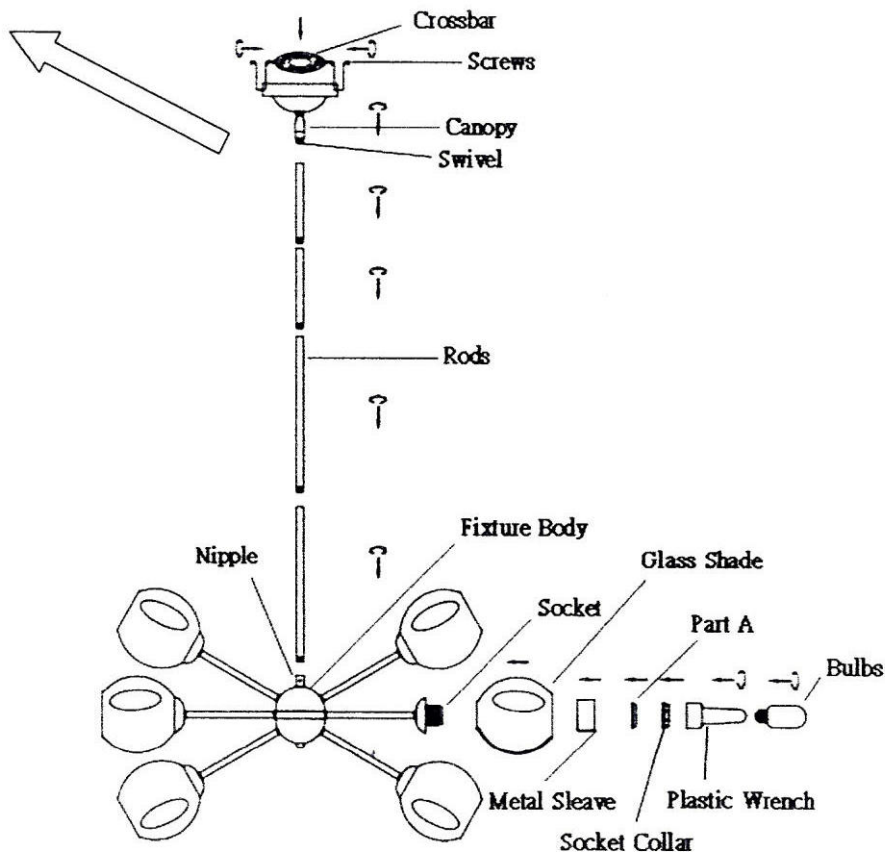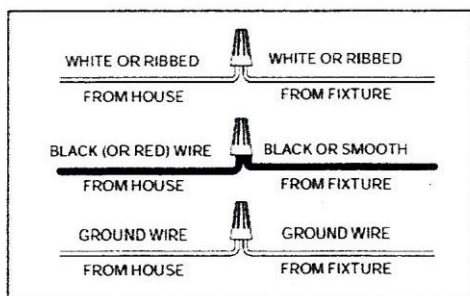

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com