



UTTERMOST

ASSEMBLY AND INSTALLATION INSTRUCTIONS

STYLE# 21330

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off.
3. Place the **Crossbar** over the **Canopy** and thread **Finial** onto the **Nipple** to secure it. Hand tighten until snug.
4. Adjust the length of wire needed for your installation, remove excess. Adjust **Chain** length as needed. Thread **Quick Link#1** into **Loop #1** on the **Canopy**, then **Quick Link #2** into **Loop #2** on the **Lamp Body**. Hand tighten until snug.
5. Pass the supply wires through the **Stem** and **Canopy**. Thread the **Stem** to connect the **Nipple** of the **Fixture Body**. Hand tighten until snug.
6. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.

Connect the wires as shown. **A.** Connect the House Ground Wire to the Fixture Ground Wire.

B. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).

C. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).

D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.

7. Install the correct **Edison Bulb** (Included) onto the **Socket** referring to fixture markings and/or labels for maximum wattage.

8. Position the **Socket** through the hole on the top of the **Glass Shade**. Turn **Knobs** to make the **Glass Shade** fixed. Hand tighten until snug.

Your installation is completed now. Restore electricity.

