



UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 22100

Careful unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.

2. Be sure the power to the installation point is power off.

3. Determine the number of **Rods** to be assembled to the **Fixture Body** according to your hanging height.

Pass the Supply Wires with Ground Wire through the chosen **Rods and Swivel**. Thread the **Rods** to connect **Nipple#1** and **Nipple#2**. Hand tighten until snug.

4. Pass the supply wires through the **Universal Bar** assembly, Secure the **Universal Bar** to the **Outlet Box** with **Outlet Box Screws**.

5. Place the **Ceiling Canopy** over the **Mounting Screws** and secure with **Mounting Balls**. Hand-tighten until snug.

6. Connect the wires as shown. **a.** Connect the House Ground Wire to the Fixture Ground Wire.

b. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).

c. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).

d. Wrap each connection with approved electrical tape and carefully stuff all of the connected wires into the Outlet Box.

7. Place the **Glass Shade** carefully. Thread the **Metal Sleeve** onto the **Socket**. Then use **Plastic Wrench** to lock the **Socket Collar** to secure the **Glass Shade**. Hand tighten until snug.

8. Install the **Edison Bulb** (Included) into the **Socket** until snug.

Your installation is completed now. Restore electricity

