




 

UTTERMOST

ASSEMBLY AND INSTALLATION INSTRUCTIONS

STYLE# **22186**

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
 2. Be sure the power to the installation point is power off, and please follow the below three steps to assembly:
Step one: turn out the swivel socket and put the glass shade onto the socket.
Step two: turn the glass shade in the right position
Step three, Please follow up the steps as below:
 3. Adjust the length of wire needed for your installation, remove excess. Determine the number of **Rods** to be assembled to the **Fixture Body** according to your hanging height. Pass the Supply Wires with Ground Wire through the closed **Rods** and **Swivel**. Thread the **Rods** to connect **Nipple**. Hand tighten until snug.
 4. Pass the supply wires through the **Universal Bar** assembly, Secure the **Universal Bar** to the **Outlet Box with Outlet Box Screw**
 5. Place the **Ceiling Canopy** over the **Mounting Screws** and secure with **Mounting Balls**. Hand-tighten until snug.
 6. Connect the wires as shown.
 - a. Connect the House Ground Wire to the Fixture Ground Wire.
 - b. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).
 - c. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).
 - d. Wrap each connection with approved electrical tape and carefully stuff all of the connected wires into the Outlet Box.
 7. Thread the **Metal Sleeve** onto the **Socket**. Then use **Plastic Wrench** to lock the **Socket Collar** to secure the **Glass Shade**. Hand tighten until snug.
 8. Install the **Edison Bulb** (Included) into the **Socket** until snug.
- Your installation is completed now. Restore electricity.**

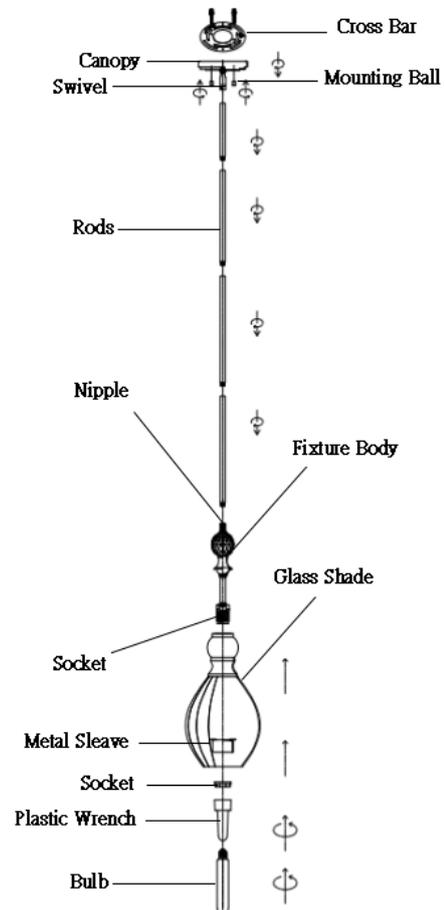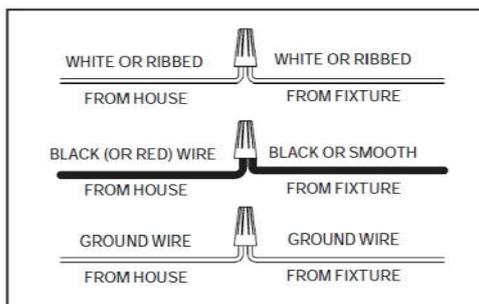

22186