


ASSEMBLY INSTRUCTION

JSFC

5242-3NS
3 DRAWER NIGHTSTAND


SKU 32552425

Thank you for purchasing this quality product . Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment . Identify and count all parts and compare with the parts list below.

	NO.	Picture	Description	Q'TY
HARDWARE LIST	1		Tipping Restraint (customer assembly required)	1 set
	2		Tool Required (not provided).	

	NO.	Description	Sketch	Q'TY
COMPONENT LIST	A	3 Drawer Night stand		1 pc

FRONT

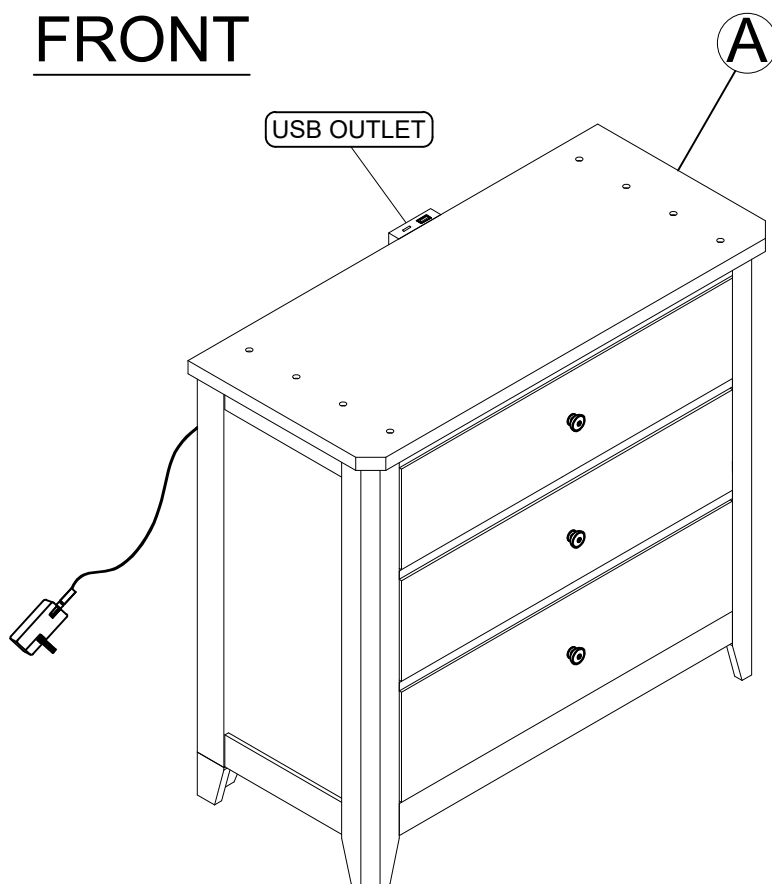

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

Hardware pack locations

5242-3NS 3 DRAWER NIGHTSTAND
SKU #32552425

PARTS DETAILS

This product is manufactured by **JSFC** for **ROOMS TO GO®**

ASSEMBLY INSTRUCTION

JSFC

5242-3NS
3 DRAWER NIGHTSTAND


SKU 32552425

ASSEMBLY STEP

Step 1

Attach the anti-tipping kit to the wall.

Remark: anti-tip hardware must be installed by customer.

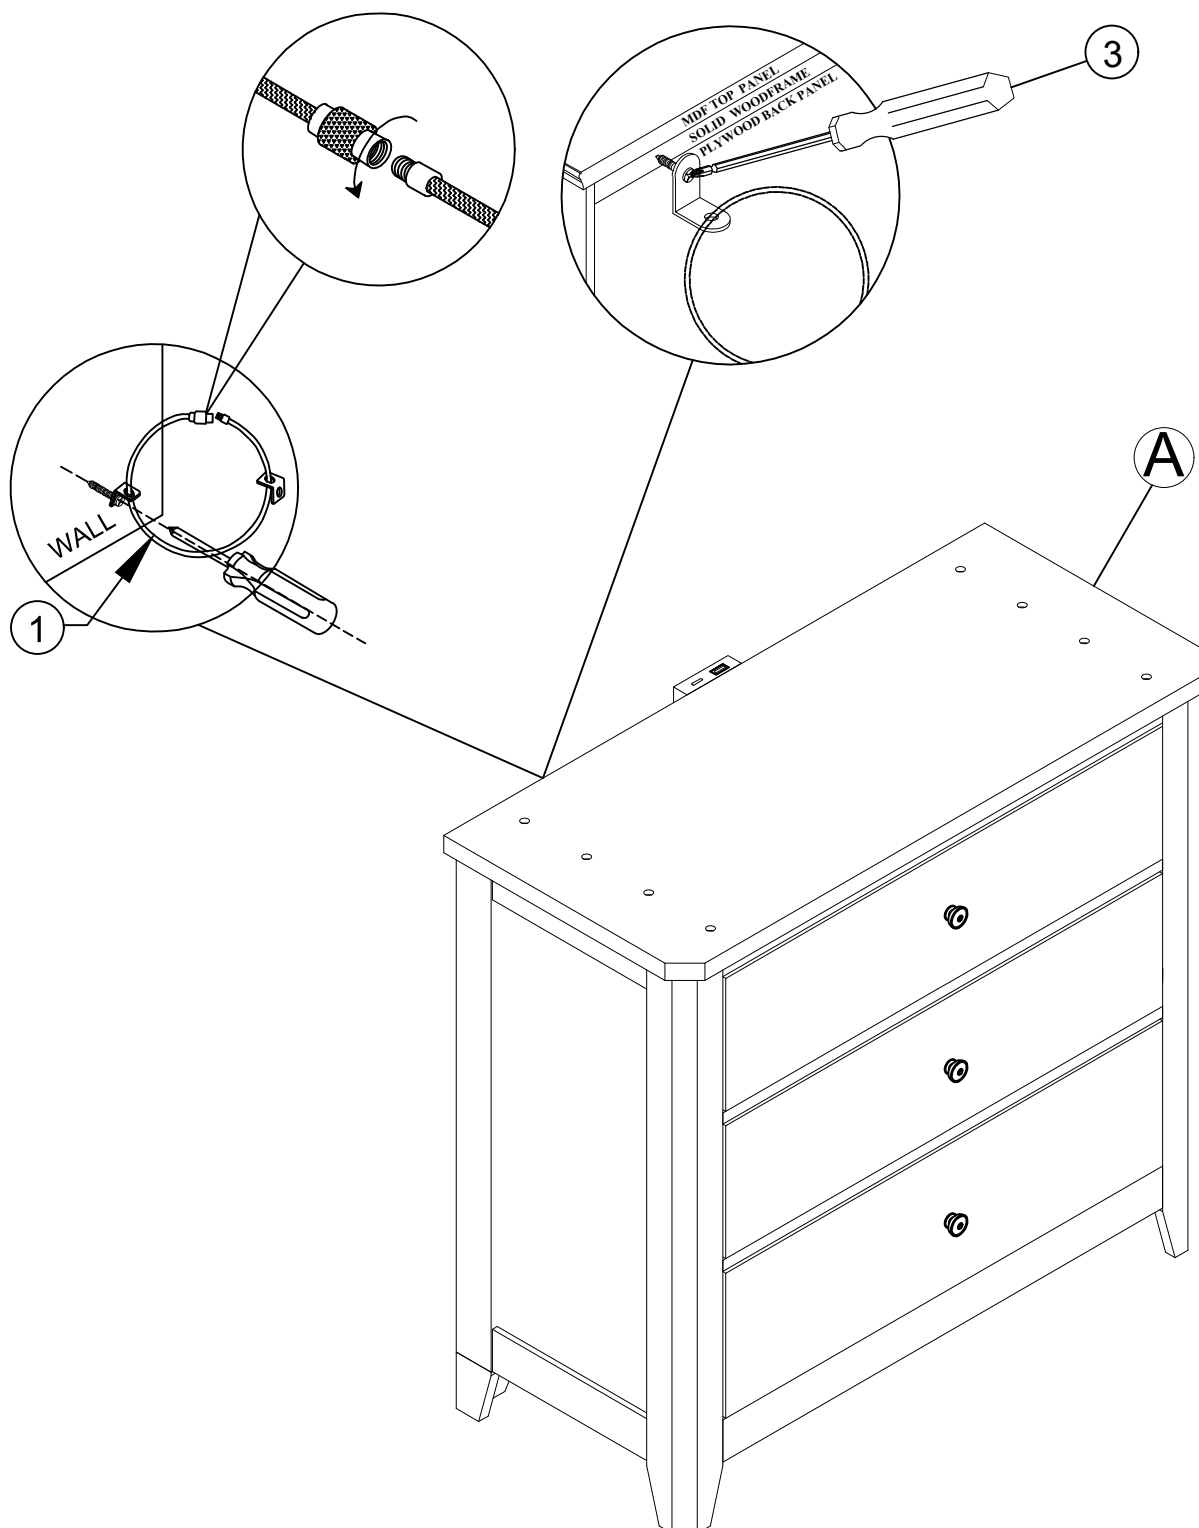

This product is manufactured by **JSFC** for **ROOMS TO GO®**

IMPORTANT SAFETY INSTRUCTIONS



WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

INPUT: 100-240V-50/60Hz 0.3A

OUTPUT: 5V/2.1A

DONGGUAN GUANQING ELECTRONICS CO.,LTD.

MODEL: GEO101U-050210U

Read all instructions before using this furnishing.

DANGER - To reduce the risk of electric shock:

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

- Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- Do not strain or stretch electrical cord.
- Do not use extension cords or power strips.
- Keep out of reach of children. This is not a toy.
- Plug directly into a compatible electrical socket.
- Do not modify the plug or use any adapters.

INSTRUCCIONES DE SEGURIDAD IMPORTANTES



WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

INPUT: 100-240V-50/60Hz 0.3A

OUTPUT: 5V/2.1A

DONGGUAN GUANQING ELECTRONICS CO.,LTD.

MODEL: GEO101U-050210U

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO - Para reducir el riesgo de descarga eléctrica:

- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilizar cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete.
- Enchúfelo directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.

Entretien pour vos meubles

Protégez votre investissement

L'entretien de vos meubles joue un rôle important pour ce qui est de protéger votre investissement dans les meubles de qualité. Les meubles bien entretenus peuvent durer pendant des générations toute en conservant leur finition.

L'entretien des meubles

L'entretien de vos meubles -c'est facile. Il suffit de suivre quelques simples directives pour prolonger la vie de vos meubles.

- N'elpoussetezjamais à sec.Époussetez toujours avec un ehiffon humidifié du poli. Le poli amortit le tissu, éliminant les éraflures qui se produisent avec le dépoussiérage sec.Si non enlevée rapidement, la poussière rayera vos meubles. Employez une lingette propre et mou qui ne rayera pasla surface. Évitez les matériaux ou les tissus bruts ou stridents.
- Évitez 'employer le savon et l'eau sur les meubles. L'eau peut pénétrer la surface et décolle les plaques de bois, endommagent la finition.

Protéger vos meubles

Les dommages les plus courants dans le cas des meubles sont provoqués par les éléments. Si vous vous rendez compte de ces fauteurs, les donimages résultants peuvent facilement être évités.

- Les rayons ultraviolets de la lumière du soleil peuvent endommager les finitions du bois. Arrangez vos meubles de sorte qu'ils ne sont pas exposés à la lumière directe du soleil. Protégez les meubles contre lé rayons du soleil en utilisant des drapes protége-soleil pendant les heures intenses de lumière du soleil, En outre,changez vos meubles de place de temps à autre.
- Enlever immédiatement les liquides renversés car peuvent causer des dommages à vos meubles. Utilisez des sous-verreset des soucoupes de boisson sous des tasses et des pofs de fleurs. Si une flaque se produit, épongez immédiatement et doucement sans frotter la surface La chaleur crée un changement chimique dans la finition de meubles, qui peut produire comme conséquence une fache blanche.UJtilisez les nattes protectrices sous les plats chauds, ustensiles ou des appareils de cuisine.
- Les extrêmes de température peuvent endommager des meubles. Ne Placer pas vos meubles près des radiateurs de chauffage central et des conduits d'air devrait être évité parce que ceci cause le séchage locallsé extrême du bois.

Meilleurs rélsultats d'époussetage

- Soyez sur d'employer le même type de poli uniformément. Vos meubles sembleront mat et rayés si les polis a based'huile et a base de cire sont interchangeables.
- Employez toujours un poli de meubles de qualité. Pour éviter dommageà vos meubles, sur la surface. N'oubliez pas de changer votre lingette dépoussiérants fréquemment puisqu'une lingette sale peut rayer la surface de vos meubles.
- Vaporisez sur la surface du meuble également mais pas trop généreusement. Utilisez un chiffon doux et faites des mouvements cireulares pour enlever la saleté et l'ancienne couche de poli.
- Pour le bel éclat polissezjusqu'à ce que le poli soit complètement sec. Pour la garmitureen bois, vaporisez d'abord sur la lingette puis polissez.

CARING FOR YOUR FURNITURE

Protect your investment

- The beauty of furniture care is that it helps to protect your investment, as fine furniture is an important purchase
- Proper care will help maintain your furniture's finish and ensure that it looks great year after year

• Caring for furniture

- Caring furniture is easy. Following a few simple guidelines will help extend the life of your furniture
- Always dust with a cloth moistened with polish. Polish cushions the cloth, eliminating the scratching that occurs with dry dusting. Dust will scratch furniture if not removed quickly. Use a soft clean cloth that won't scratch the surface. Avoid coarse or scratchy materials or fabrics
- Avoid using soap and water on furniture. Water can penetrate the finish and raise the grain on wood that cause damage to furniture

• The Enemies Of Furniture

- Many common problems in furniture care are caused by the elements. If you are aware of these trouble makers the resulting damage can easily be avoided
- Sunlight's ultraviolet rays can damage wood finishes. Arrange furniture out of direct sunlight use sun screening intense sunlight hours rotate furniture in place and room arrangement
- Liquid spills will damage furniture if not removed promptly. Use coasters under beverage glasses and saucers under cups and flowerpots. If a spill occurs. Immediately blot it gently without rubbing the surface
- Heat creates a chemical change in the furniture finish. Which can result in a white spot. Use protective mats under hot dishes, utensils or cooking appliances
- Cyclic changes in temperature can damage furniture. Placing furniture near to central heating radiator and air duct should be avoided because this causes extreme localized drying of the wood

• Tips For Better Dusting

- Be sure to use the same type of polish consistently. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchange
- Always use a fine furniture polish when dusting. Never dry dust as it could cause scratches on your furniture's surface. Remember to change dusting cloths frequently since a dirty cloth may scratch your furniture's surface
- Spray your furniture surface evenly but not too generously. Wipe in a circular motion with a soft clean cloth
- Then buff until completely dry for a beautiful shine and smudge free finish. For wood trim spray polish on the cloth first then dust