

TABLE LAMP - 90152489

Assembly Instructions

Manufactured by JAMO for Rooms to Go

Important Safety Instructions:

- This portable luminaire has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug. Do not attempt to defeat this safety feature.
- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
- This fixture has been rated for up to one (1) **150-watt maximum 3 WAY TYPE A standard incandescent light bulb (not included)**. To avoid the risk of fire, do not exceed the recommended wattage.
- This lamp is meant for indoor use.
- **Save these instructions.**

WARNING:

- **To reduce the risk of fire, electrical shock or personal injury, always turn off and unplug the light fixture and allow it to cool prior to replacing the light bulb.**
- **Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.**
- **Keep flammable materials away from lit bulb.**

Pre-assembly:


- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts Included:

- (1) Finial (A)
- (2) Harp (B)
- (3) Harp Top (C)
- (4) Socket (D)
- (5) Saddle (E)
- (6) Lamp Base (F)
- (7) Shade (G)

To Assemble:

1. Raise the Harp Caps and insert bottom ends of Harp (B) into the Saddle (E) and lower the Harp Caps until they cover the two-pronged Saddle (E).
2. Unscrew the Finial (A) from the Harp Top (C). Place the Shade (G) over the assembled Harp (B), making sure the Harp Top (C) extends through the hole at the top of the Shade (G).
3. Attach the Finial (A) onto the Harp Top (C) and tighten to secure the Shade (G).
4. Insert one (1) **150-watt maximum 3 WAY TYPE A standard incandescent light bulb (not included)** into the Socket (D). **DO NOT EXCEED THE SPECIFIED WATTAGE.**
5. Plug fixture into the proper electrical outlet and test fixture.
6. Assembly is complete.

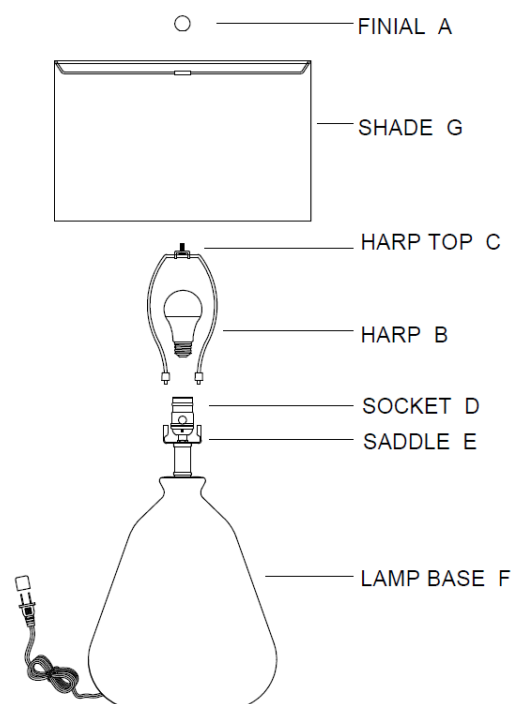

Care instructions:

- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish

LÁMPARA DE MESA - 90152489

Instrucciones de montaje

Fabricado por JAMO para Rooms to Go

Instrucciones de seguridad importantes:

- Esta luminaria portátil tiene un enchufe polarizado (una clavija es más ancha que la otra) como medida de seguridad para reducir el riesgo de descarga eléctrica. Este enchufe sólo encaja en una toma polarizada. Si el enchufe no encaja completamente en la toma de corriente, inviértalo. Si sigue sin encajar, póngase en contacto con un electricista cualificado. No lo utilice nunca con un alargador a menos que el enchufe pueda insertarse completamente. No modifique el enchufe. No intente anular este dispositivo de seguridad.
- Estas instrucciones se proporcionan para su seguridad. Es muy importante que las lea detenida y completamente antes de comenzar el montaje y la instalación de esta luminaria.
- Esta luminaria está preparada para una **(1) bombilla incandescente estándar TIPO A de 3 VÍAS de 150 vatios como máximo (no incluida)**. Para evitar el riesgo de incendio, no exceda la potencia recomendada. Esta lámpara está pensada para uso en interiores.
- **Guarde estas instrucciones.**

ADVERTENCIA:

- **Para reducir el riesgo de incendio, descarga eléctrica o lesiones personales, apague y desenchufe siempre la lámpara y deje que se enfríe antes de cambiar la bombilla.**
- **No toque la bombilla cuando el aparato esté encendido. No mire directamente a la bombilla encendida.**
- **Mantenga los materiales inflamables alejados de la bombilla encendida.**

Premontaje:


- Retire todas las piezas y herrajes de la caja junto con cualquier embalaje protector de plástico.
- No deseche ningún contenido hasta que haya finalizado el montaje para evitar desechar accidentalmente piezas pequeñas o herrajes.

Piezas incluidas:

- (1) Remate (A)
- (2) Arpa (B)
- (3) Tapa de arpa (C)
- (4) Enchufe (D)
- (5) Sillín (E)
- (6) Base de la lámpara (F)
- (7) Sombra (G)

Para montar:

1. Suba las tapas del arpa e inserte los extremos inferiores del arpa (B) en la montura (E) y baje las tapas del arpa hasta que cubran la montura de dos puntas (E).
2. Desenrosque el remate (A) de la parte superior del arpa (C). Coloque la pantalla (G) sobre el arpa montada (B), asegurándose de que la parte superior del arpa (C) se extiende a través del agujero en la parte superior de la pantalla (G).
3. Coloque el remate (A) en la parte superior del arpa (C) y apriételo para fijar la pantalla (G).
4. Inserte una **(1) bombilla incandescente estándar TIPO A de 3 VÍAS de 150 vatios como máximo (no incluida)** en el casquillo (D). **NO EXCEDA EL VATAJE ESPECIFICADO.**
5. Enchufe el aparato a la toma de corriente adecuada y pruébelo.

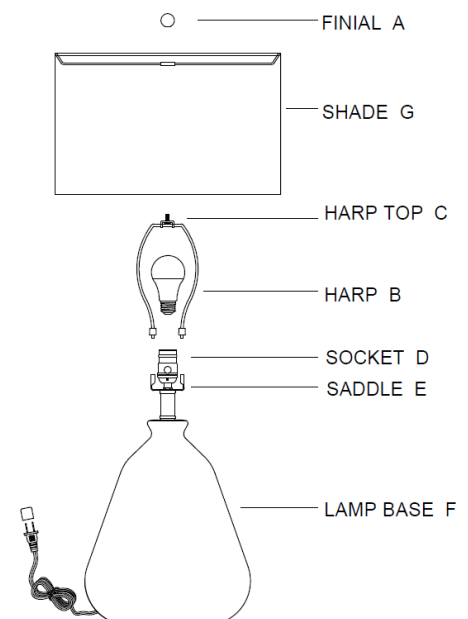

Instrucciones de cuidado:

- Limpiar con un paño suave y seco o un plumero antiestático.
- Evite siempre el uso de productos químicos agresivos o limpiadores abrasivos, ya que pueden dañar el acabado del accesorio.