ROOMS TO GO ▶
Manufactured by NAJA for Rooms To Go

Assembly Instructions

NAJA 1460-NS NIGHTSTAND SKU # 32514603

Version#1 - 2026/03/20

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts,which may have come loose inside the carton during shipment. Identify and count all parts and compare with the HARDWARE LIST below.

Caution: Please read instructions thoroughly before unpacking assembly parts.

1.We recommend that you assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.

2.Please do not over tighten screws or bolts until the assembly is completed.

3.Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

ELECTRICAL SAFETY INSTRUCTIONS


WARNING: DO not use extension cords or surge protectors unless they meet the following requirements:

· Cords must be 3rd party listed and rated for at least 15 amps at 120 V *Third party listing symbol examples*.
· Use the minimum length extension cord possible.
· Check the cord for fraying, cuts, melted areas, or other damage.
· Never plug an extension cord into another extension cord.
· Household outlets should be GFCI protected, otherwise a GFCI protected extension cord should be used.


NO.	PARTS LIST		Q' TY
A		Nightstand	1

NO.	HARDWARE LIST		Q' TY
1		Anti-tipping kit	1
		**The screwdriver is not included**	

Remark
Anti-tipping kit must be installed by customer.
Anti-tipping kit attached to the back panel.

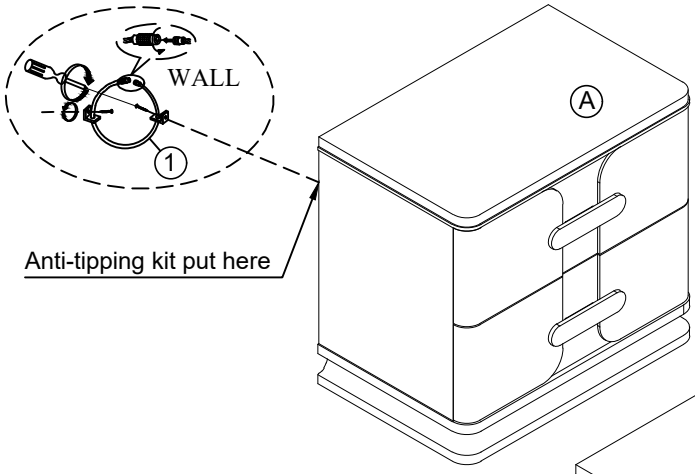

COMPLETE

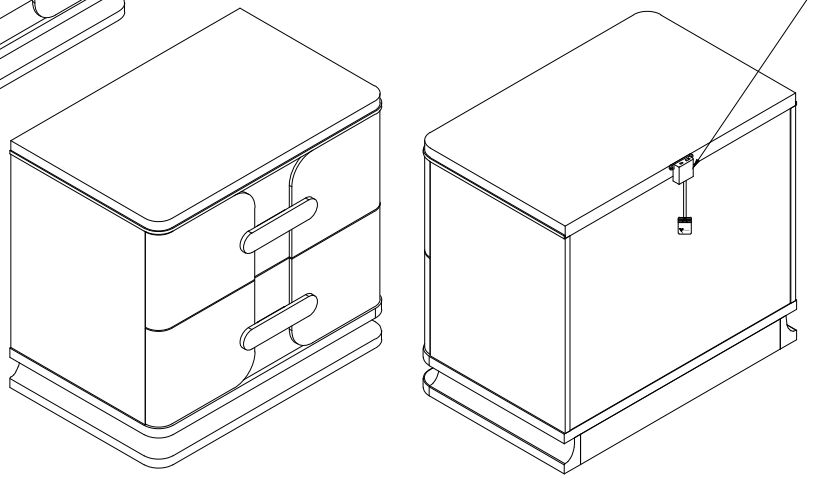

Hardware pack Location(s): NAJA 1460-NS NIGHTSTAND SKU # 32514603

Made in VietNam

IMPORTANT SAFETY INSTRUCTIONS

WARNING

Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

24.0V/2.0A/48.0W

Shenzhen Quanzhengtong Technology Co., Ltd

QZT-2402000

Read all instructions before using this furnishing.

DANGER – To reduce the risk of electric shock:

- Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- Unplug from outlet before putting on or taking off parts.
- Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
- Keep the electrical cord and plug away from heated surfaces and other heat sources.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
- Do not strain or stretch electrical cord.
- Do not use extension cords or power strips.
- Keep out of reach of children. This is not a toy.
- Plug directly into a compatible electrical socket.
- Do not modify the plug or use any adapters.

INSTRUCCIONES DE SEGURIDAD IMPORANTES

WARNING

El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

24.0VDC/2.0A/48.0W

Shenzhen Quanzhengtong Technology Co., Ltd

QZT-2402000

Leer todas las instrucciones antes de usar este mobiliario.

PELIGRO - Para reducir el riesgo de descarga electrica:

- Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo

ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:

- Desenchufe del tomacorriente antes de colocar o quitar partes.
- Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
- Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor
- Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
- Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
- No fuerce ni estire el cable eléctrico.
- No utilizar cables de extensión o tomas de corriente.
- Mantener fuera del alcance de los niños. Esto no es un juguete
- Enchúfelo directamente a una toma de corriente compatible.
- No modifique el enchufe ni utilice adaptadores.

CARING FOR YOUR FURNITURE

Protect your investment

The beauty of furniture care is that it helps to protect your investment, as fine furniture is animportant purchase.Proper care will help maintain your furniture's finish and ensure that is looks great year after
year.

Caring for furniture

Caring for furniture is easy. Following a few simple guidelines will help extend the life of your furniture.

- Always dust with a cloth moistened with polish. Polish cushions the cloth, eliminating the scratching that occurs with dry dusting. Dust will scratch furniture if not removed quickly.Use a soft clean cloth that won't scratch the surface. Avoid coarse or scratchy materials or fabrics.

- Avoid using soap and water on furniture. Water can penetrate the finish and raise the grainon wood. Causing damage.

The Enemies of Furniture

Many common problems in furniture care are caused by the elements. If you are aware of these troublemakers, the resulting damage can easily be avoided.

- Sunlight's ultraviolet rays can damage wood finishes. Arrange furniture our of direct sunlightuse sun screening drapes during intense sunlight hours, rotate furniture in place and room arrangement.

- Liquid spills will damage furniture if not removed promptly. Use coasters under beverage glassesand saucers under cups and flowerpots. If a spill occurs, immediately blot it gently without rubbingthe surface.

- Heat creates a chemical change in the furniture finish, which can result in a white spot. Useprotective mats under hot dishes, utensils or cooking appliances.

- Cyclic changes in temperature can damage furniture. Placing furniture near to central heatingradiators and air ducts should be avoided because this causes extreme localized drying of the wood.

Tips for Better Dusting

- Be sure to use the same type of polish consistently. Your furniture will appear cloudy or streakyif oil based or wax based polishes are interchange.

- Always use a fine furniture polish when dusting. Never dry dust, as it could cause microscopicscratches on your furniture's surface. Remember to change dusting cloths frequently since a dirtycloth may scratch your furniture's surface.

- Spray your furniture surface evenly, but not too generously. Wipe in a circular motion with a softclean cloth to clean and loosen old polish.

- Then buff until completely dry for a beautiful shine and a smudge free finish. For wood trimspray polish on the cloth first, then dust.