




# Assembly Instructions BHOD 3660 Group

SKU#'s

10146620	10146644
10946626	10946640
10346624	10346648
10246622	10246646
10446626	10446640
10546628	10546628
10546642	10546642

## LEG ASSEMBLY

**Step 1** - Working on a clean surface, turn the unit on its back with the base facing your work area. Position the leg as shown, approximately 1/4" from outside edges of bottom surface.

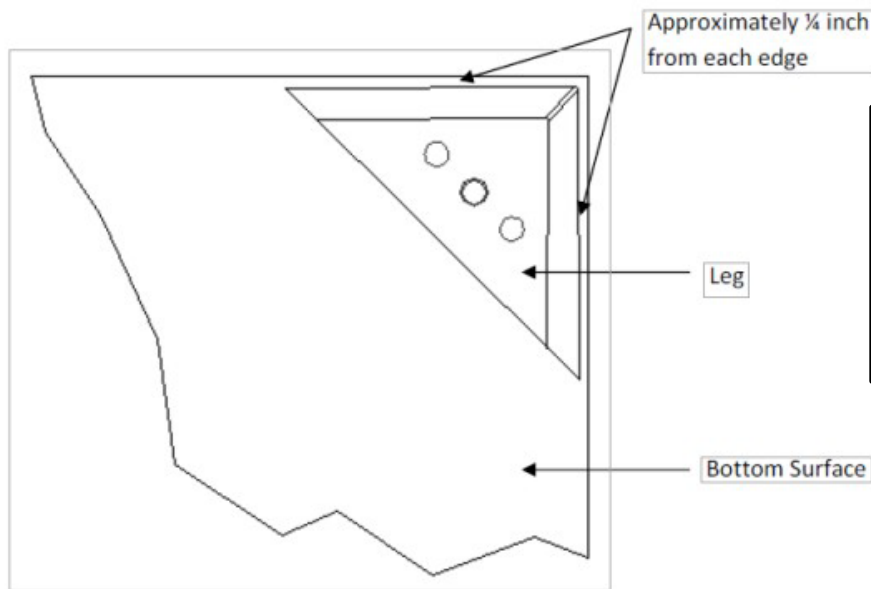

### Parts List:

(A) Tri Leg x 4

(B) 2" Phillips head screw x 8  
(pictured below)


**Tools Required:**

**Phillips Head Screwdriver**

Screws:



**Step 2** - Fasten the leg by inserting (2) - 2 inch screws per leg in the holes provided and screw until the leg is secure.

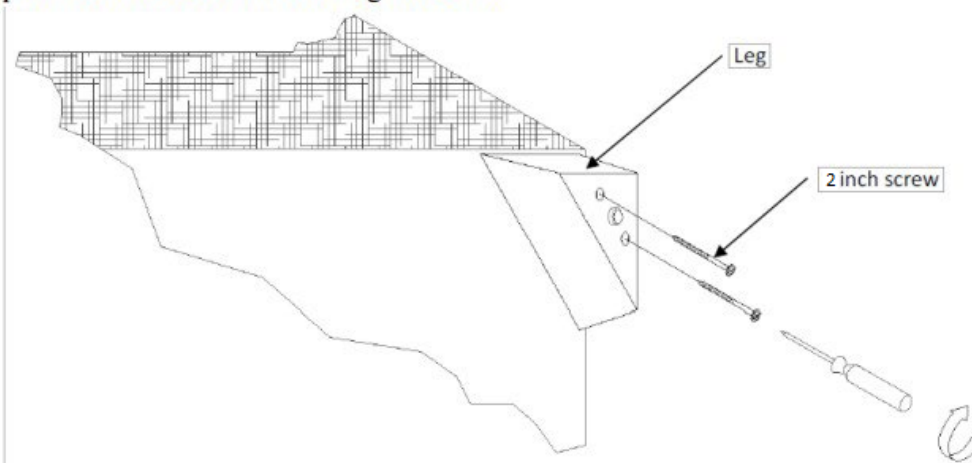

Repeat steps 1 and 2 for the remaining legs. Turn the unit upright and place in the desired location.