

Vendor: SFAM

LEGS ASSEMBLY INSTRUCTIONS

1



BACK WOOD LEG



FRONT WOOD LEG



2


4 WOOD LEGS



INCLUDED


SFM SKU	RTG SKU
6177DP-01	10361690
6177DP-02	10261698
6177DP-03	10161696
6177FM-09	10661696
6177DP-30	10961692

3

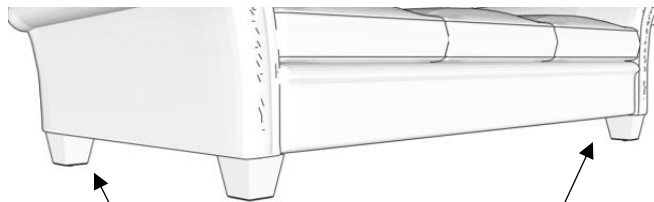

BACK WOOD LEG

FRONT WOOD LEG

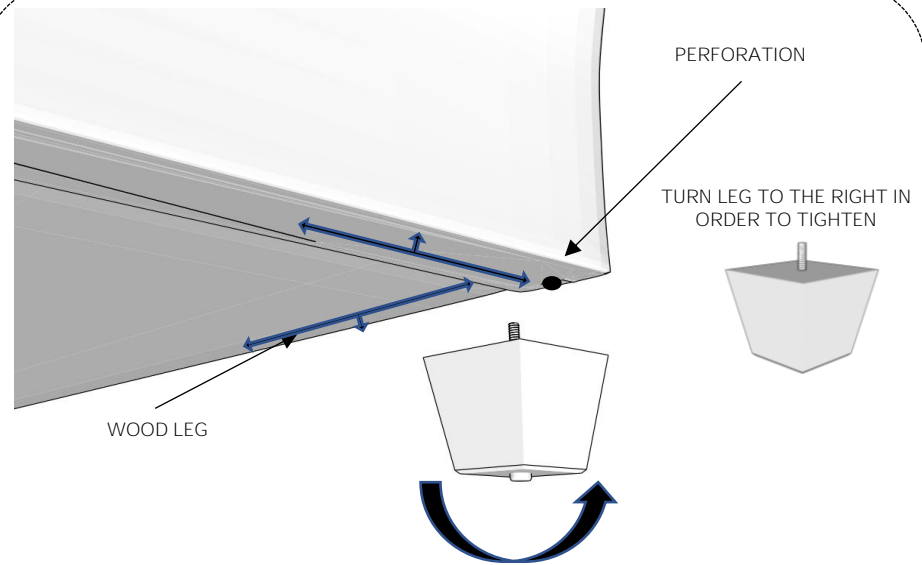

Locate the perforation in the bottom part of frame and insert the bolt of the front wood leg. Turn leg to the right until completely tight. Note. The perforation is in the frame and not in the dust cover so you will have to feel the bottom to find where it is and then insert the bolt.