
ASSEMBLY INSTRUCTION-

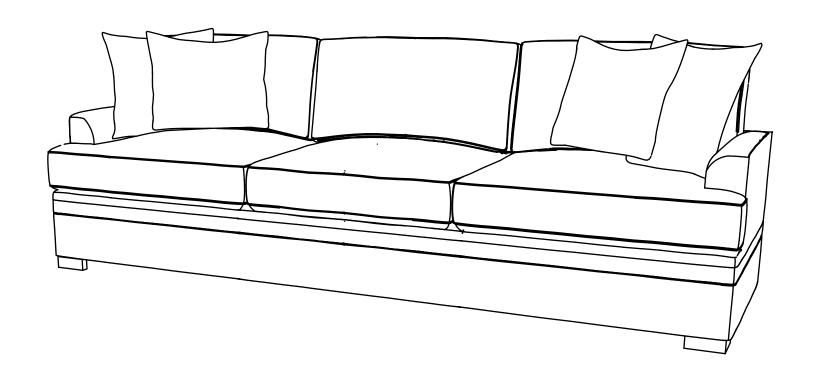

VENDOR CODE: TXNS STOCK#:8170-00 SOFA SKU#:10181713 SKU#:10181725





Part Location




VENDOR CODE: TXNS STOCK#:8170-00 SOFA SKU#:10181713 SKU#:10181725

MANUFACTURED FOR ROOMS TO GO

TOOLS REQUIRED: NO			
PART LIST			
NO	Description	Sketch	Quantity
A	BACK		1
В	SEAT FRAME		1
С	BACK CUSHIONS		3
D	SEAT CUSHIONS		3
E	CORNER FEET		4
F	CENTER LEG		1
G	BOLTS 1/4"-20 x 45MM	1111	16
Н	PILLOWS		4
I	Allen Key 5/32"		1

Seat and back cushions (part C & D) are packed stacked with the back on top (part A).

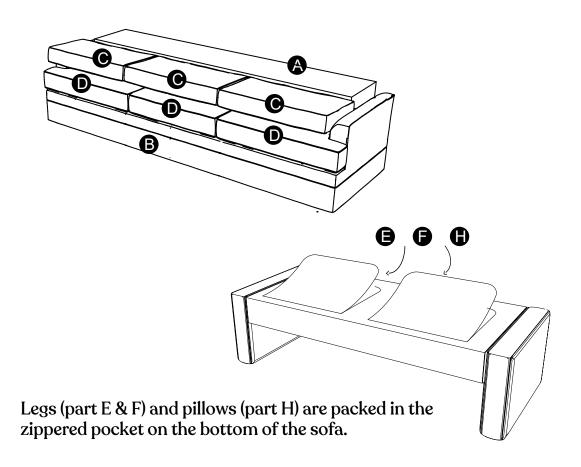




VENDOR CODE: TXNS STOCK#:8170-00 SOFA SKU#:10181713 SKU#:10181725

MANUFACTURED FOR ROOMS TO GO

Step 1 Slide down backrest (part A) in brackets of arms (parts B).

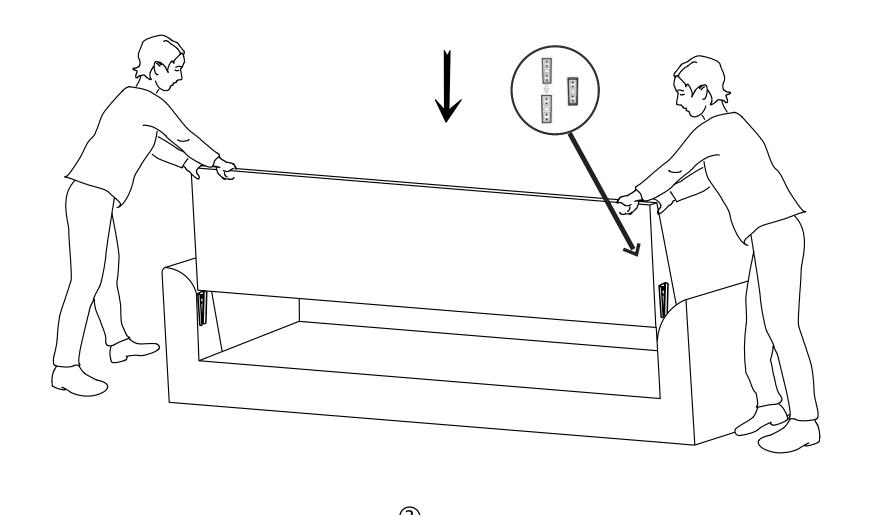


ASSEMBLY



VENDOR CODE: TXNS STOCK#:8170-00 SOFA

SKU#:10181713 SKU#:10181725

MANUFACTURED FOR ROOMS TO GO

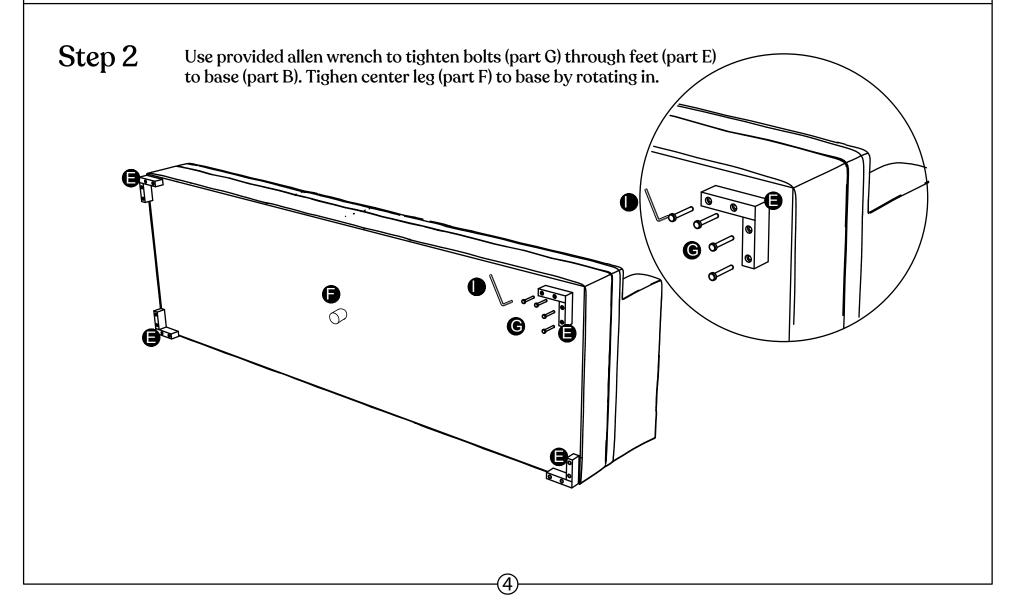

ASSEMBLY




VENDOR CODE: TXNS STOCK#:8170-00 SOFA

SKU#:10181713 SKU#:10181725

MANUFACTURED FOR ROOMS TO GO

Step 3 Add seat cushions (parts D) and back cushions (parts E). Cushions with L shape go on outside. Add throw pillows (parts H) to top of seat cushions (parts D).

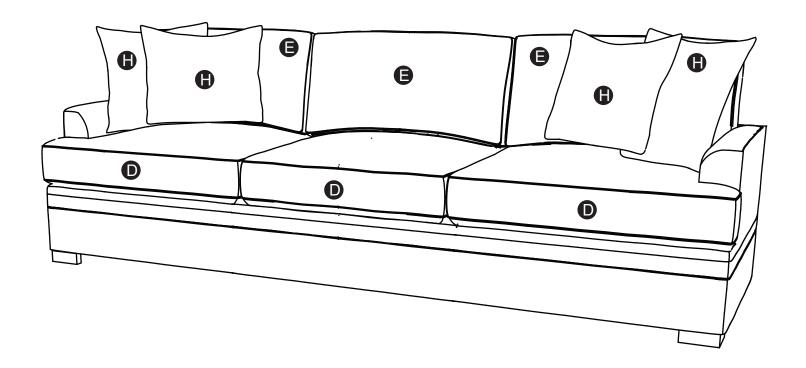

ASSEMBLY



VENDOR CODE: TXNS STOCK#:8170-00 SOFA

SKU#:10181713 SKU#:10181725

MANUFACTURED FOR ROOMS TO GO

Step 5 Secure back flap on back (part A) to seat back (part B) by pushing down and connecting vectro to finish assembly.

