



Assembly Instructions

SKU# DLMF 12147511, 12947517, 12147509, 12947505, 10147076, 10247078, 10147064, 10247066, 10247054, 10147052

Manufactured by DLMF for Rooms To Go

Step	Hardware	QTY
1/2	Form-Molded Leg with Integrated Lag Bolt	4
3	Lag bolt only / No screws	4
	Assembly Instructions	1

1. Remove leg assemblies from red bag. **Figure 1.**
2. Align the leg at the corner of the sofa frame, inset 1/8"–1/4" from the edge. **Figure 2.**
3. Insert lag bolt into T nut and turn clockwise until snug. Shown in **figure 3.**

Figure 1.

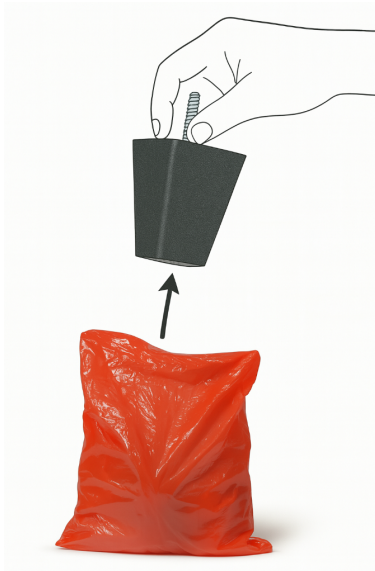


Figure 2.


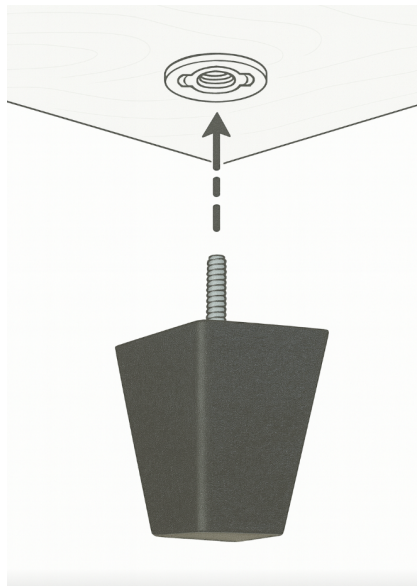


Figure 3.

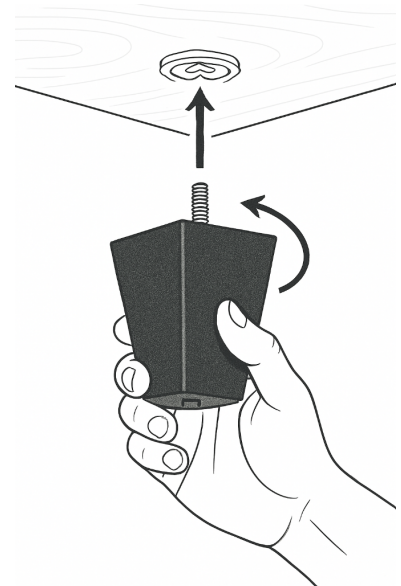

Hardware Pack Location: Behind pillows attached to cushion/pillow tie.